 


ASSEMBLY INSTRUCTION

 
DE - MONTAGEANWEISUNG
FR - INSTRUCTIONS DE MONTAGE
DK - MONTAGEVEJLEDNING
CZ - NÁVOD K MONTÁŽI
ES - INSTRUCCIONES DE MONTAJE
FI - ASENNUSOHJE

HR - UPUTE ZA MONTAŽU
SE - MONTERINGSANVISNING
SI - NAVODILA ZA MONTAŽO
TR - MONTAJ TALIMATI
NO - MONTASJEANVISNING
IT - ISTRUZIONI DI MONTAGGIO

GR - ΟΔΗΓΙΑ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ
NL - MONTAGE INSTRUCTIE
PT - INSTRUÇÕES DE MONTAGEM
PL - INSTRUKCJA MONTAŻU
HU - SZERELÉSI UTASÍTÁS

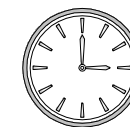

15 min

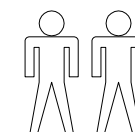

0
1
2
3
4
5
6
7
8
9
10
11
12
13
14
Cm

1

x2

HW-ST-02-021
(6 x 20)

2

x 8

HW-ST-02-290
(8 x 35)

3

x 8

HW-ST-07-062
(8.5x12.5x1.5)

4

x 10

HW-ST-07-044
(Ø8.5 x Ø18 x 1)

5

x 4

HW-ST-04-610
(45 x 45 x 70)

6

x 1

HW-ST-18-001
(4 x 98)

7

x 2

HW-ST-18-007
(13 x 88)

(A) x1

 
SU-TB-AS-0429

(B) x1

C-A-TB-SU-0905

(C) x4


SU-TB-LF-0876

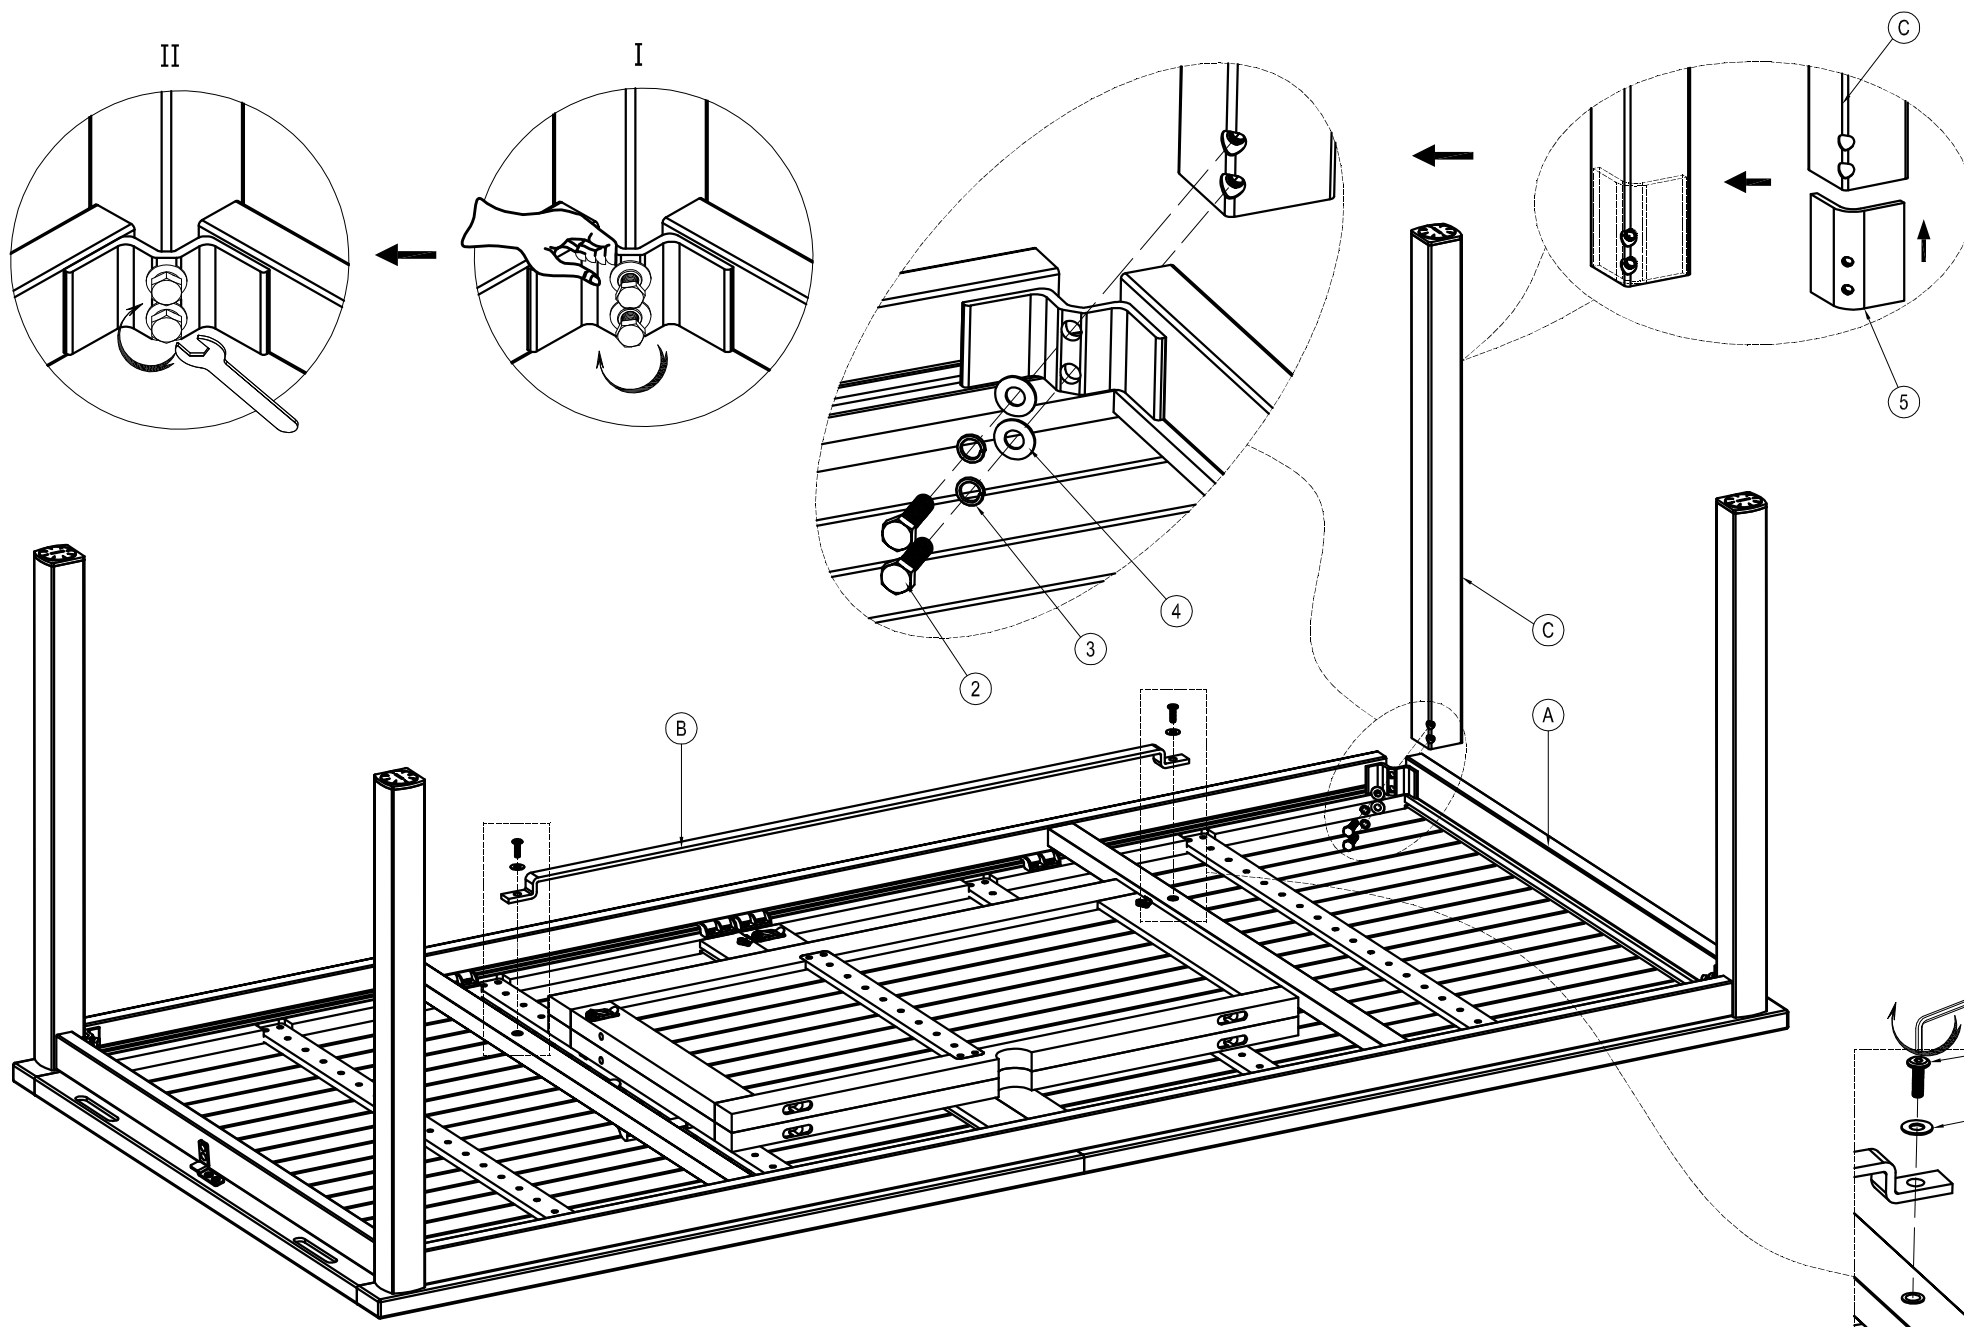


USER MANUAL

Open

 Step 1

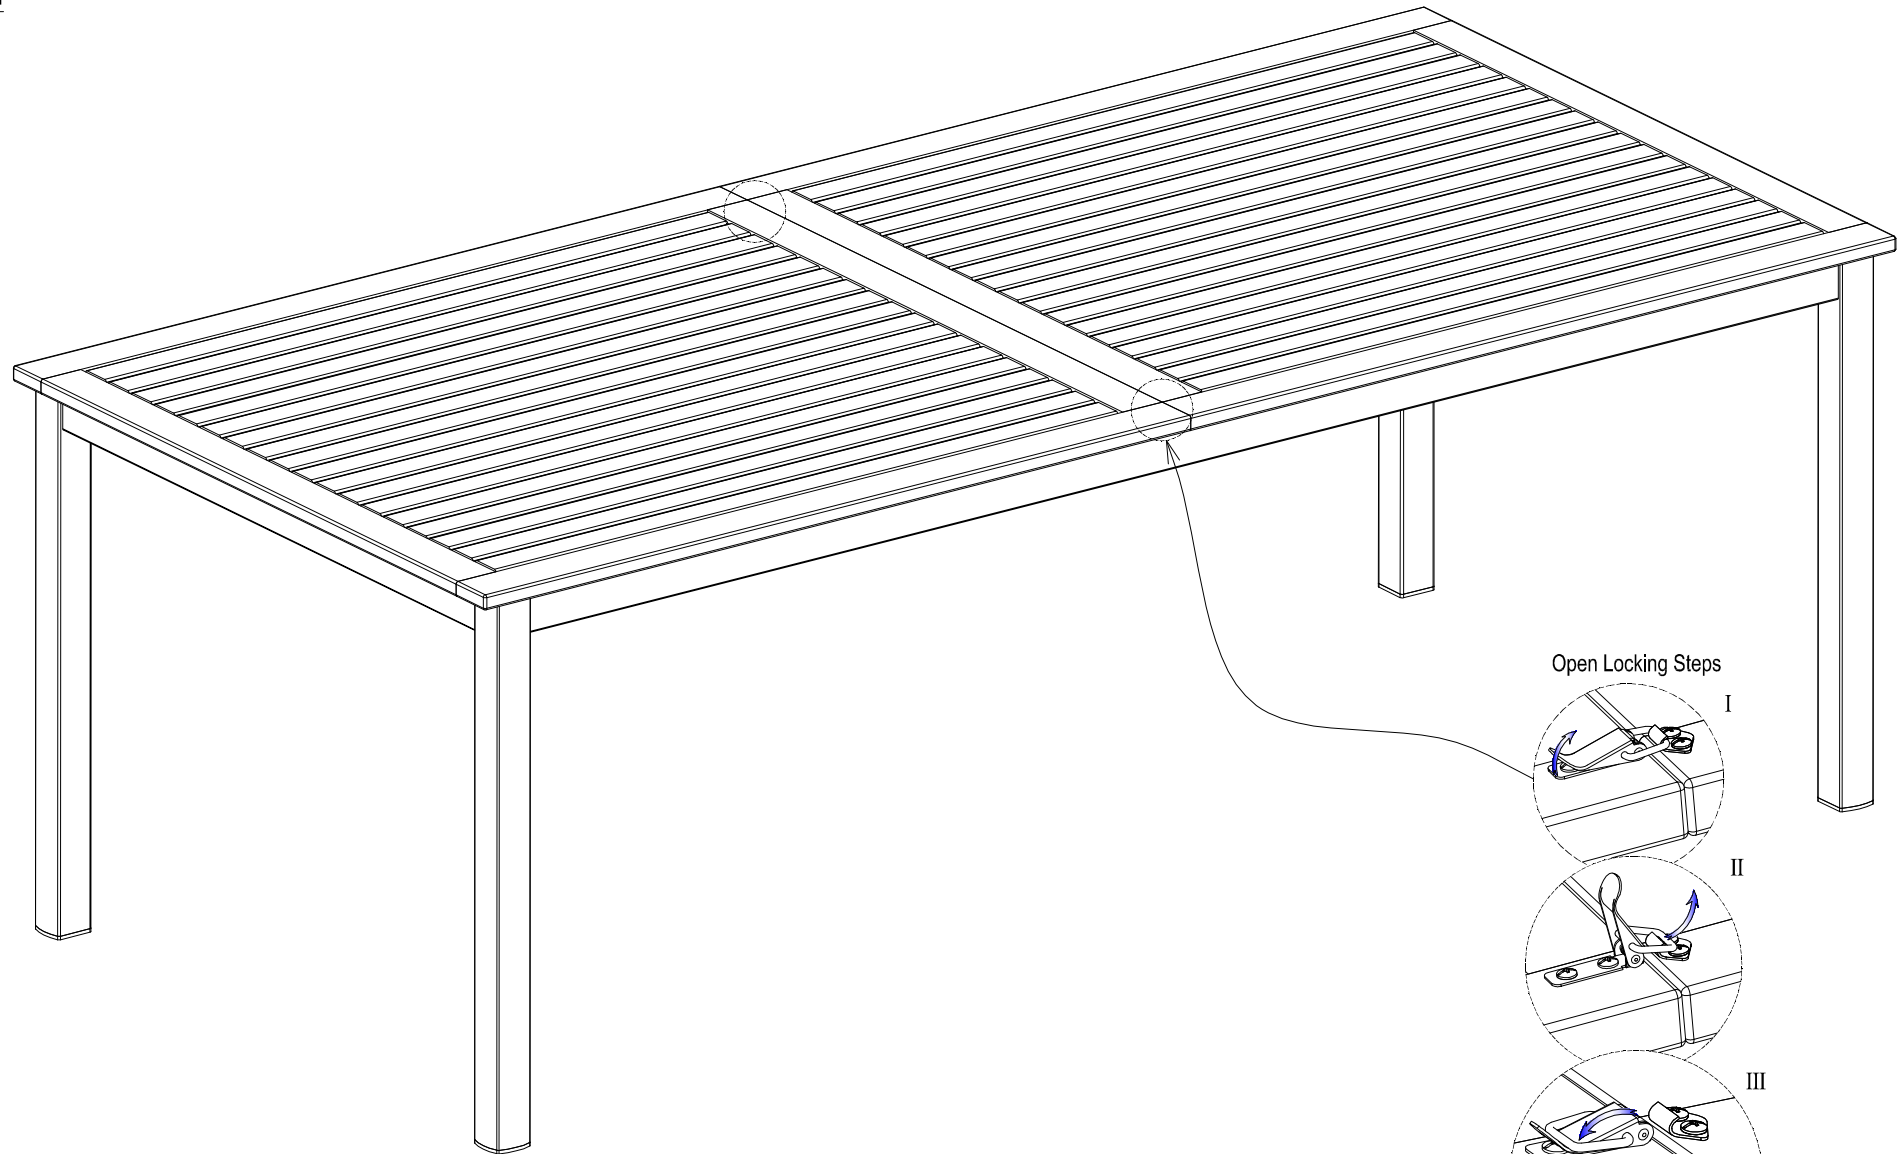


Open Locking Steps

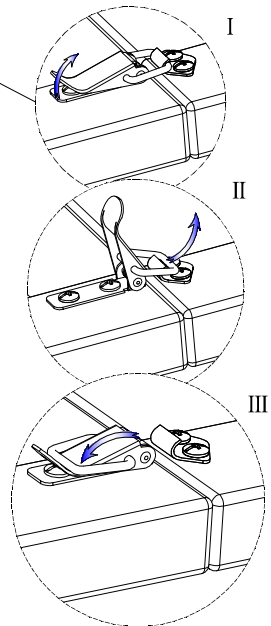 


USER MANUAL

 
Step 2

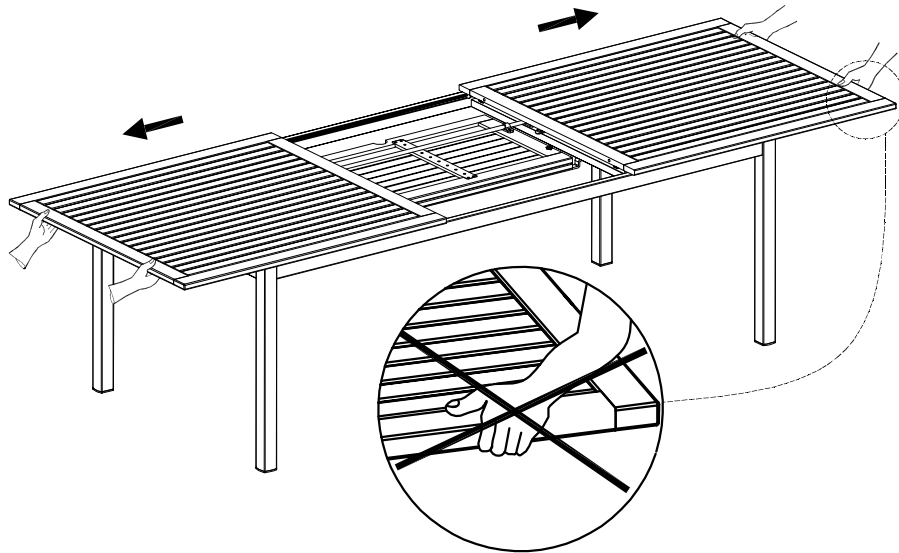

 
Step 3

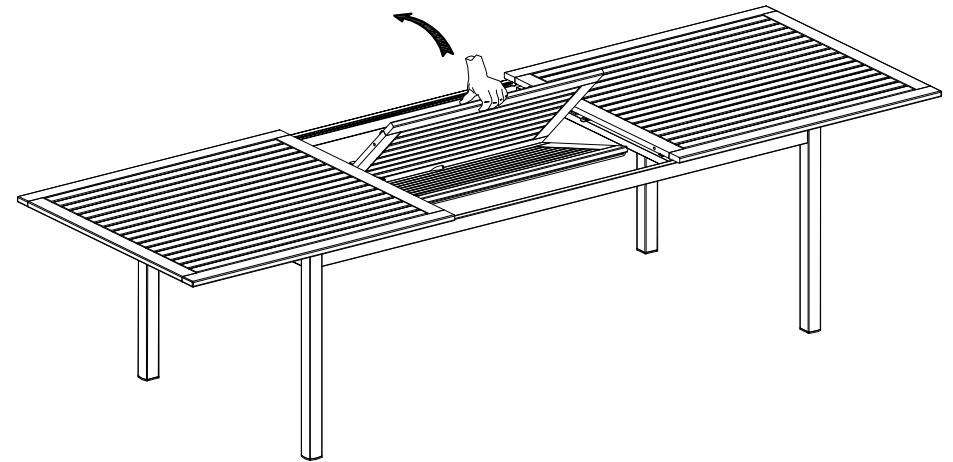

 Step 4

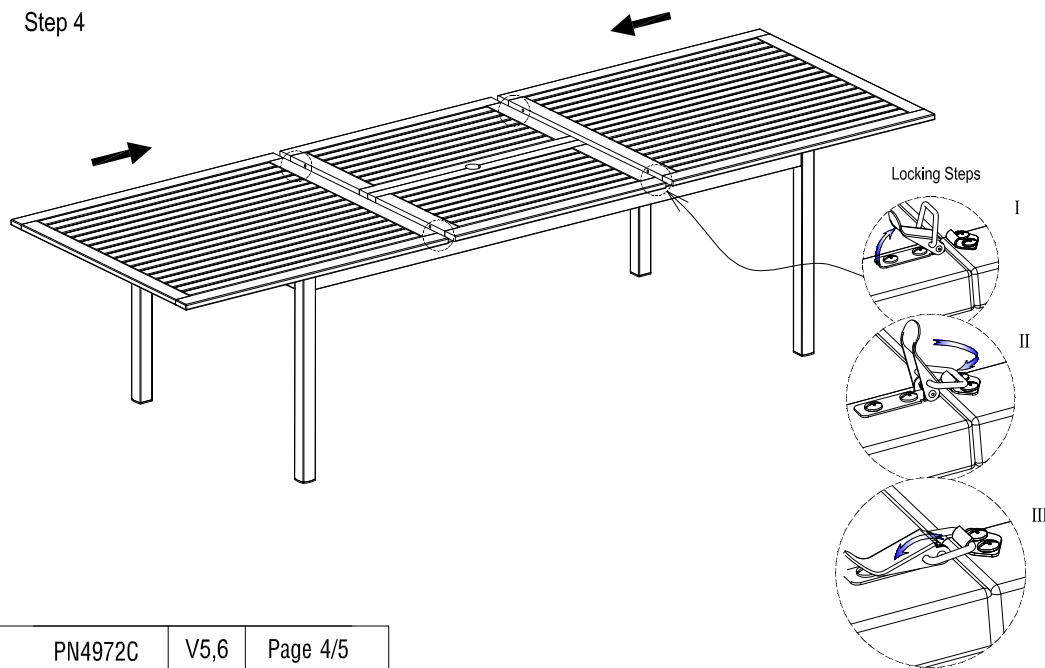

 
Step 5

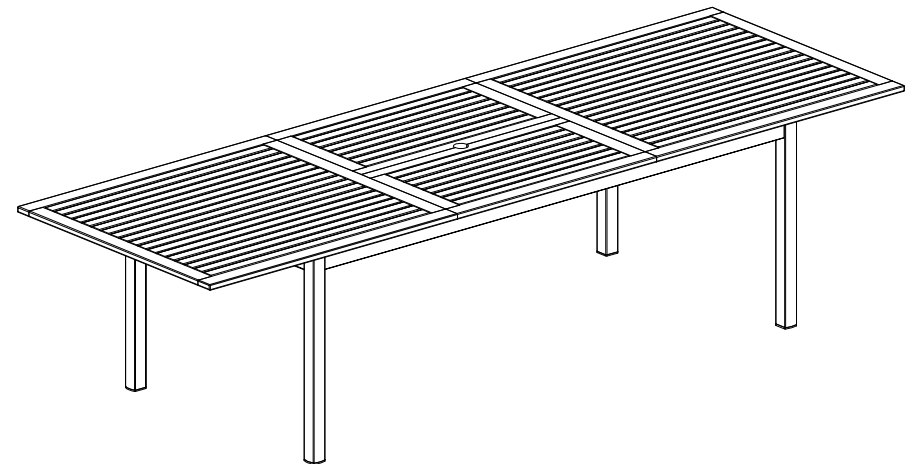


USER MANUAL

Close

 
Step 1

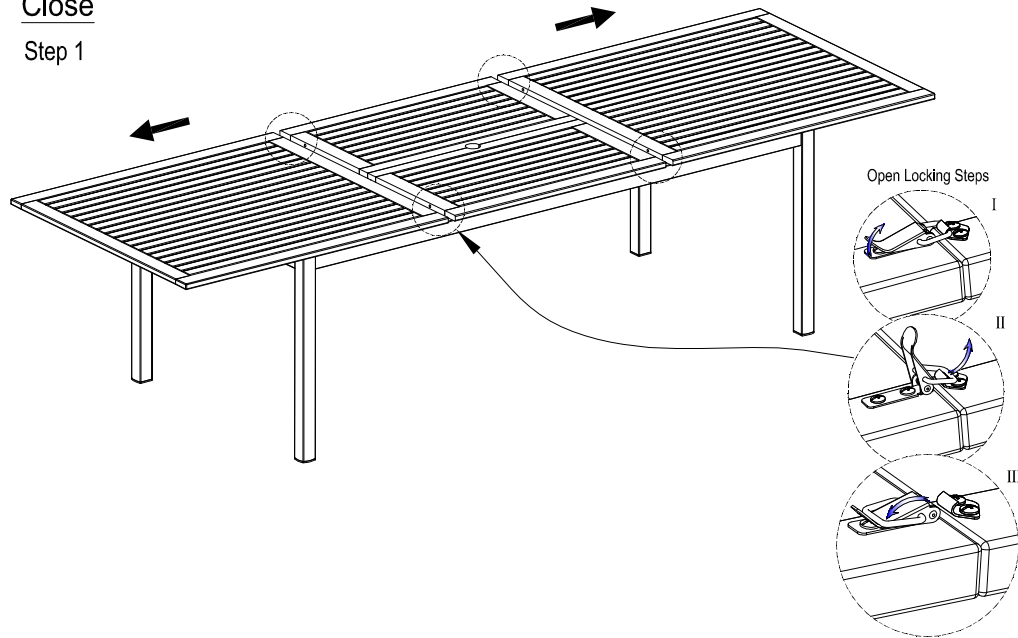

 Step 2

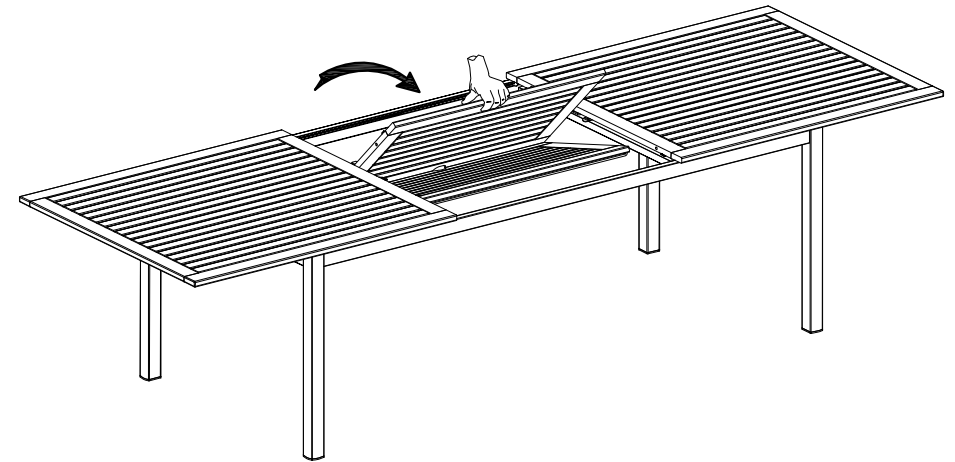

 Step 3

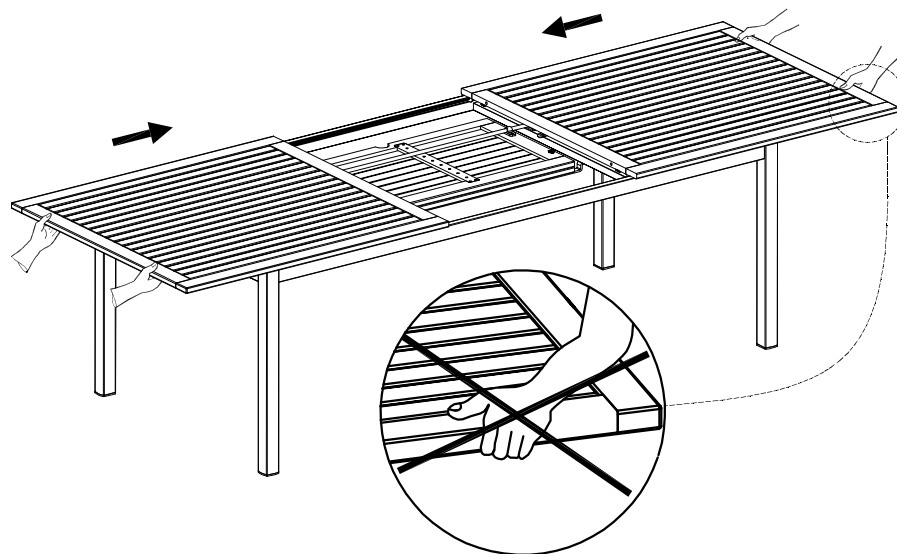

Step 4

