
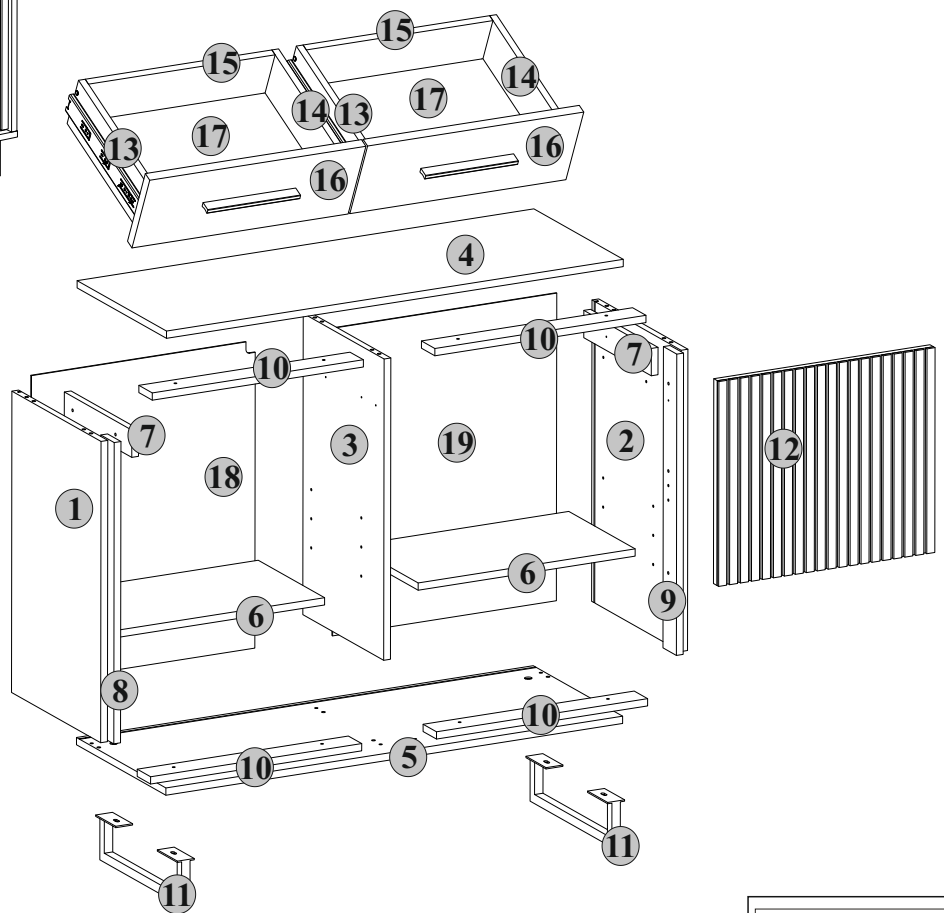
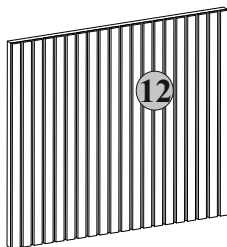
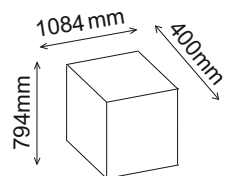

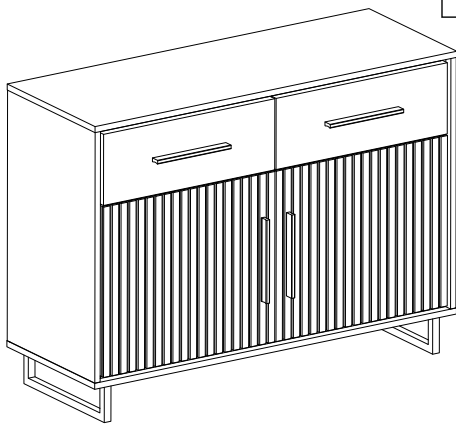



3509

versionsnummer: 16.12.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.




B5

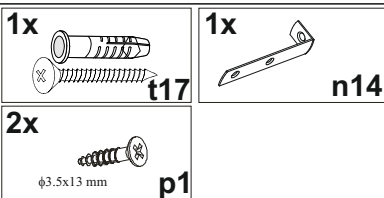


B1

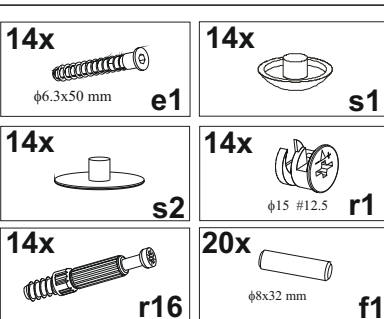



B2

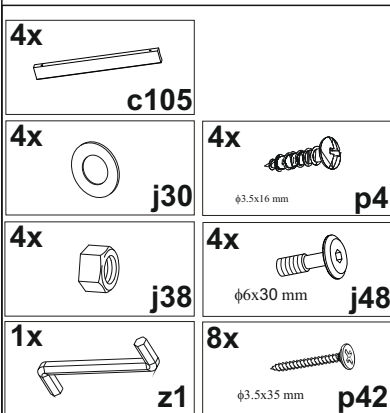


B3

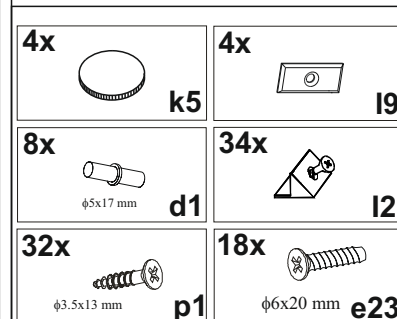

B4

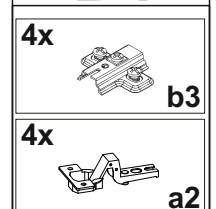

1

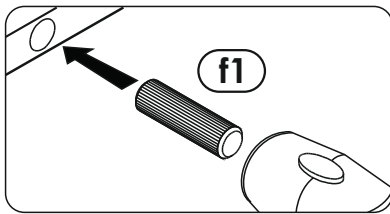





4x

 $\phi 6 \times 20$ mm **e23**

6x




 $\phi 15$ #12.5 **r1**

12x

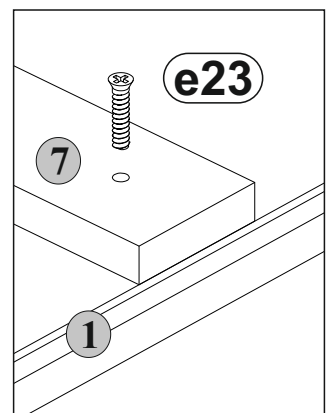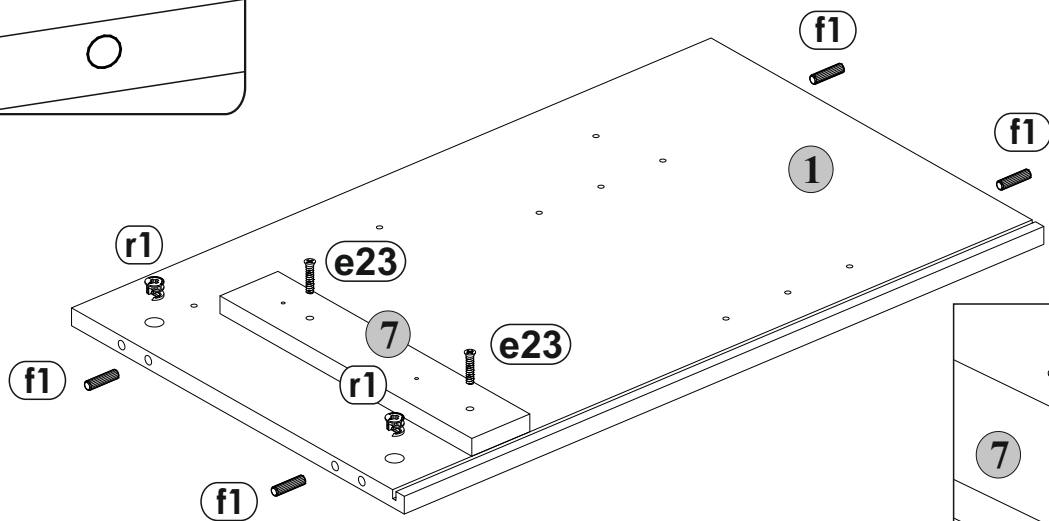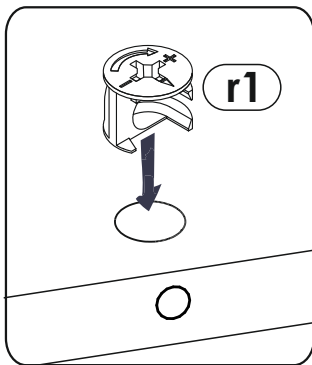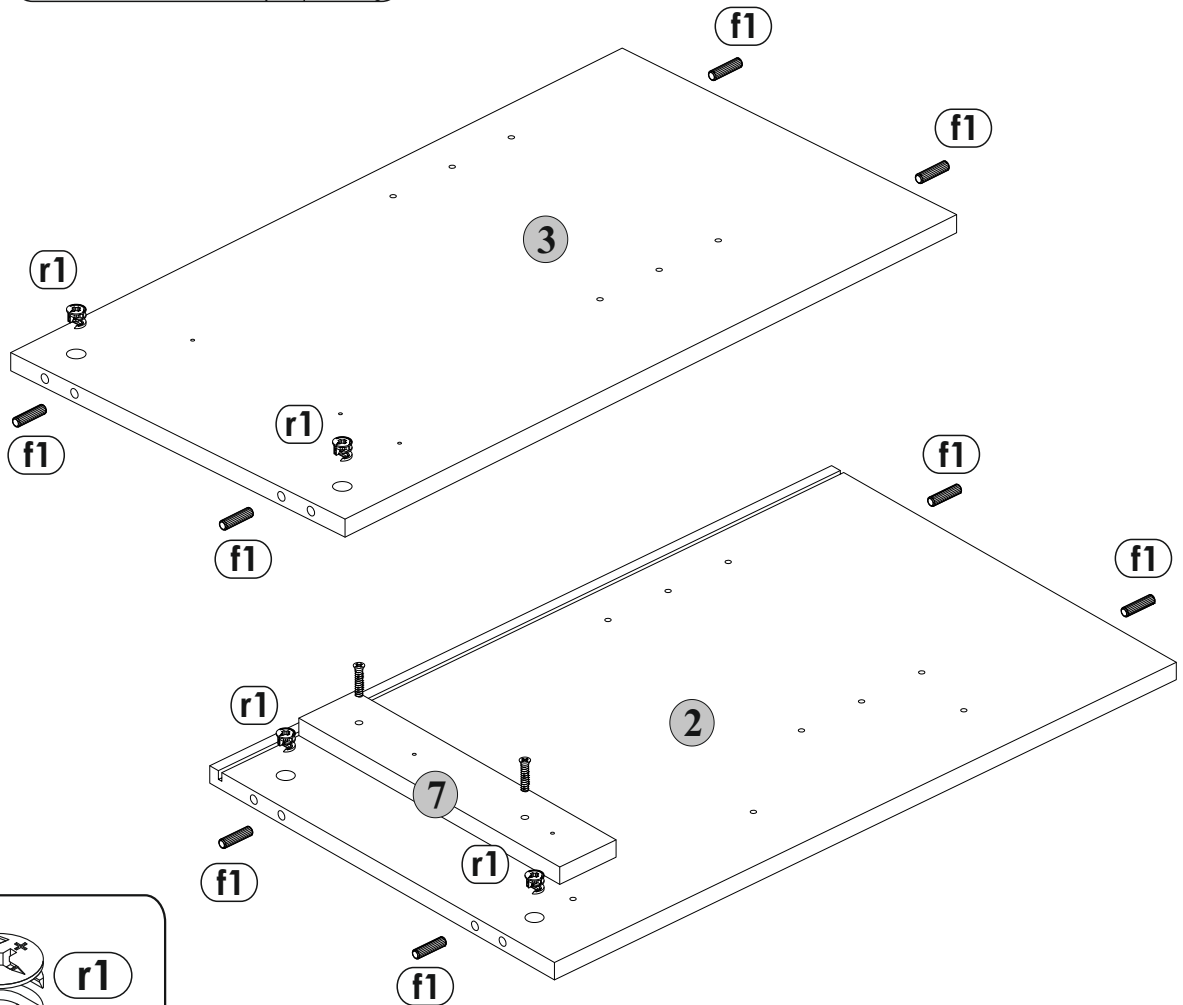



2

2

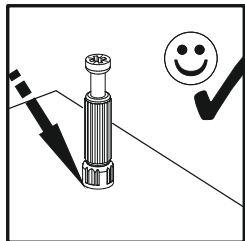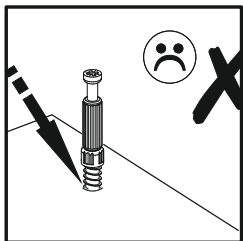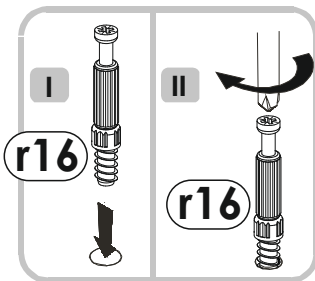

6x
r16

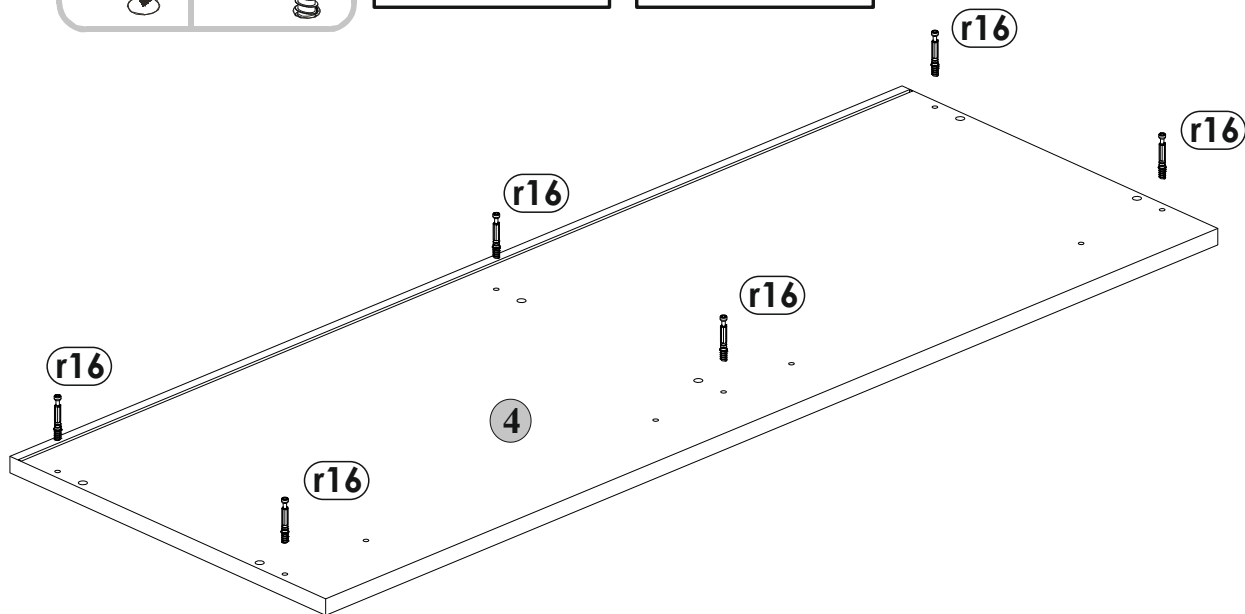


3

4x
j48

4x
j30

4x
j38

4x
k5

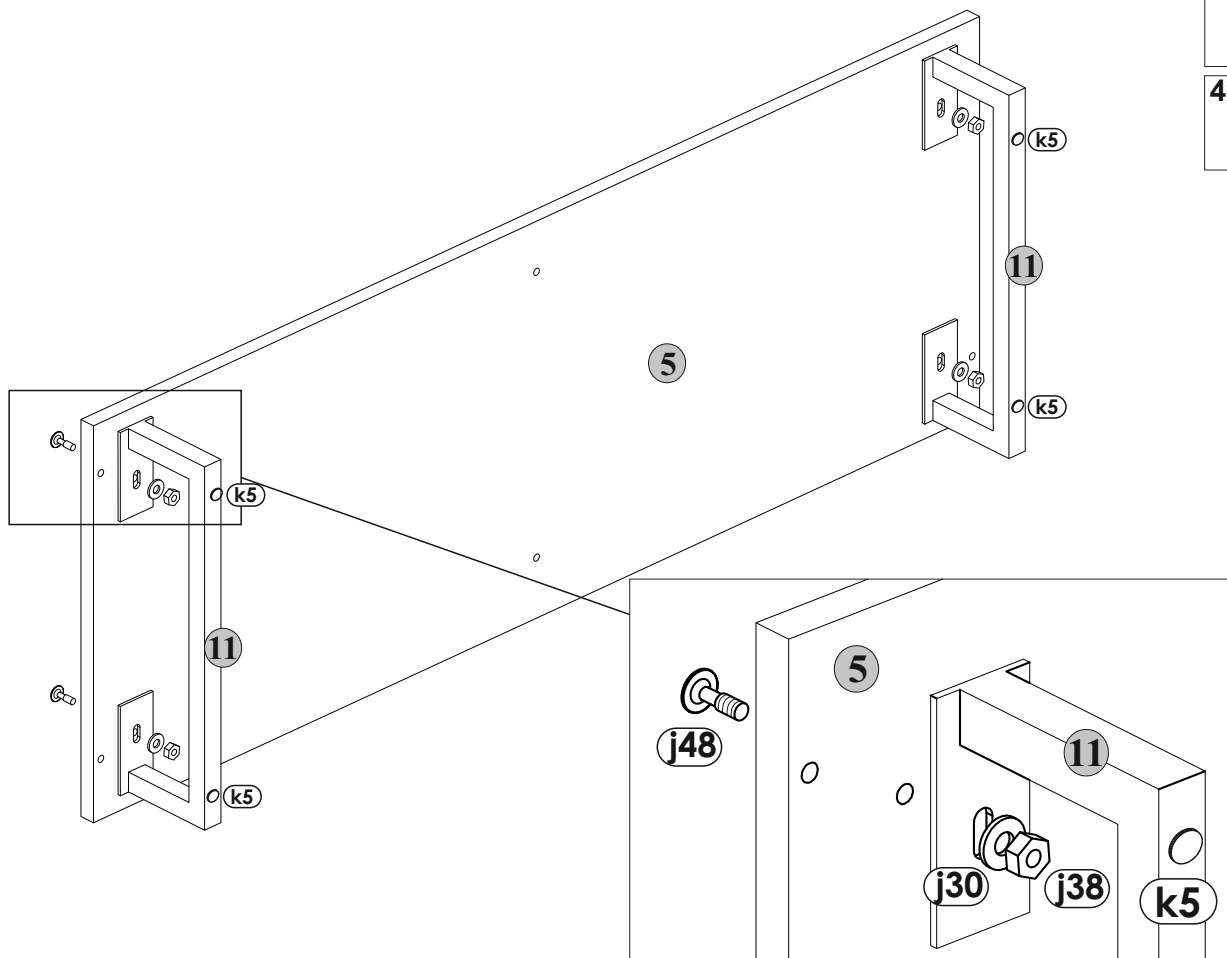


3

4

4x
b3



8x
e2
φ6.3x13 mm

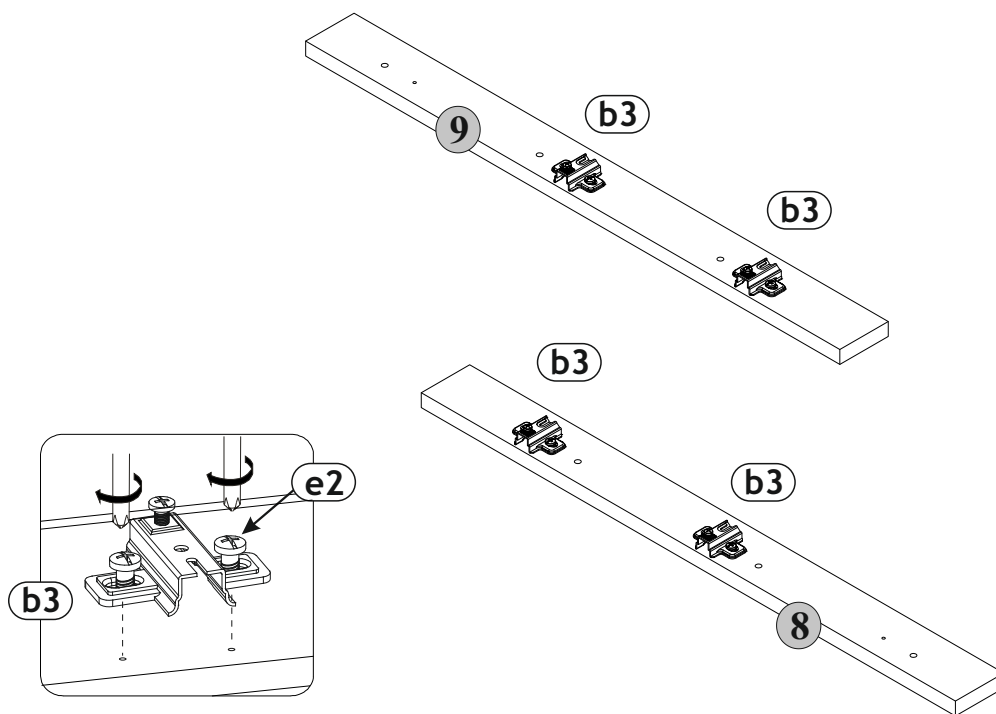


5

4x
a2

8x
p1
φ3.5x16 mm

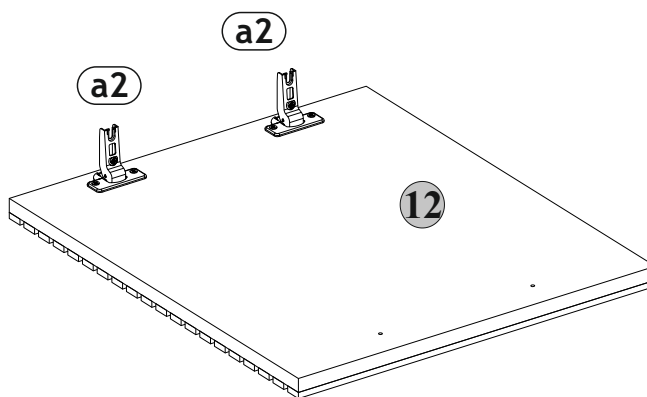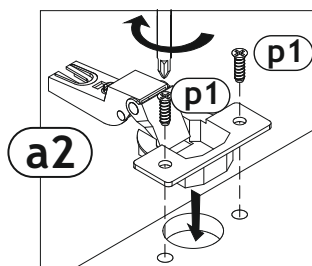

2x

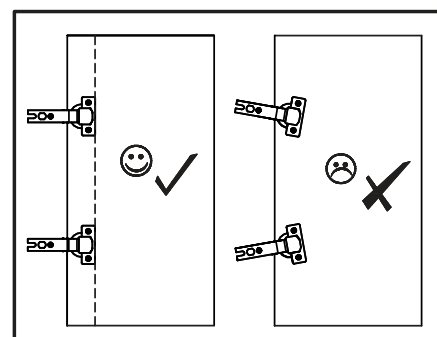




4

6


6x
e1

6x
s1

1x
z1

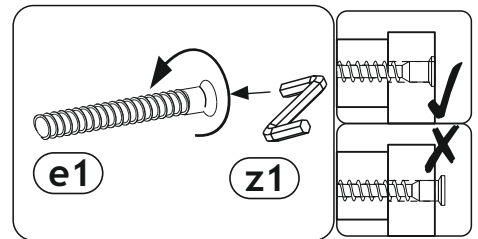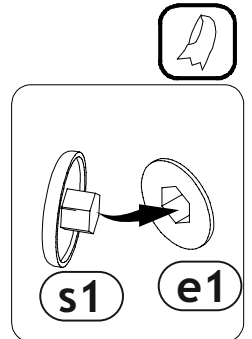
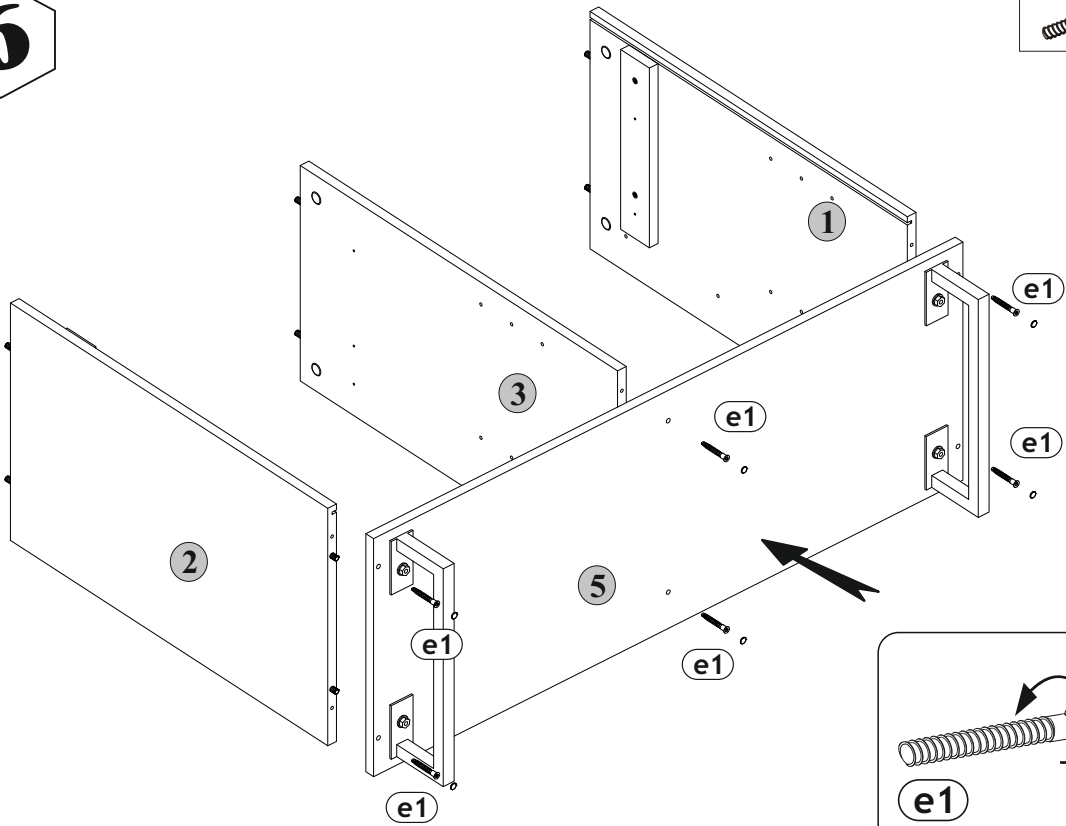


7




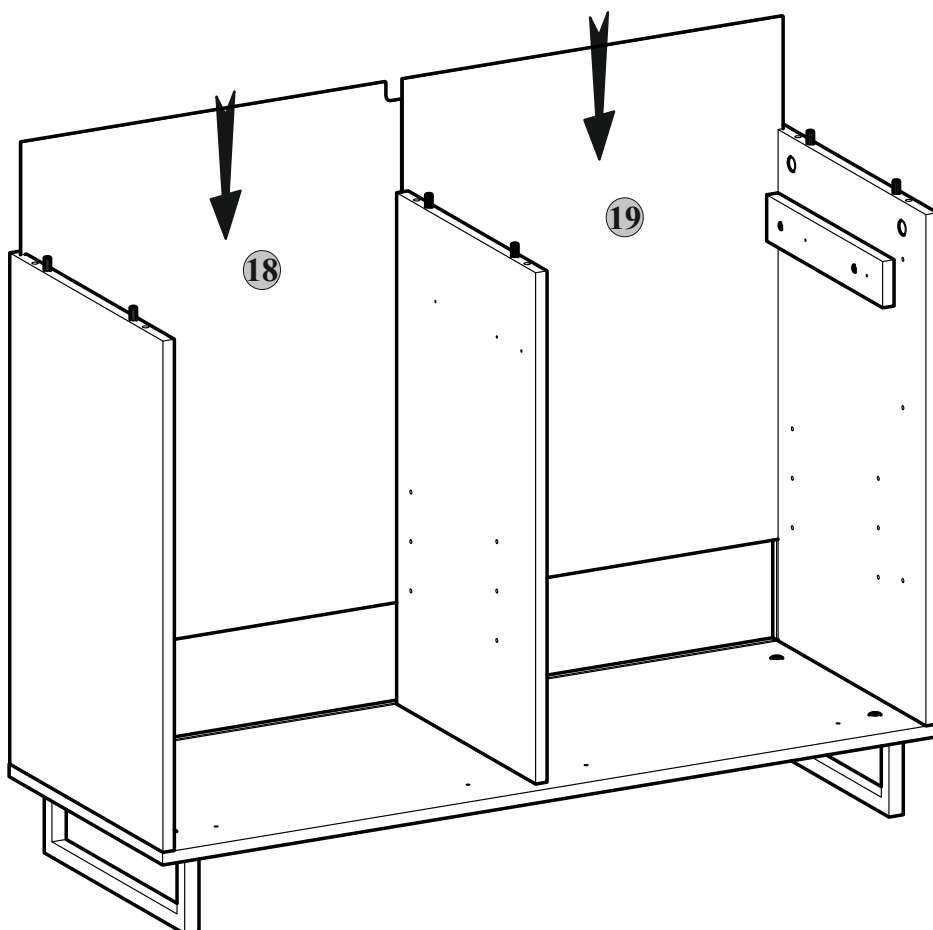


5


8

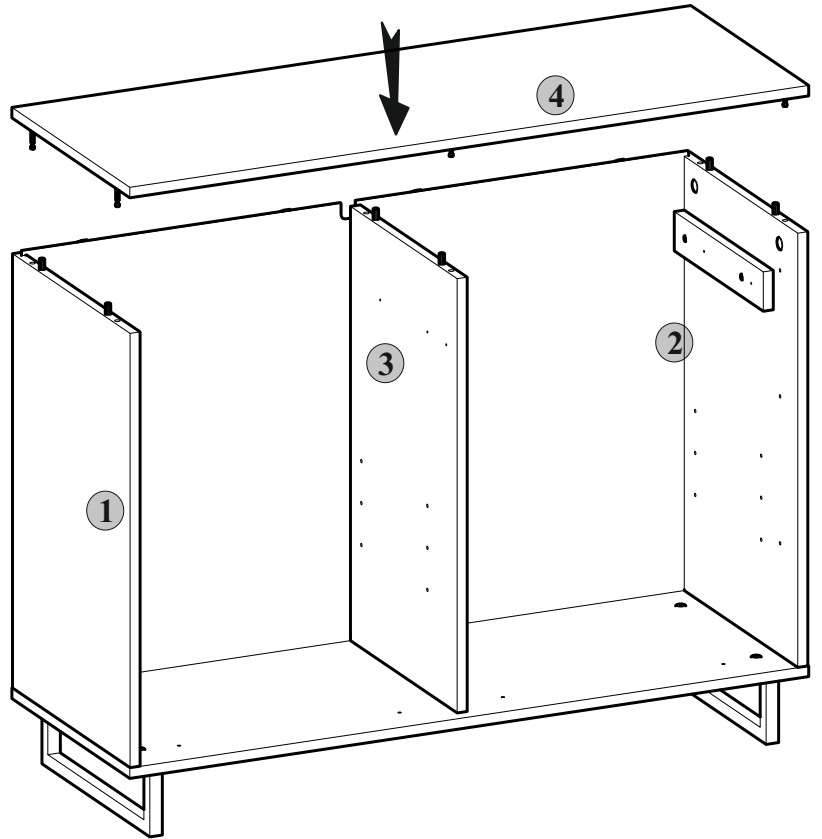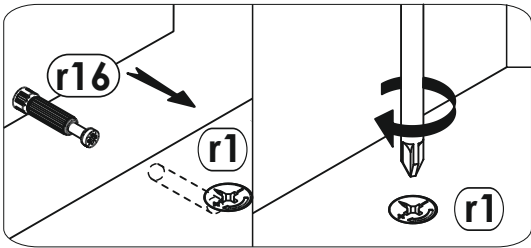

9

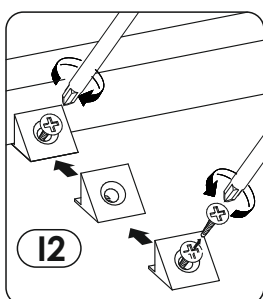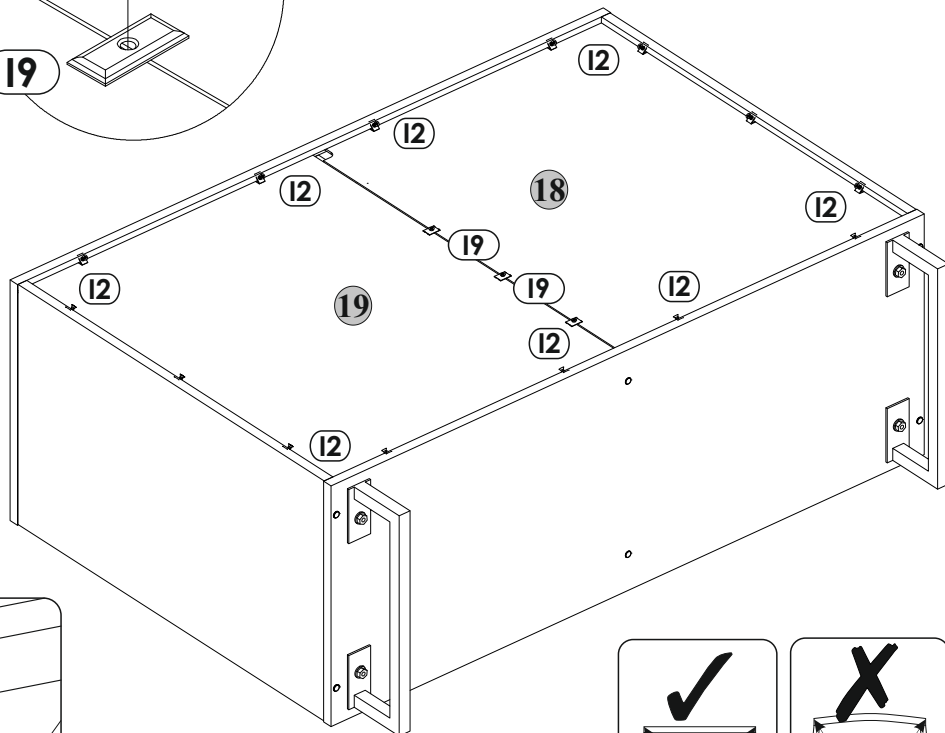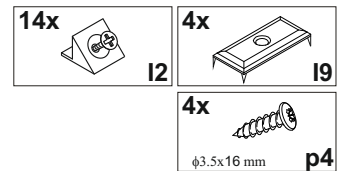
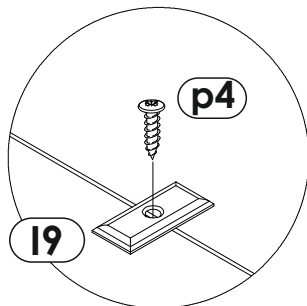


6

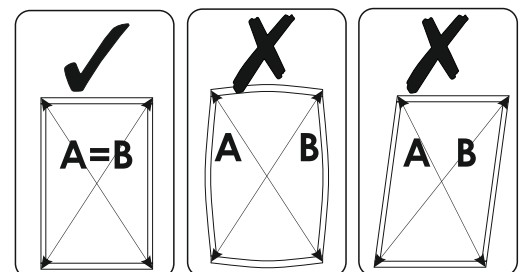



10

6x
φ6x20 mm **e23**

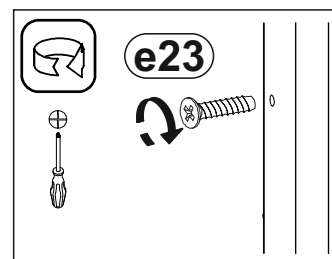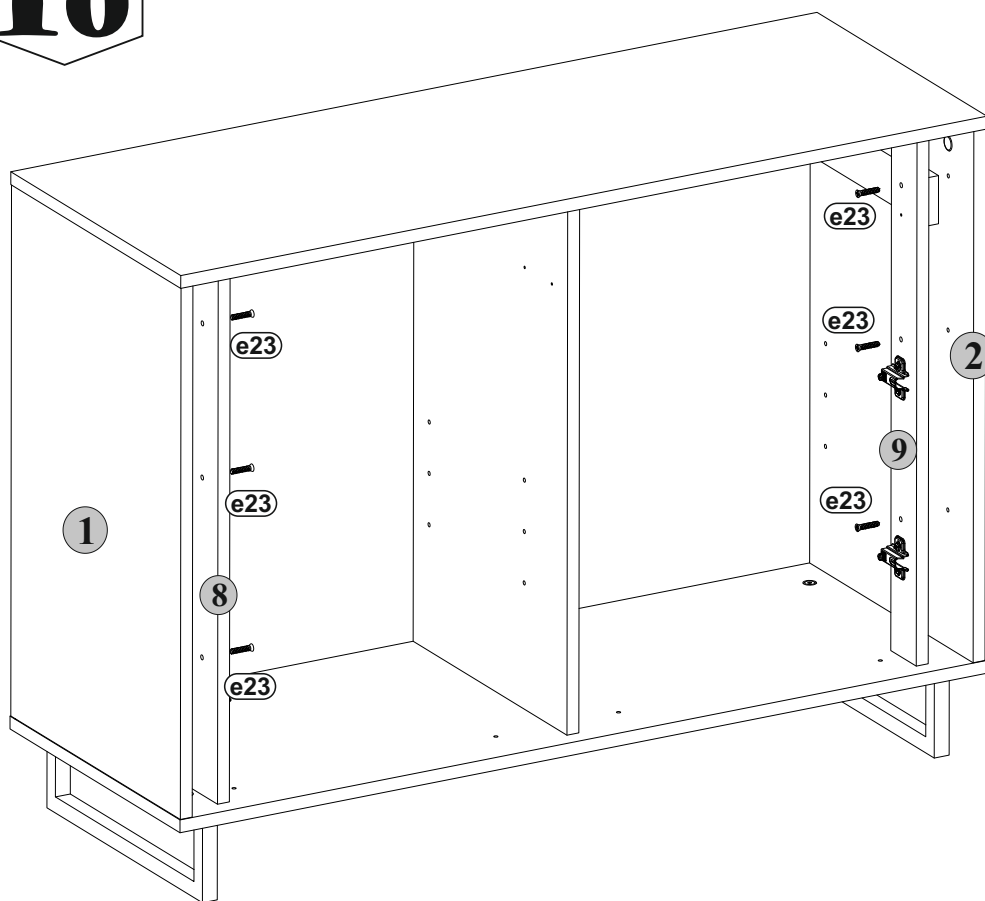


















11

8x
φ6x20 mm **e23**

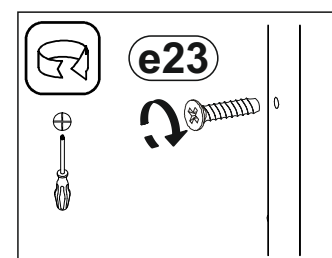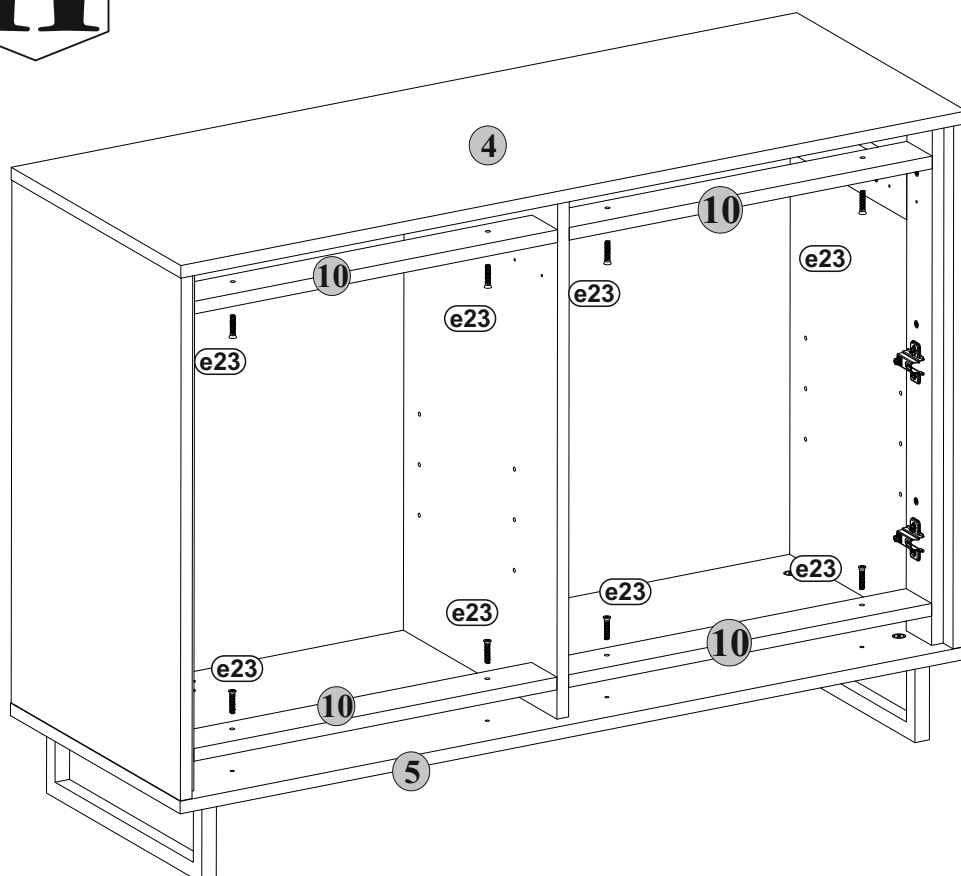


7

12

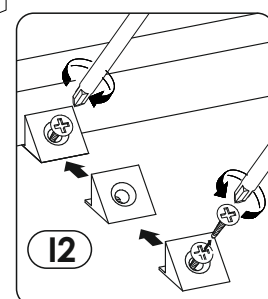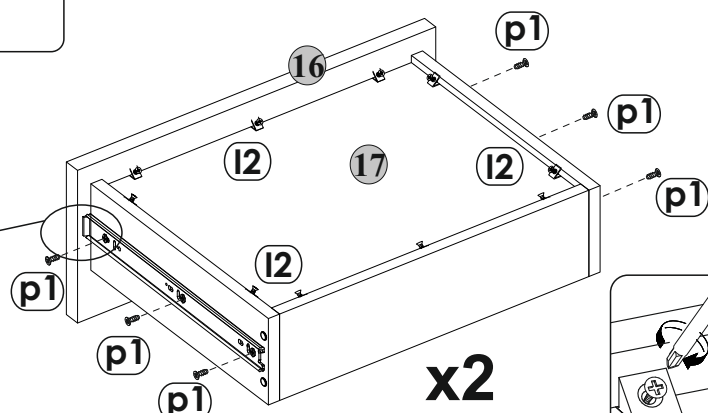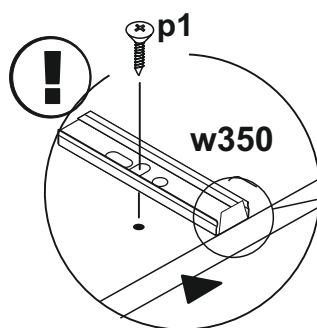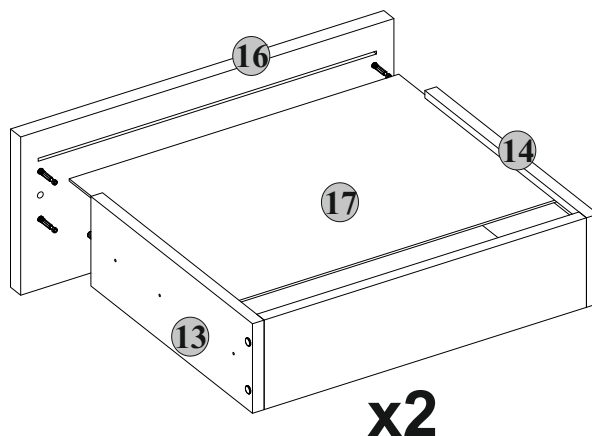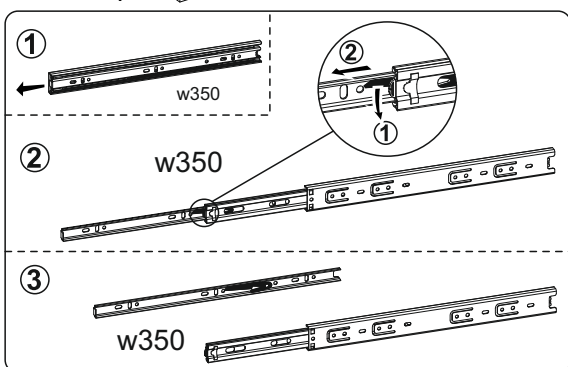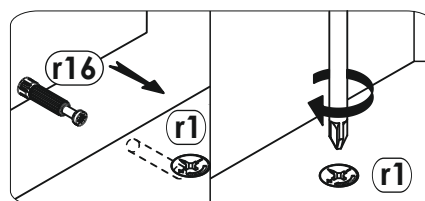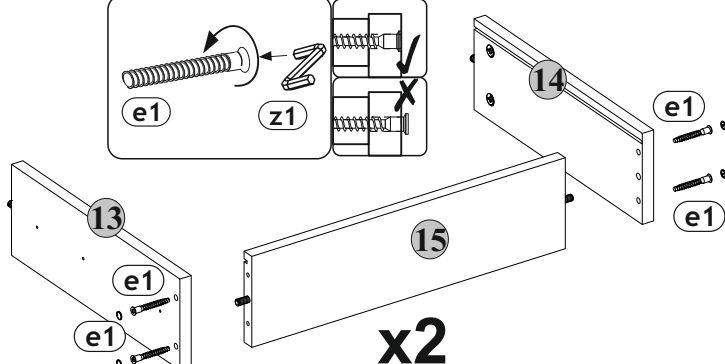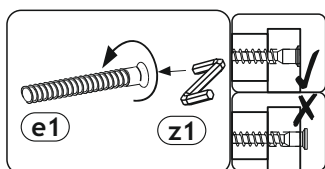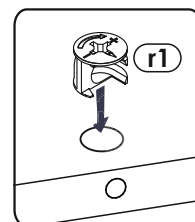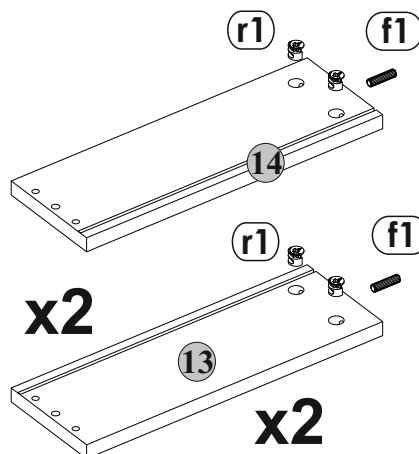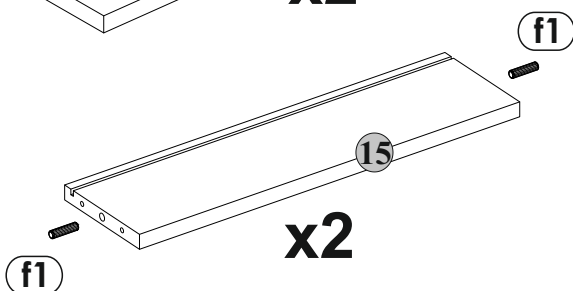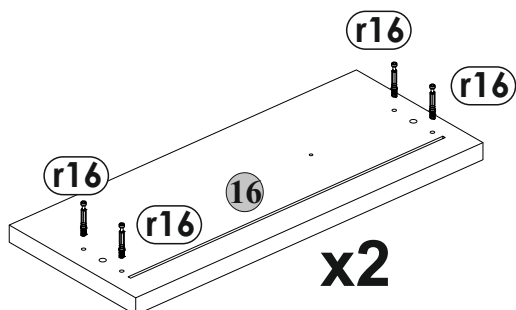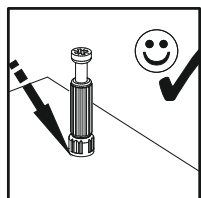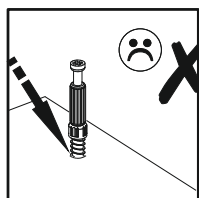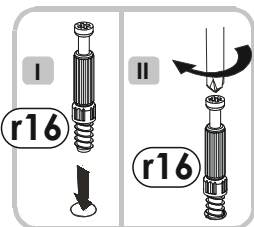

8

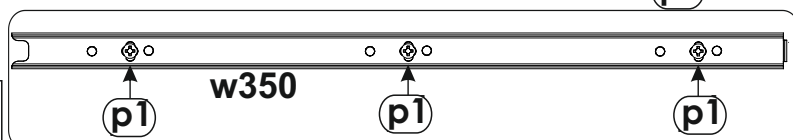

13





1x
t17

1x
n14







2x
φ3.5x16 mm
p1

2x
w350

12x
φ3.5x13 mm
p1

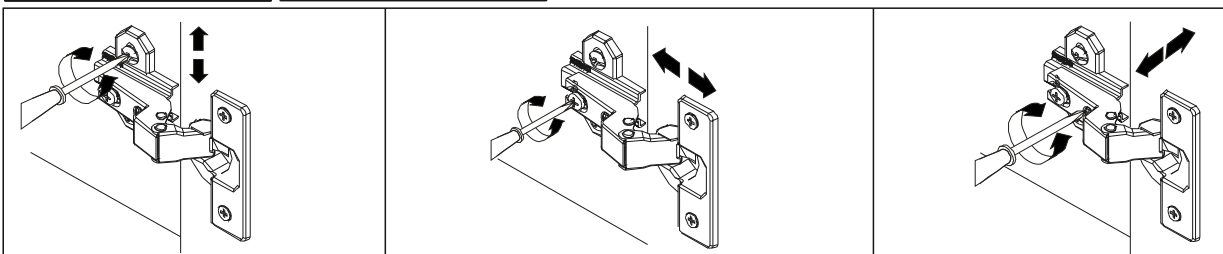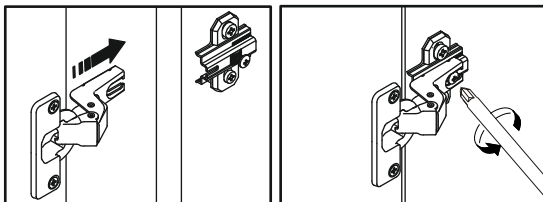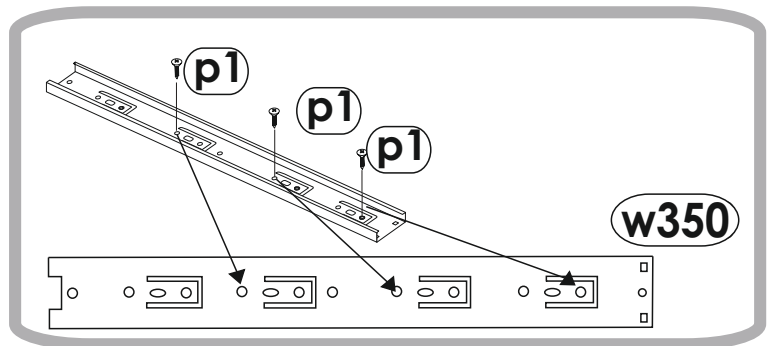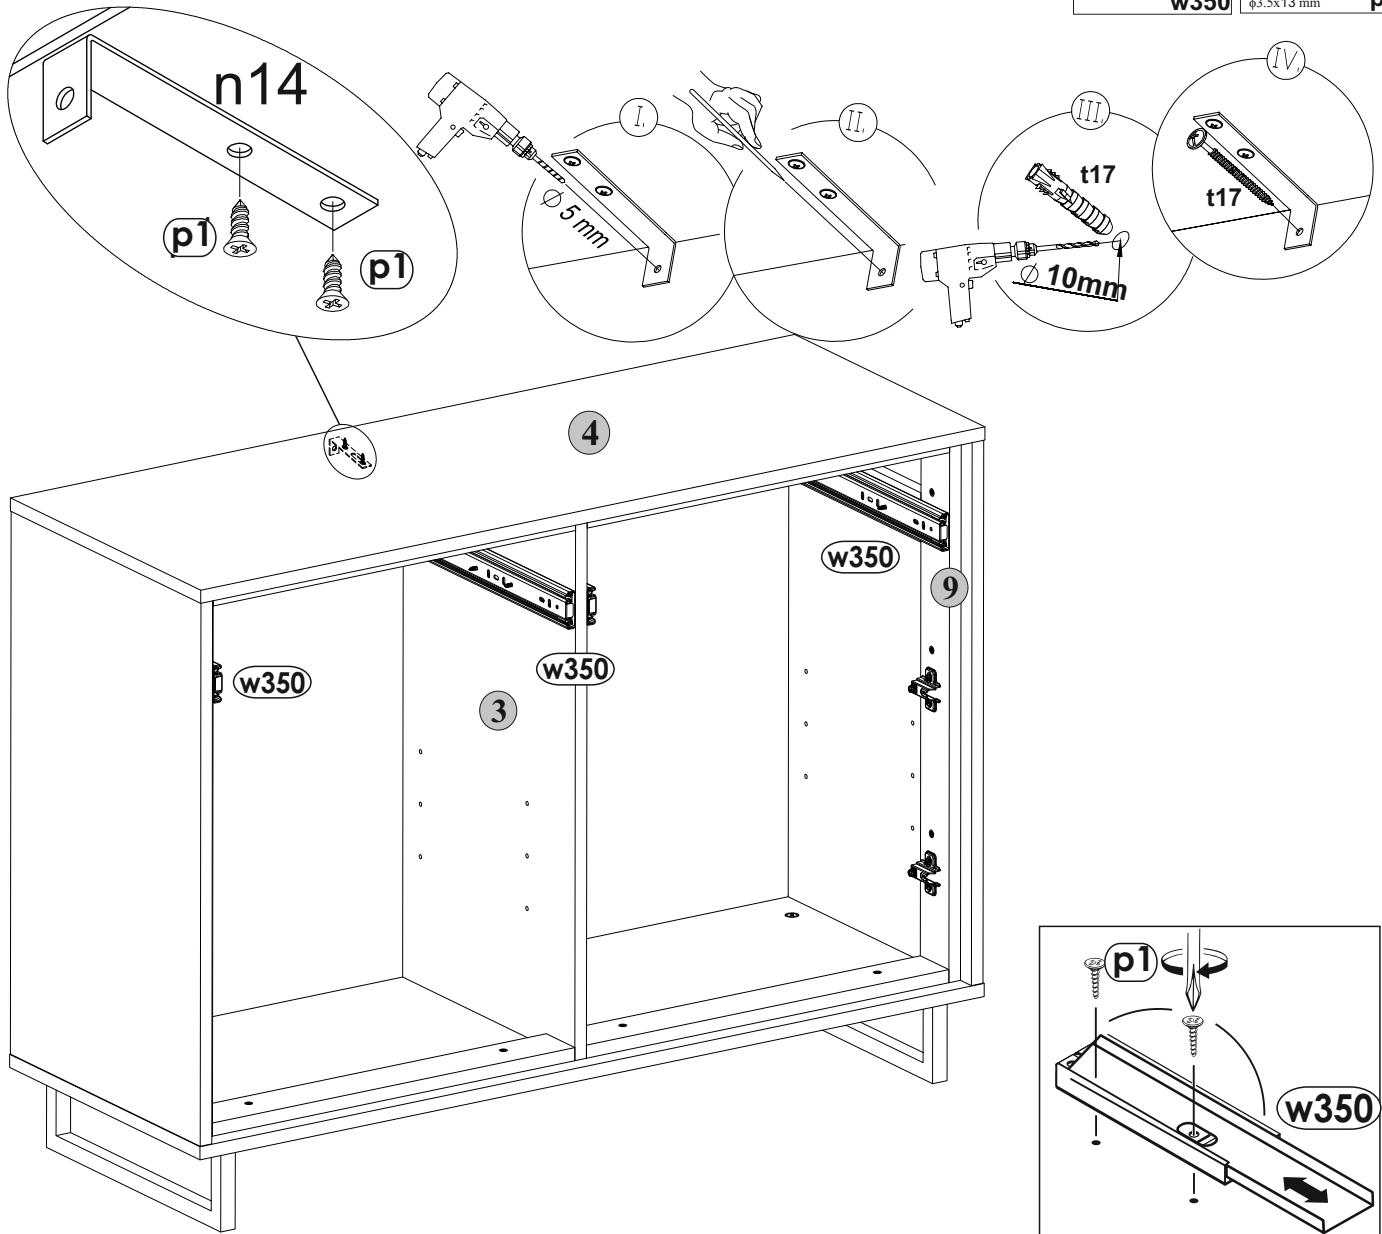

14

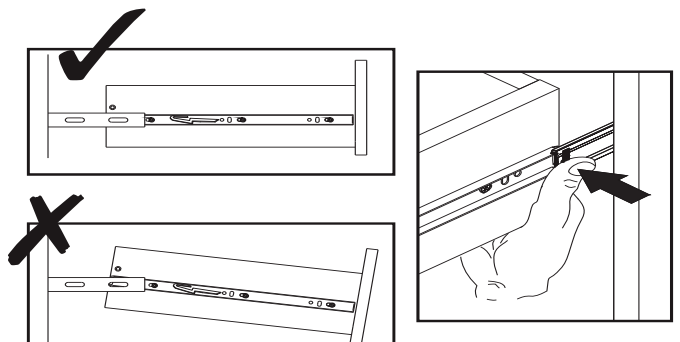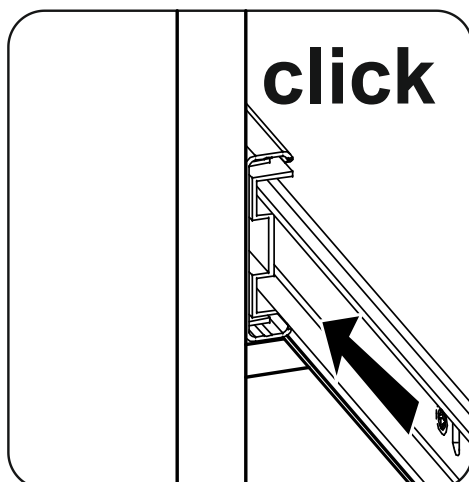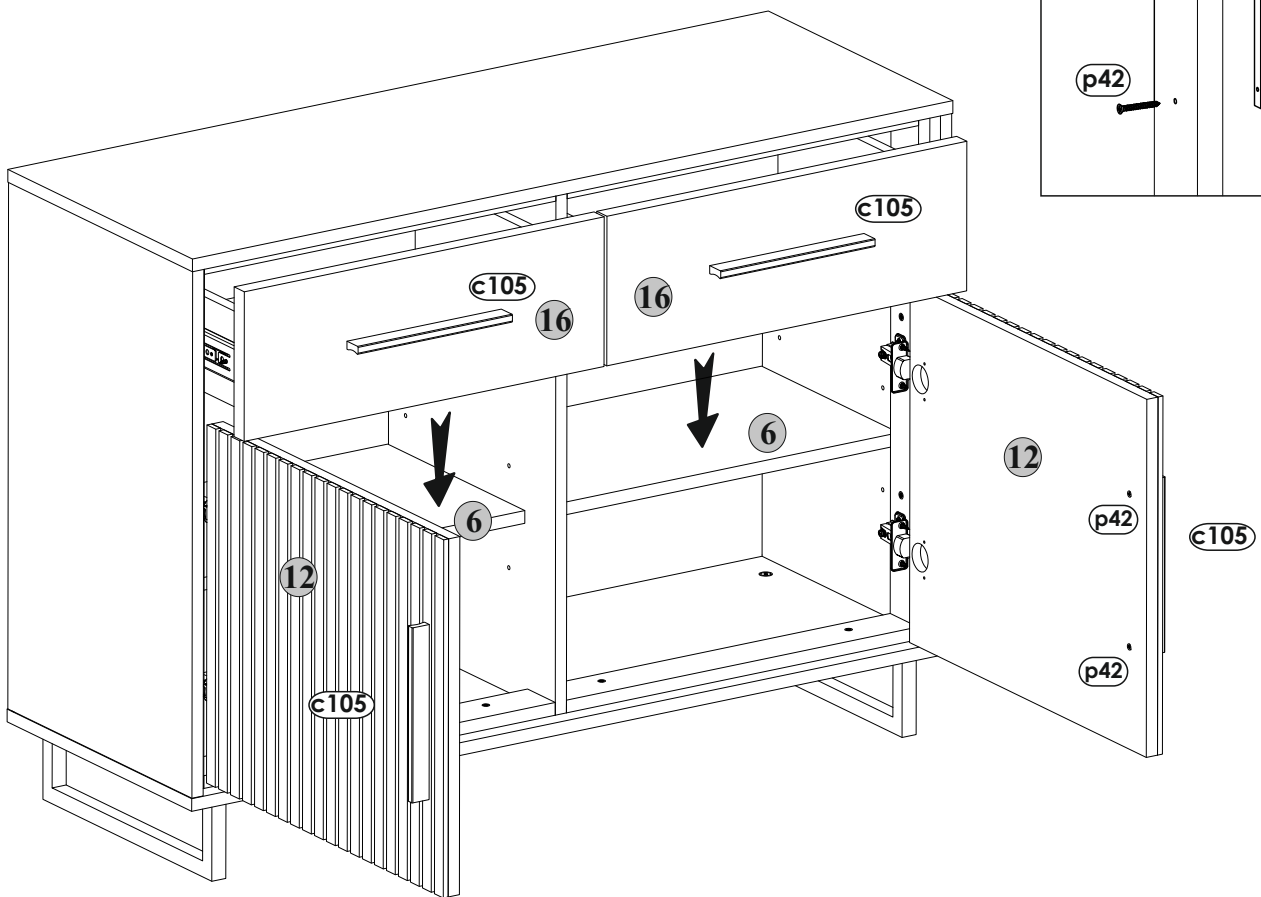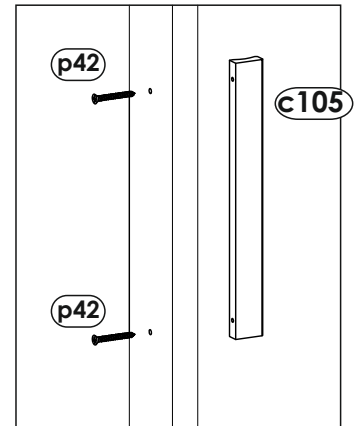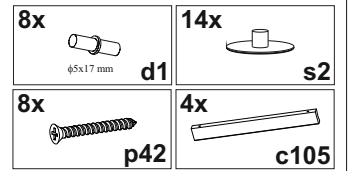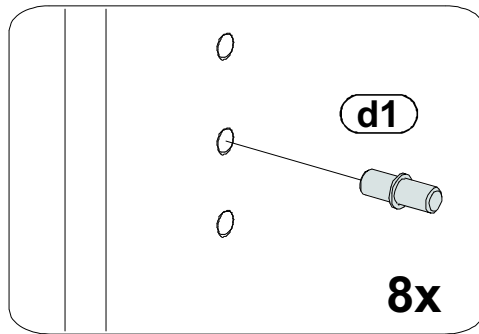

10