


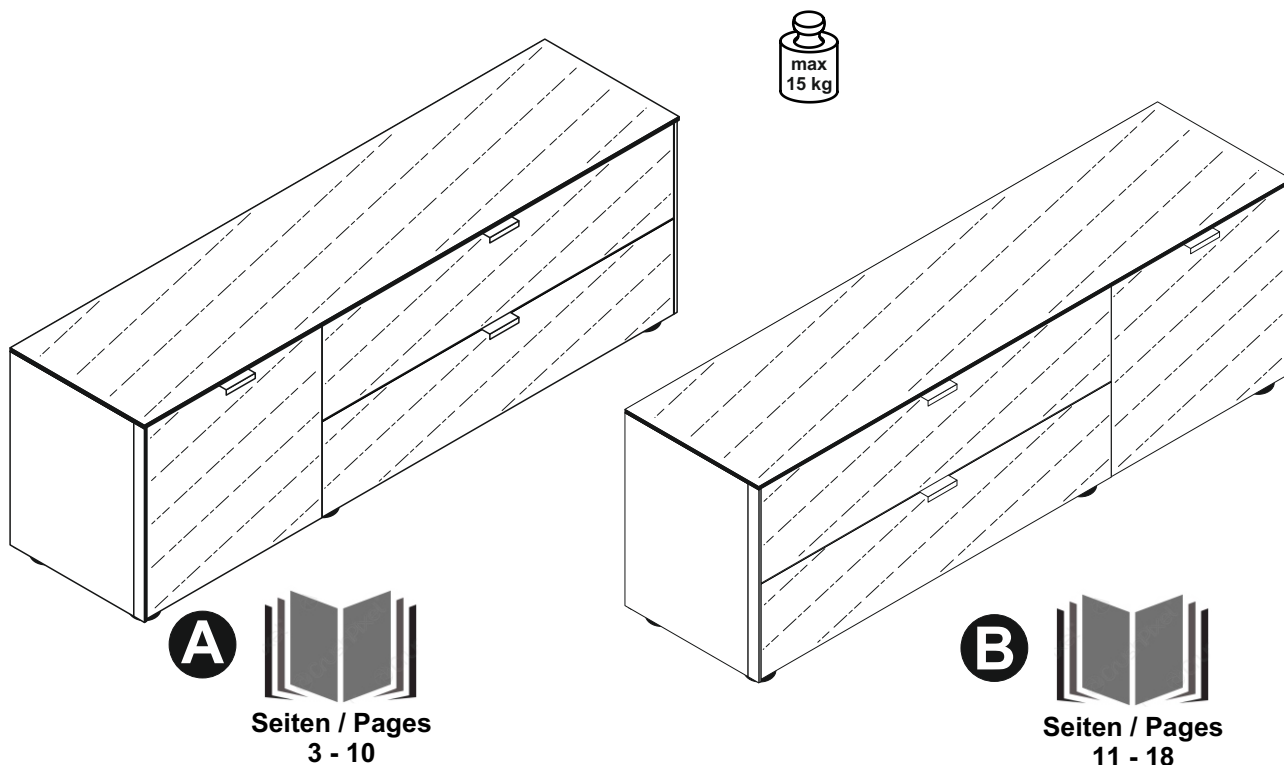

Das Lowboard kann spiegelbildlich montiert werden!

Artikel.-Nr.:

0772-LB_111 GL

Montageanleitung.-Nr.:

MA1-00369

REPC-Nr.:	Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба			



SCAN ME

Beutel 0772-LB_111 GL 0-15 Colli 2/3

B01-10 2x	 6,3x50	B01-30 45x	 3x16	B01-70 2x	 3x30	B01-80 12x	 3,5x13	B01-90 4x	 3,5x20
B01-122 2x	 4x13	B01-200 12x	 6,3x13	B02-08 4x	 h=10mm	B02-10 18x	 h=12mm	B02-20 22x	B02-160 4x

Beutel 0772-LB_111 0-35 Colli 2/3


B03-07 2x	 8er	B03-11 5x	 8er	B03-42 5x	 8er
--------------	---------	--------------	---------	--------------	---------

Beutel BT1-00001 Colli 2/3

B05-265 1x	
---------------	--

Beutel 0772-LB_111 0-45 Colli 2/3

B02-103 12x	 8x30	B05-01 10x	 2x	B05-130 2x	 2x
B05-260 1x		B05-280 1x	 3x	B06-425 4x	 4x



Beutel 0772-LB_111 0-55 Colli 1/3

B01-36 4x	 4x40
--------------	----------

Beutel BT1-00005 Colli 2/3

B01-123 12x	 4x15	B02-173 6x	 6x
----------------	----------	---------------	--------

Colli 1/3

 636 x 580 1x Front Tür	 1123 x 358 1x HTS-00057 Front Schubk.-blende	 1111 x 146 1x Z01-99-1111	 1x Z01-200R	 1x Z07-27	 1100 x 25 1x Z17-96
 350 x 160 1x Z01-105-350	 350 x 160 1x Z01-106-350	 1x Z01-200L	 1x Z01-72	 1163 x 316 1x Front Klappe	

Colli 2/3

 610 x 409 1x Mittelseite	 1151 x 407 1x Mittelboden	 1734 x 409 1x Boden	 640 x 34 2x Z99-00465	 640 x 409 1x Seite links	 640 x 409 1x Seite rechts
------------------------------------	-------------------------------------	-------------------------------	---------------------------------	------------------------------------	-------------------------------------

 630 x 291 2x HTR-00328	 1163 x 309 1x HTR-00324	 500 x 50 2x Z02-500	 568 x 397 1x Einlegeboden
----------------------------------	-----------------------------------	-------------------------------	-------------------------------------



Colli 3/3

 1768 x 445 1x Z16-4-1632


CHICAGO






B01-200		B02-10		B02-20		B02-160	
2x	6,3x13	2x		2x		2x	

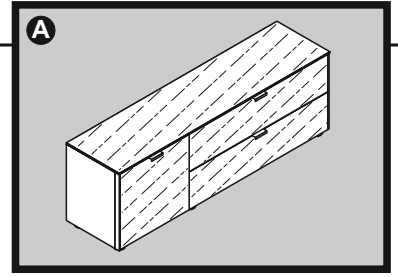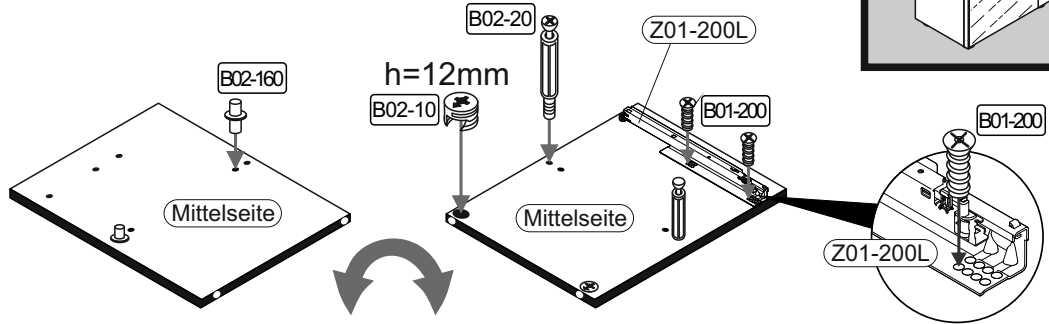


B02-10		B03-11	
4x		3x	

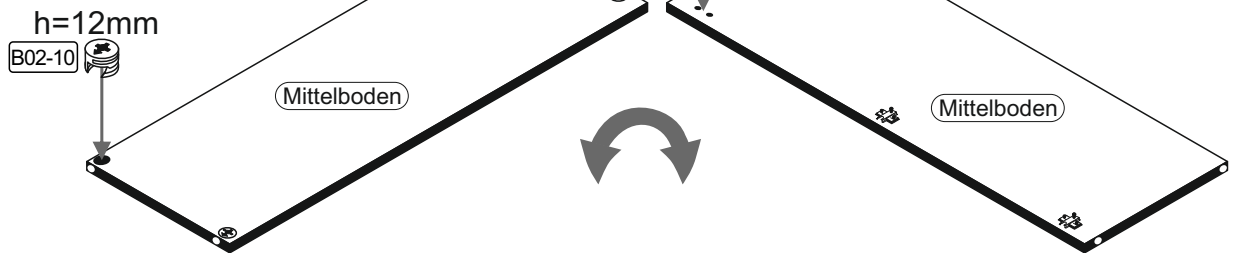

B01-36		B02-10		B02-20	
4x	4x40	4x		2x	
B02-103		     			
4x	8x30				
B05-130		     			
1x		h=12mm			

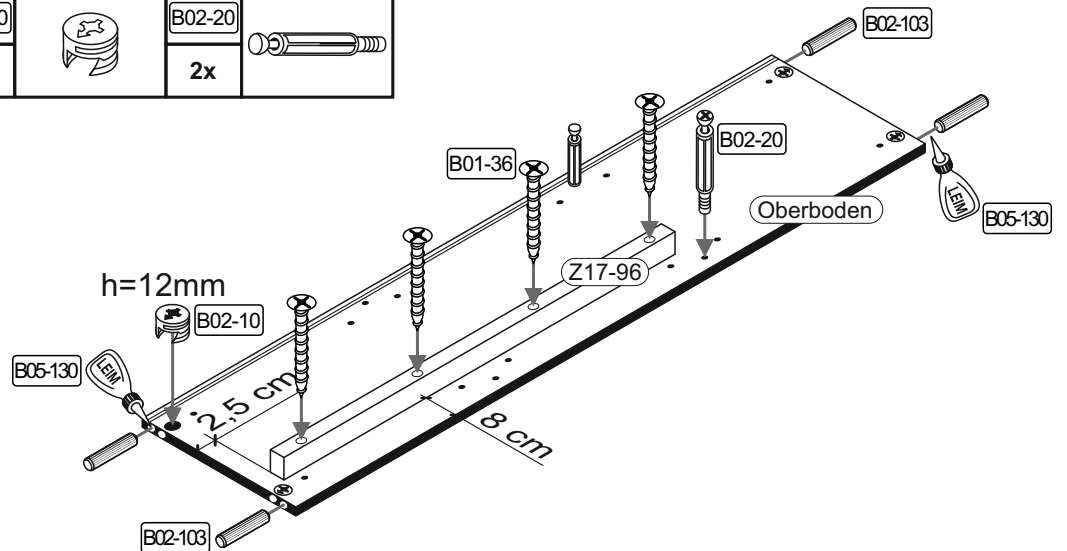


B02-20	
4x	

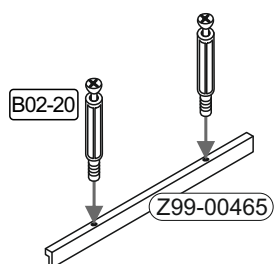


CHICAGO


5

B02-10		B02-103	
4x		8x	8x30
B05-130			
1x			

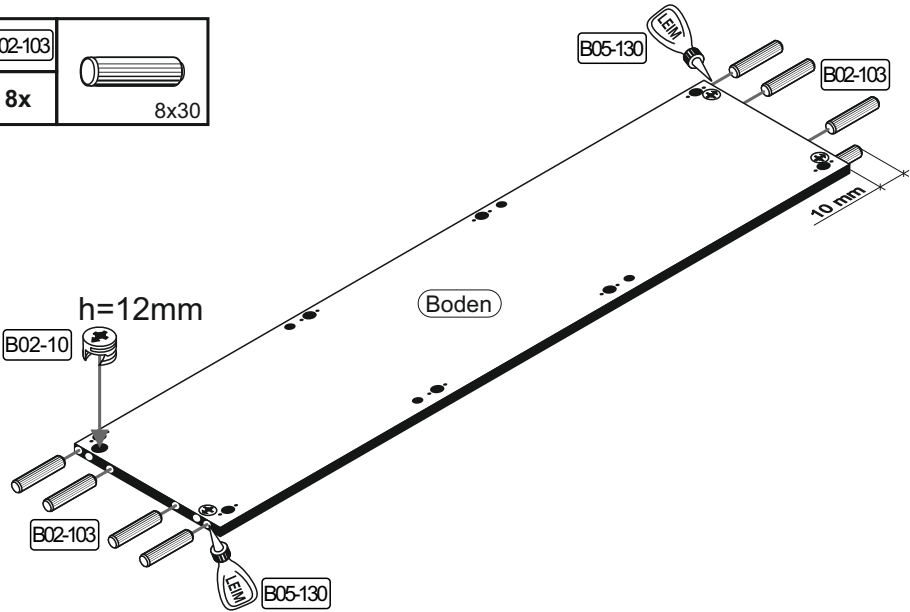


6

B02-10		B02-20		B03-11		B02-160	
2x		4x		2x		2x	

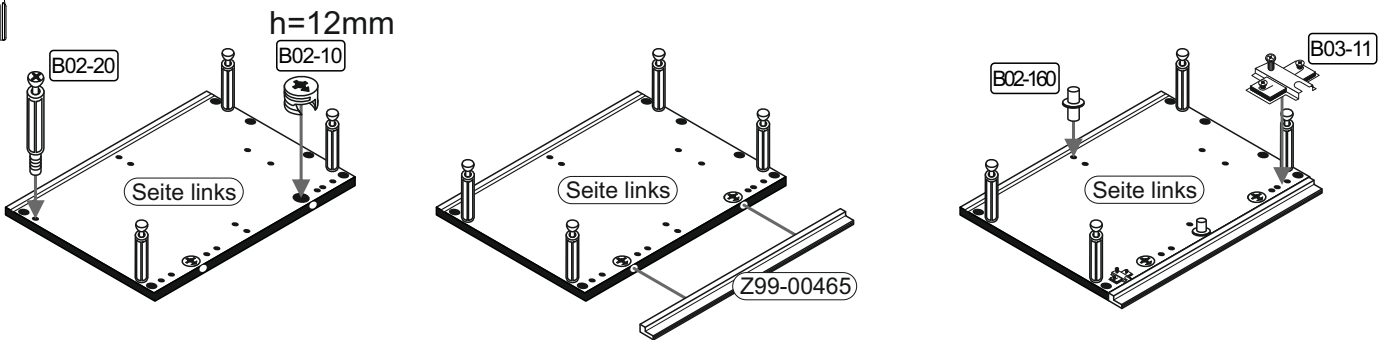


7

B01-200		B02-10		B02-20	
2x	6,3x13	2x		6x	

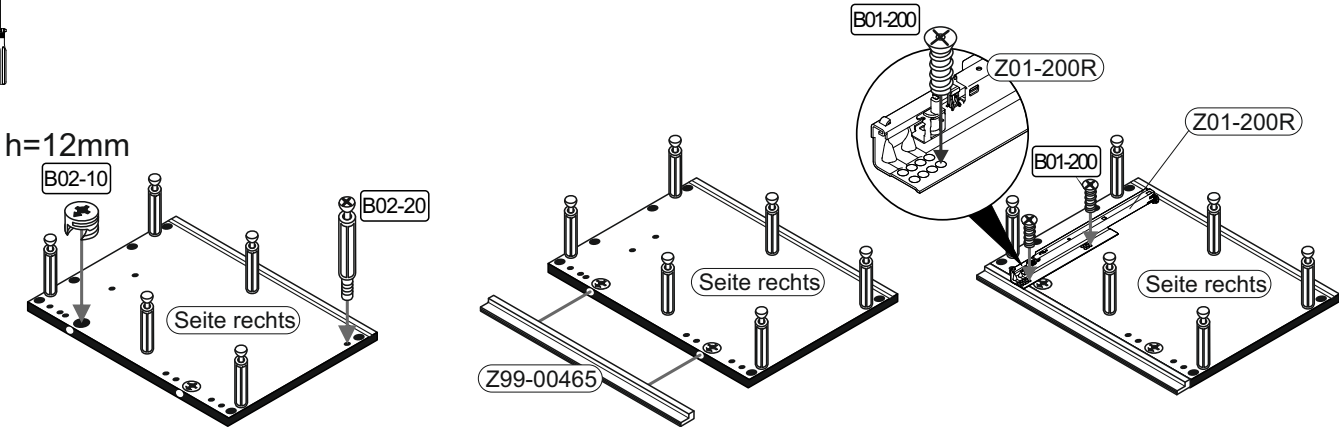



8

B01-80		B03-42	
4x	3,5x13	2x	8er

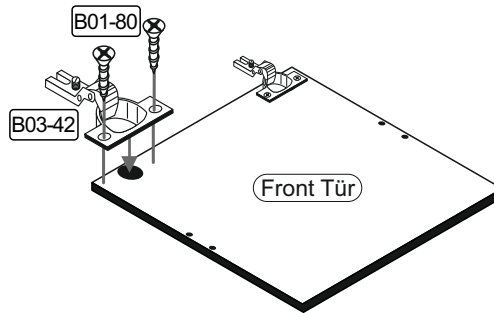







9

B01-200		B02-08		B02-20		B06-425	
2x	6,3x13	4x		4x		1x	

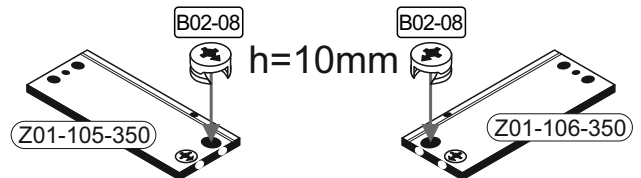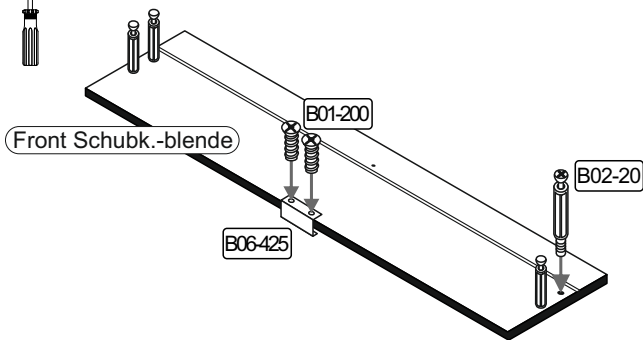

10


B01-30		B01-70	
13x	3x16	2x	3x30
B01-122			
2x	4x13		

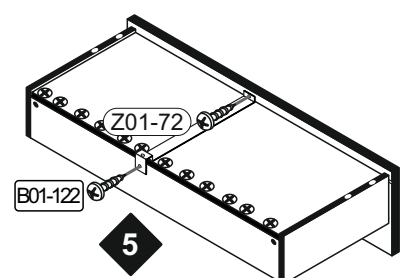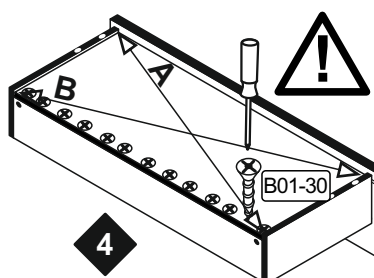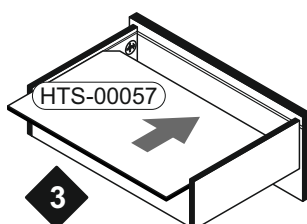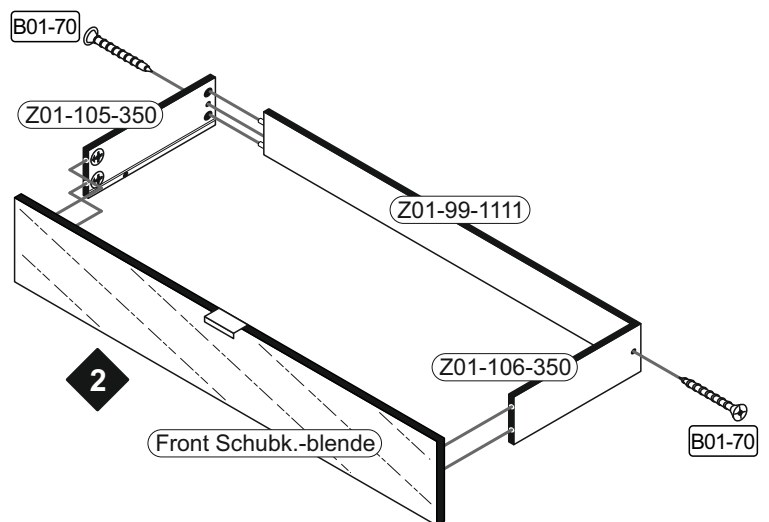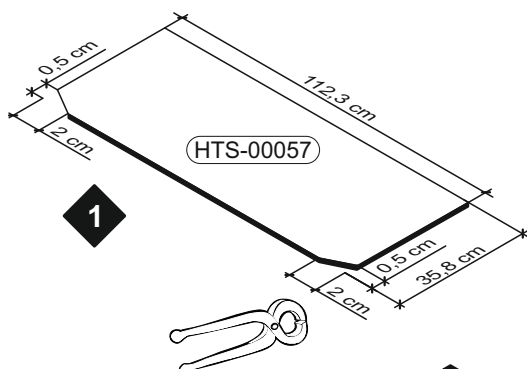

CHICAGO


11

B01-80		B01-200	
6x	3,5x13	2x	6,3x13
B03-42		B06-425	
3x	8er	1x	

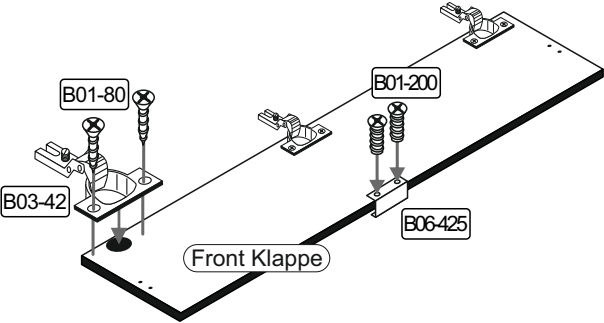




12

B01-10		B05-130	
2x	6,3x50	1x	

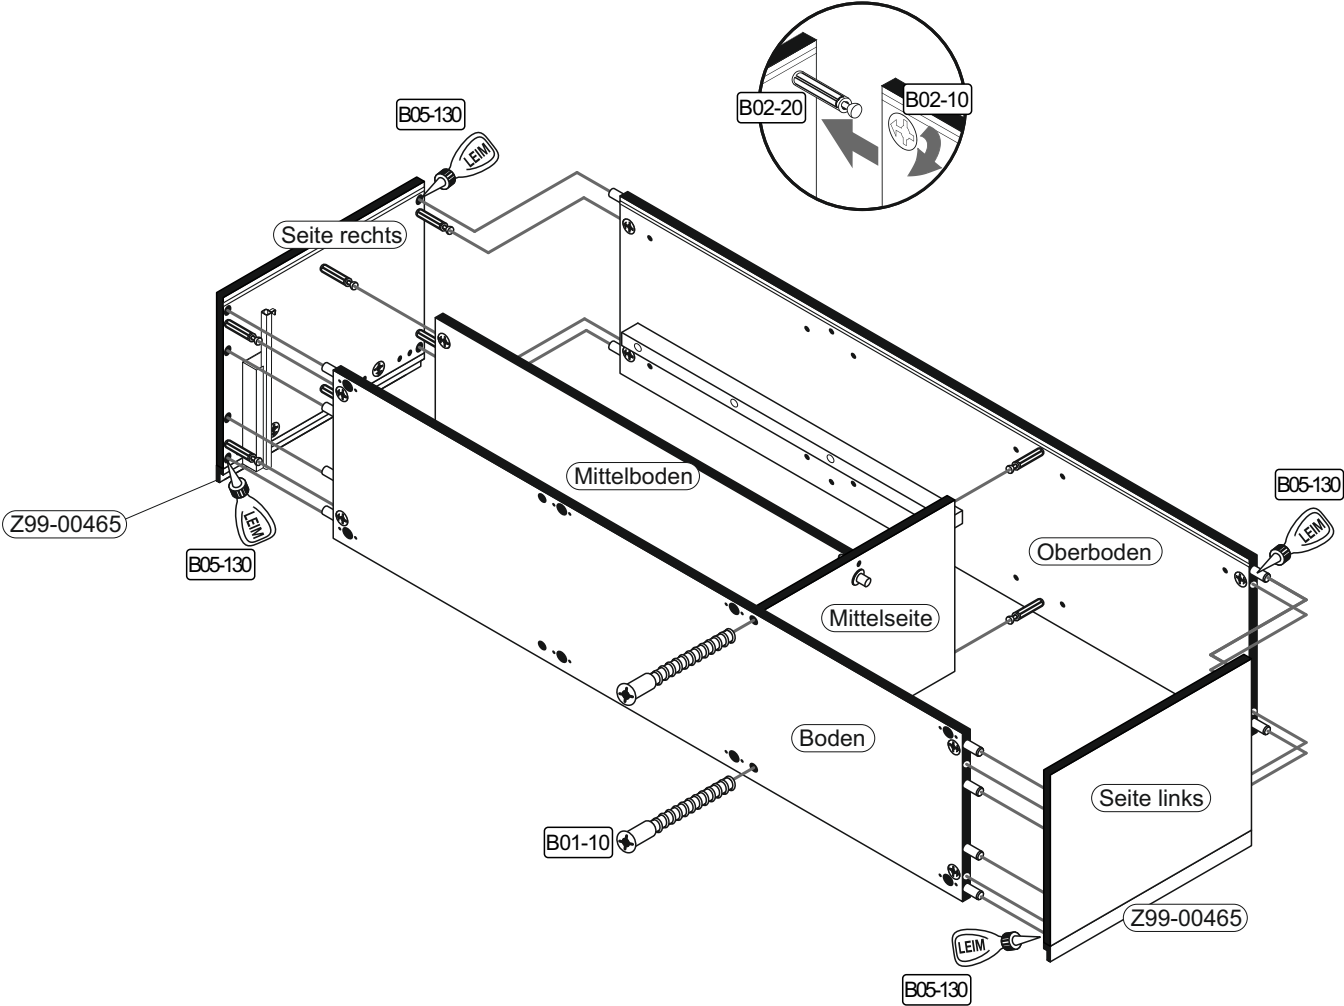


13

B01-30		B01-90	
32x	3x16	4x	3,5x20
B01-123			
12x	4x15		
B05-185			
4x			
B02-173			
6x			

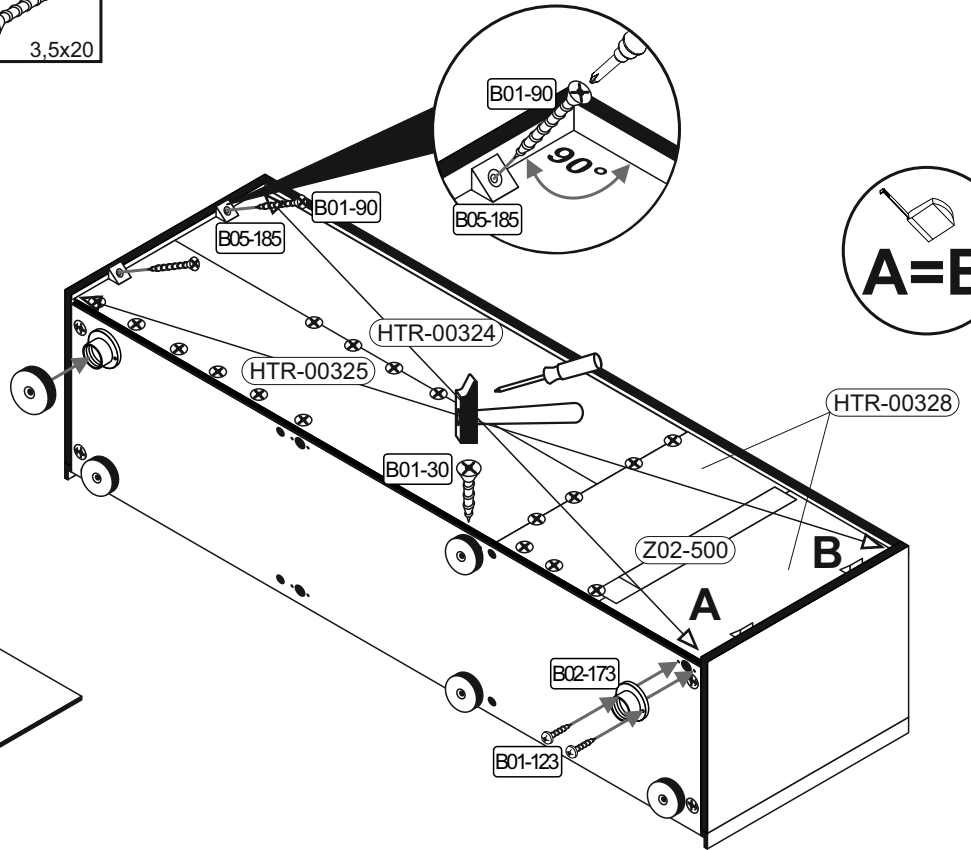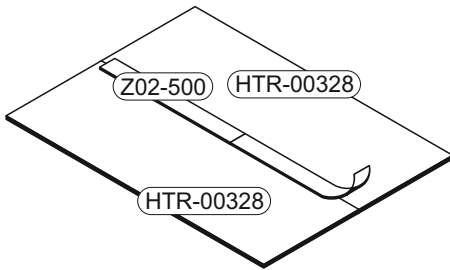


14

B05-01		B05-280	
10x		1x	

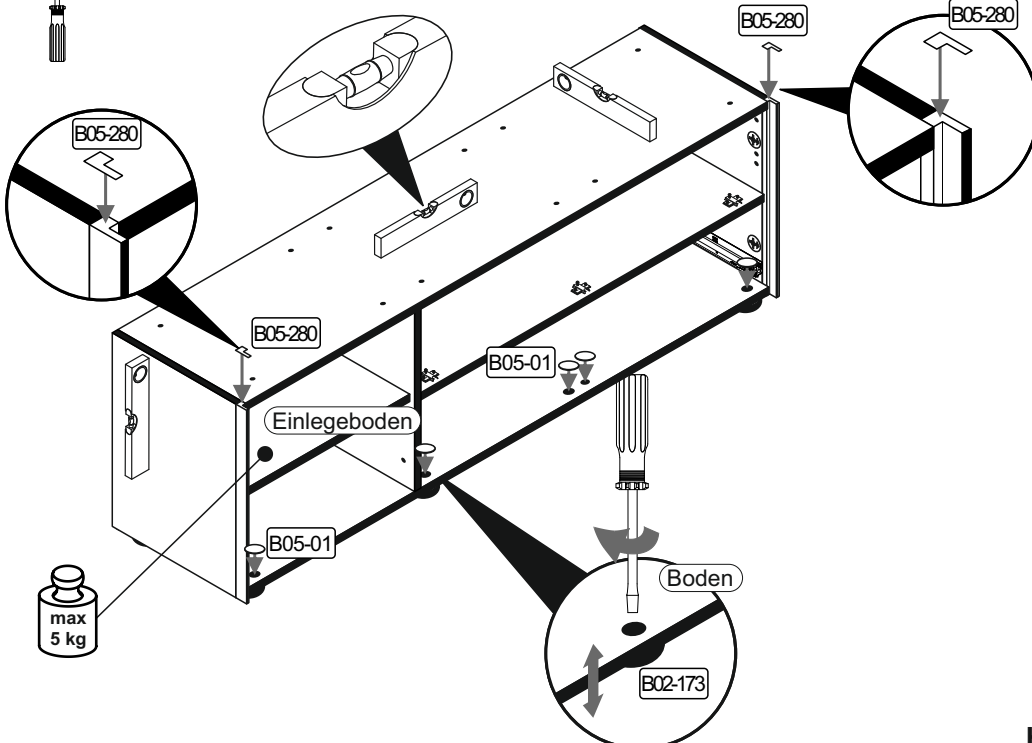


SCAN ME

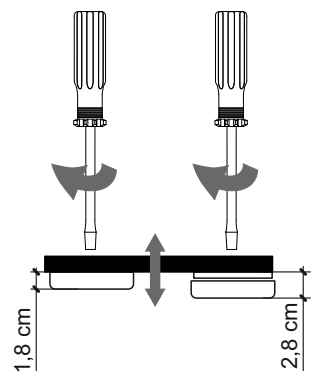


Höhenverstellung der Möbelfüße

15



Einbau des Schubkastens

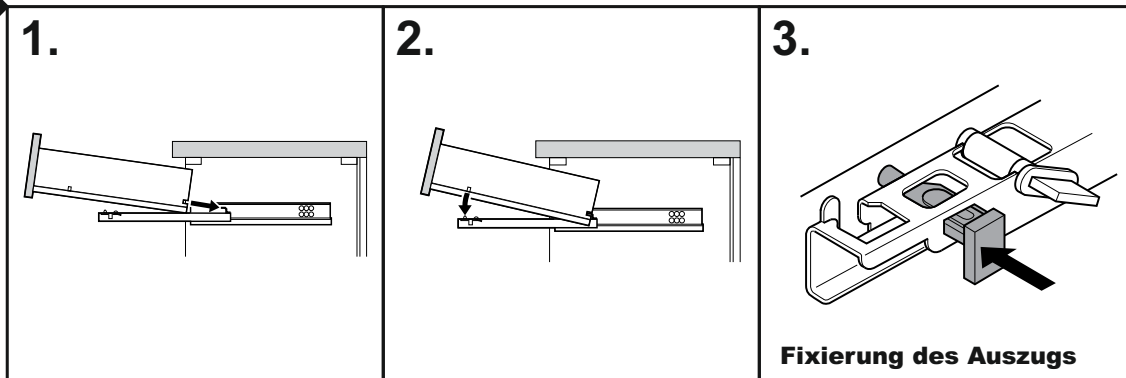



Ausbau des Schubkastens

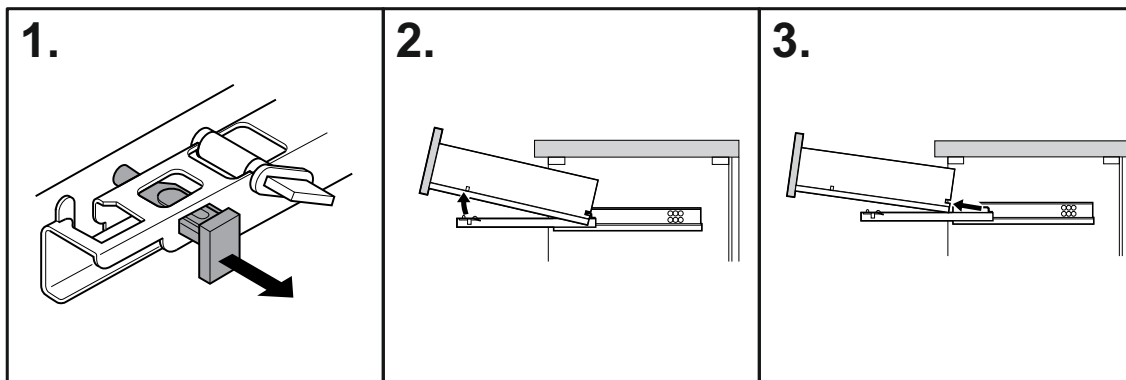


Höhenverstellung des Schubkastens

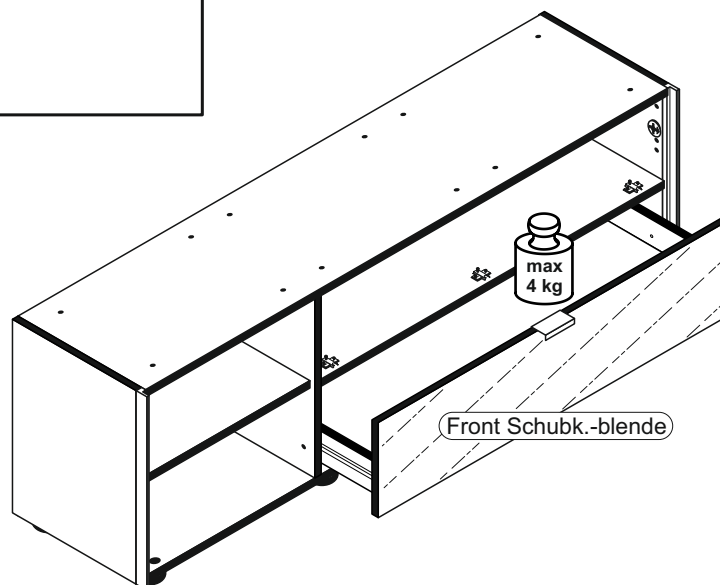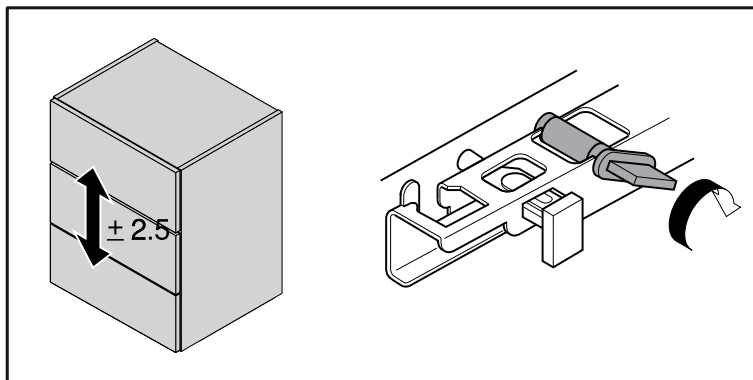


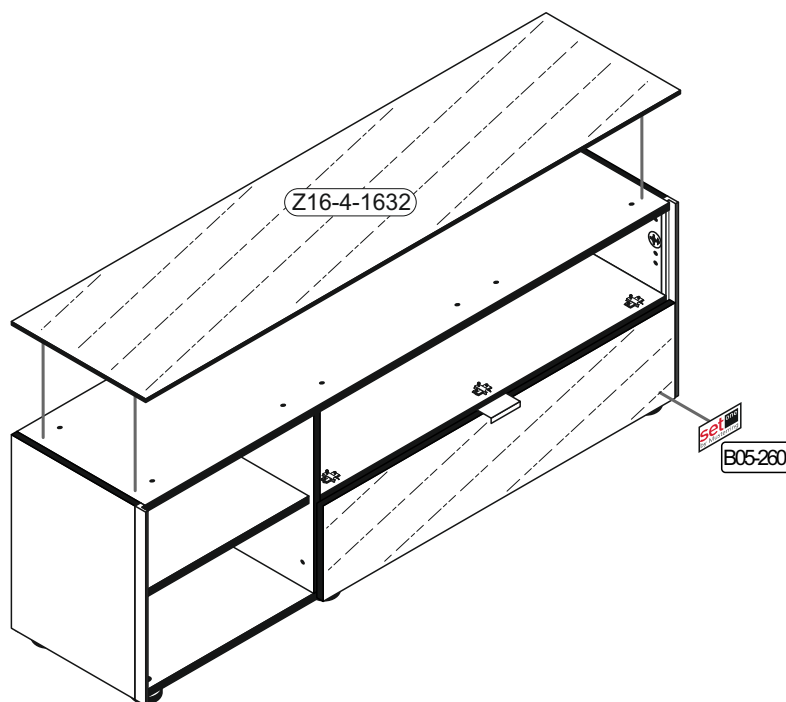


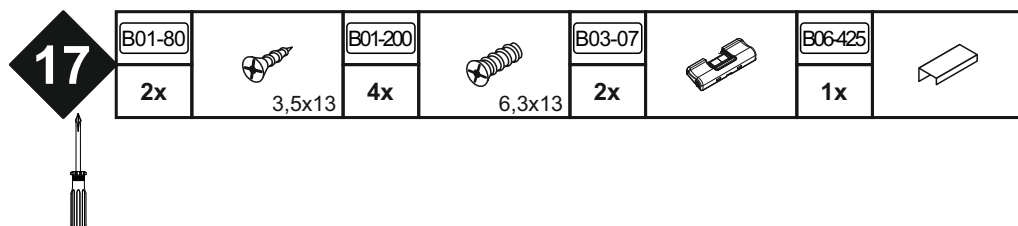


Montage der Türdämpfung

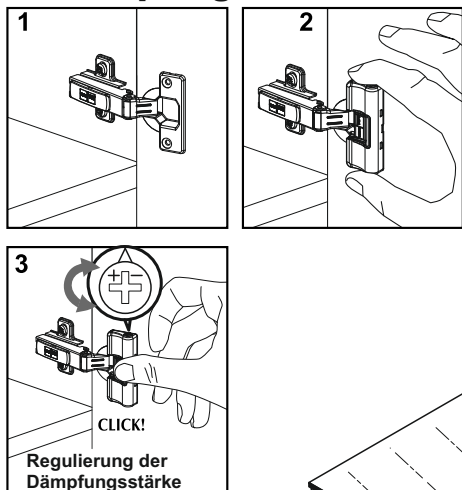


Stütze unten (Z07-27) überdrehen

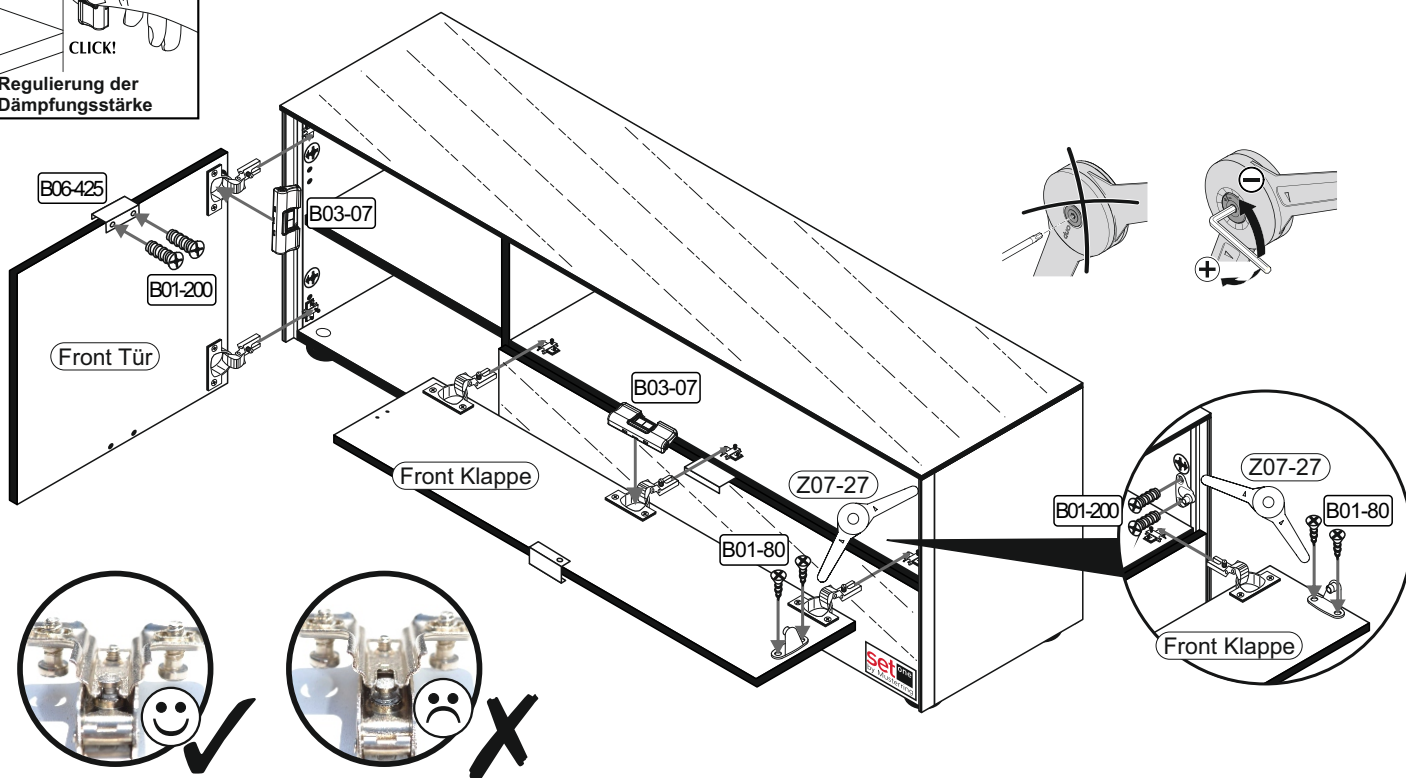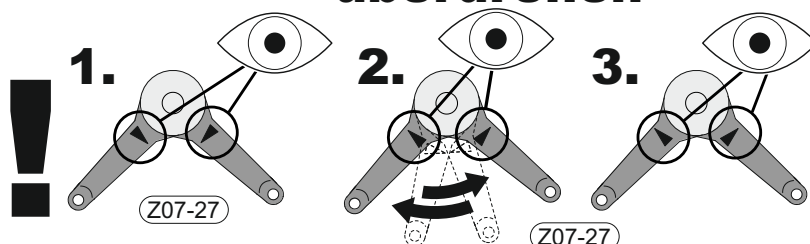


Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Výrovnejte dvířka (seříd'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare usi (ajustare balamale)
Kapıların ayarlanması (mentşelerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

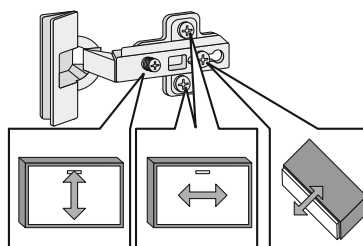


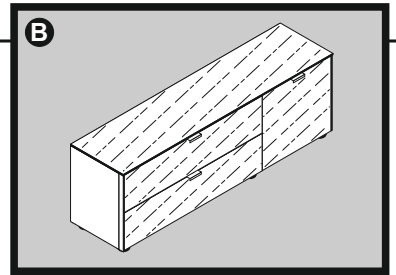


1	B01-200		B02-10		B02-20		B02-160	
	2x	6,3x13	2x		2x		2x	

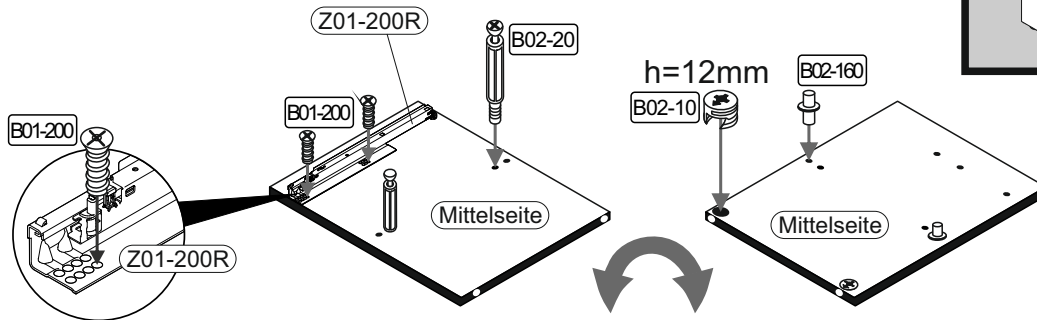


2	B02-10		B03-11	
	4x		3x	

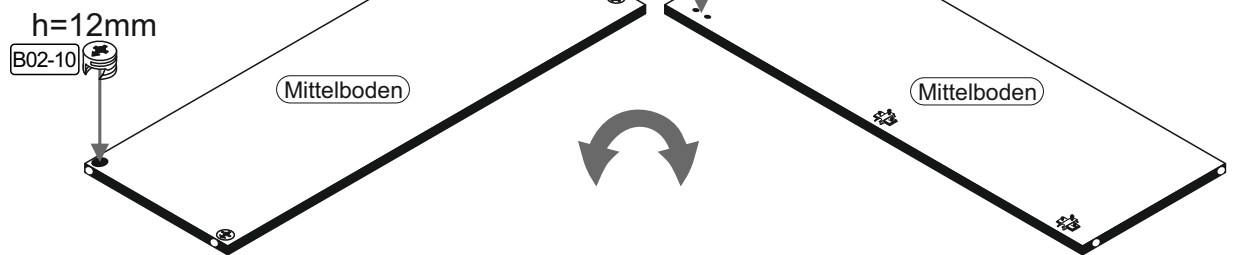




3	B01-36		B02-10		B02-20	
	4x	4x40	4x		2x	
	B02-103					
	4x	8x30				
	B05-130					
	1x					

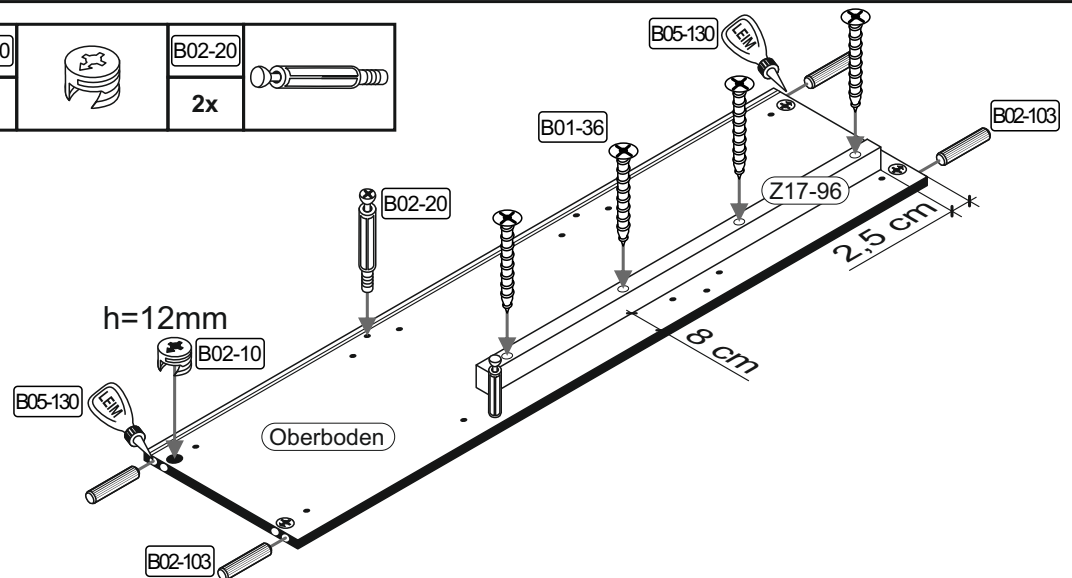

4	B02-20	
	4x	

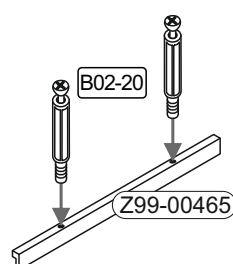


CHICAGO

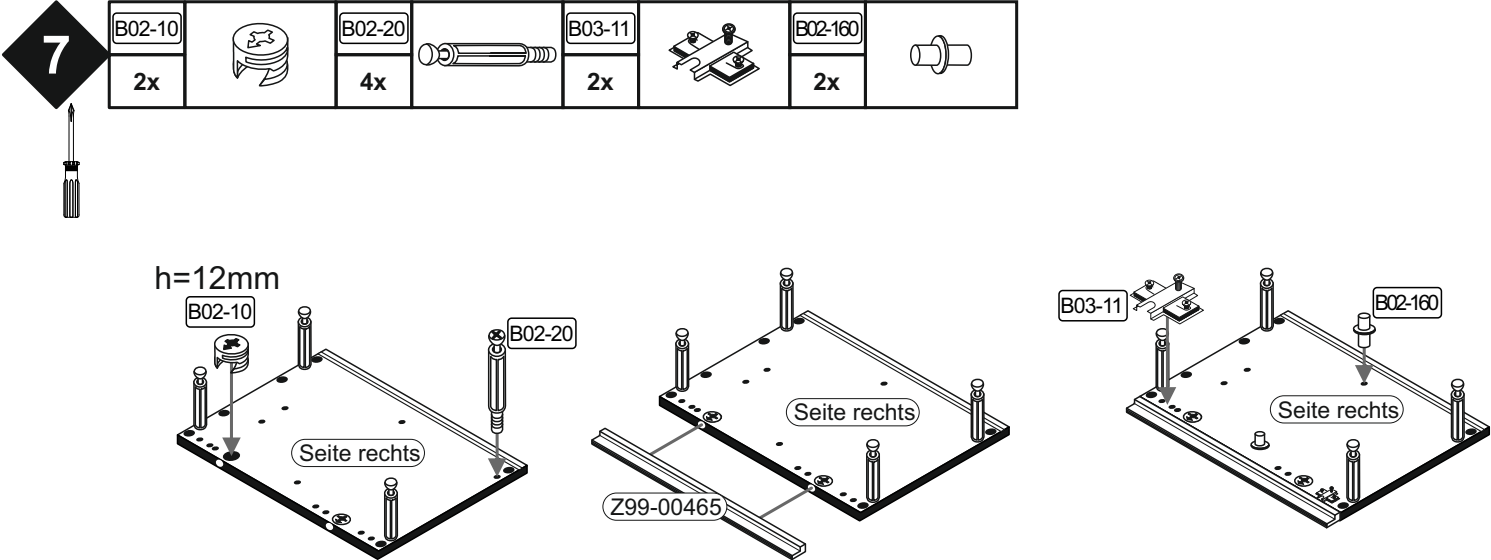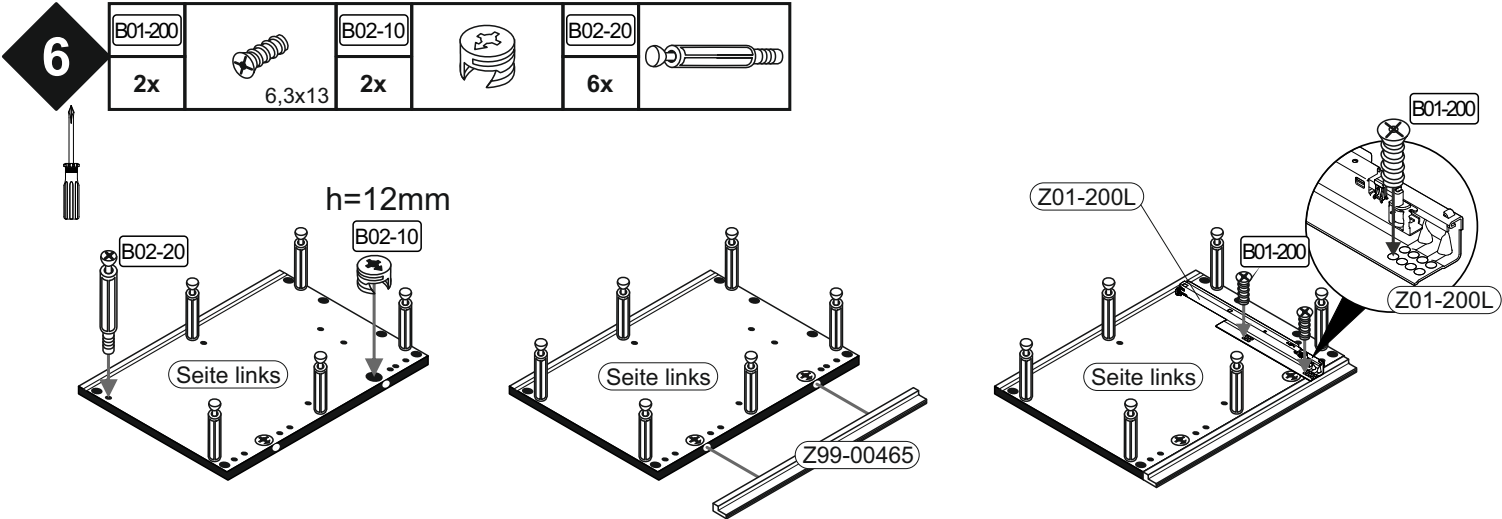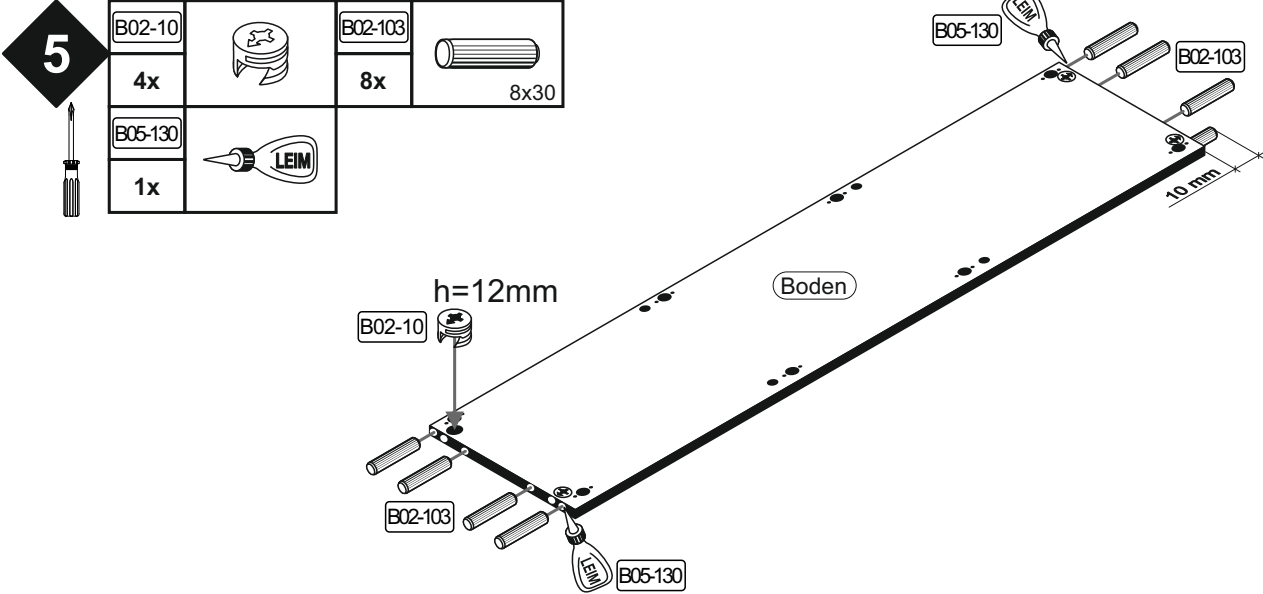




8

B01-80		B03-42	
4x	3,5x13	2x	8er

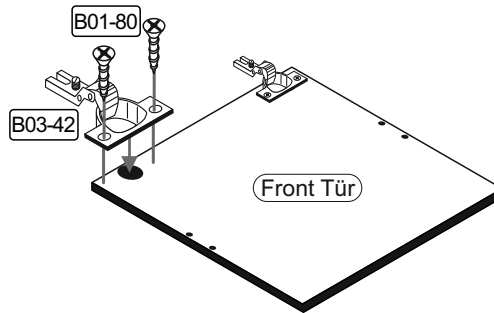







9

B01-200		B02-08		B02-20		B06-425	
2x	6,3x13	4x		4x		1x	

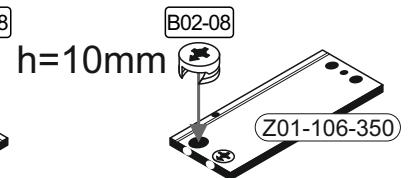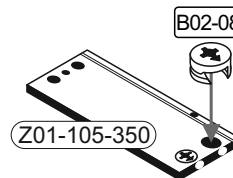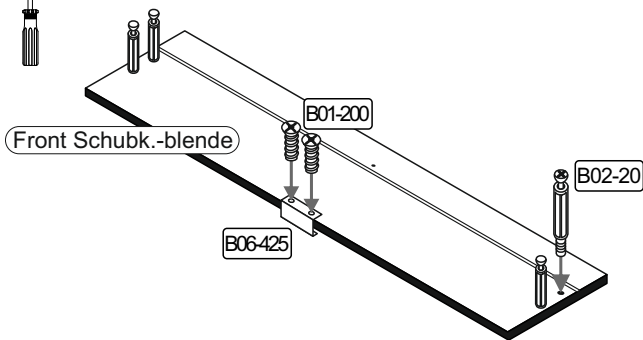

10


B01-30		B01-70	
13x	3x16	2x	3x30
B01-122			
2x	4x13		

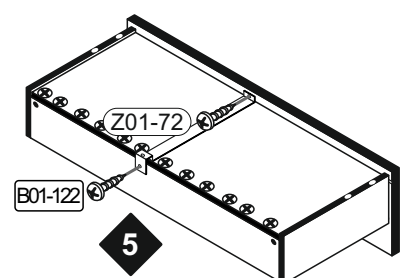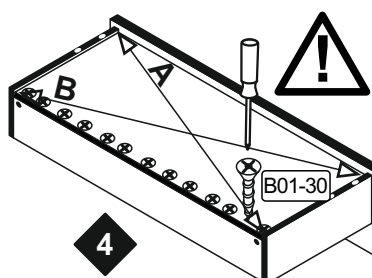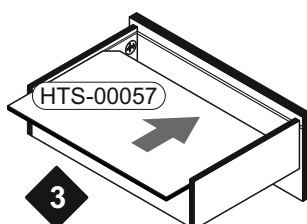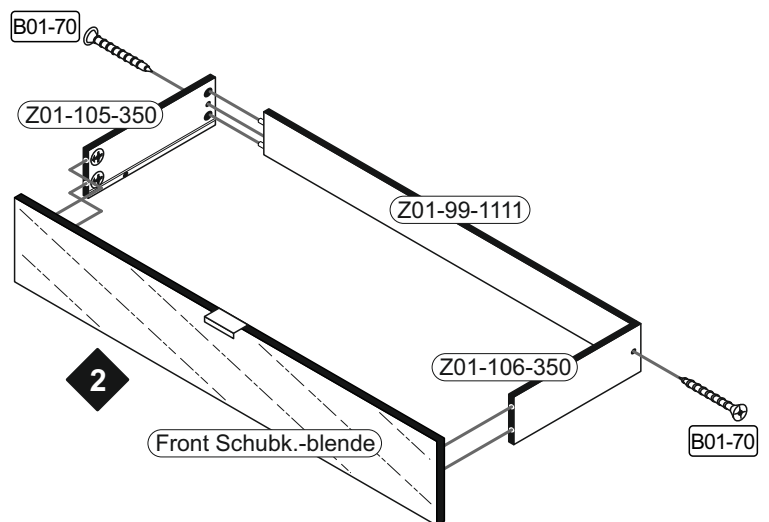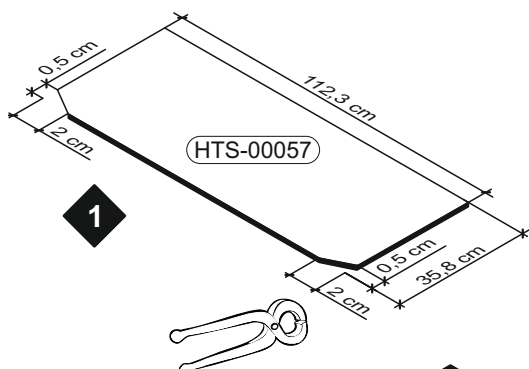

CHICAGO


11

B01-80		B01-200	
6x	3,5x13	2x	6,3x13
B03-42		B06-425	
3x	8er	1x	

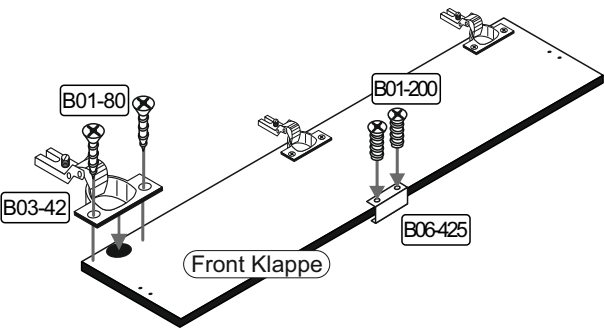


12



B01-10		B05-130	
2x	6,3x50	1x	

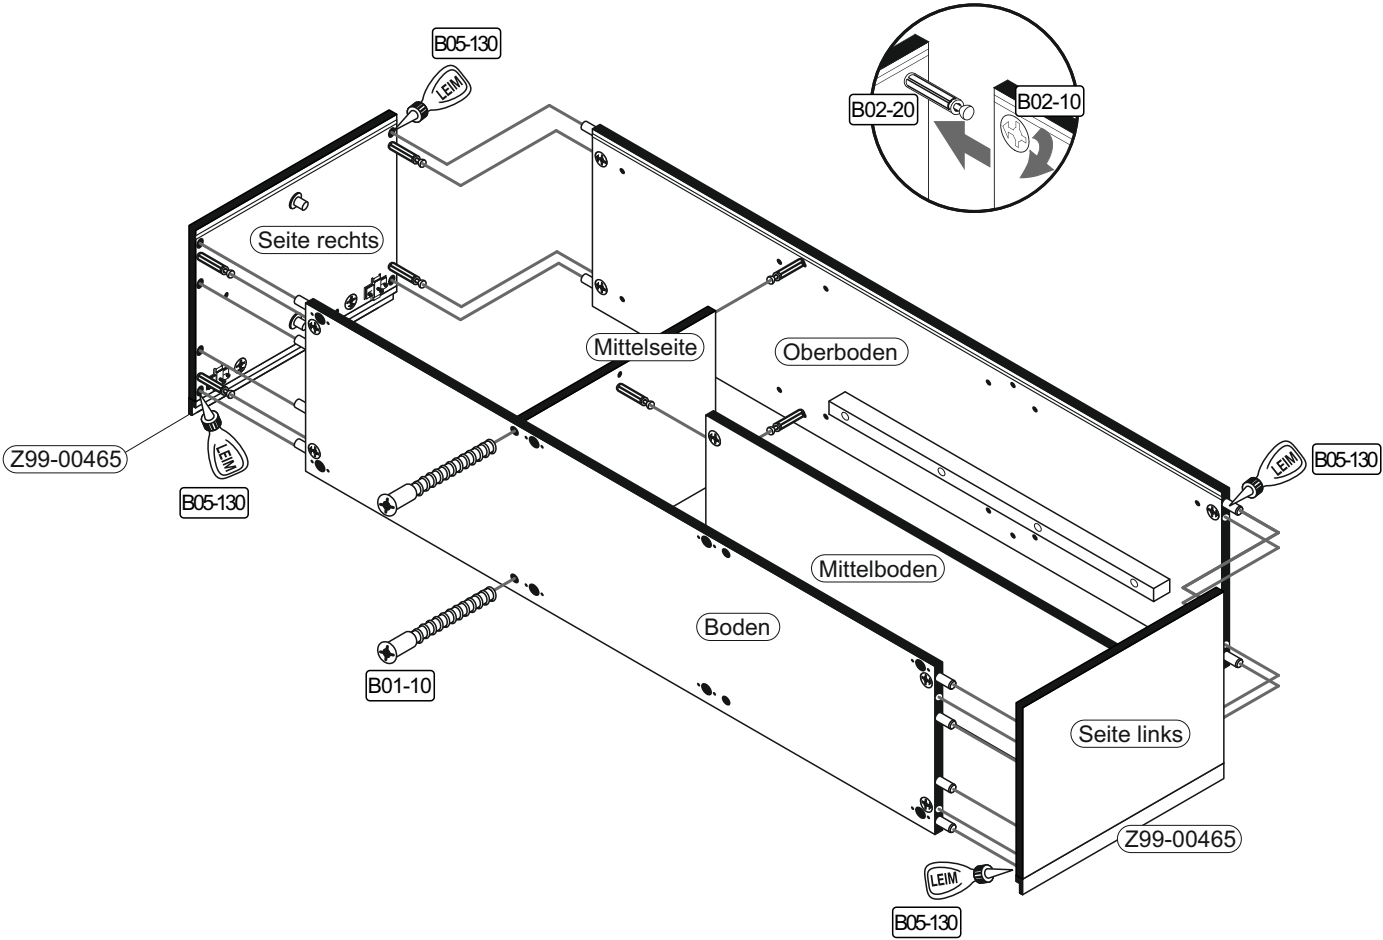

13




B01-30		B01-90	
32x	3x16	4x	3,5x20
B01-123			
12x	4x15		
B05-185			
4x			
B02-173			
6x			

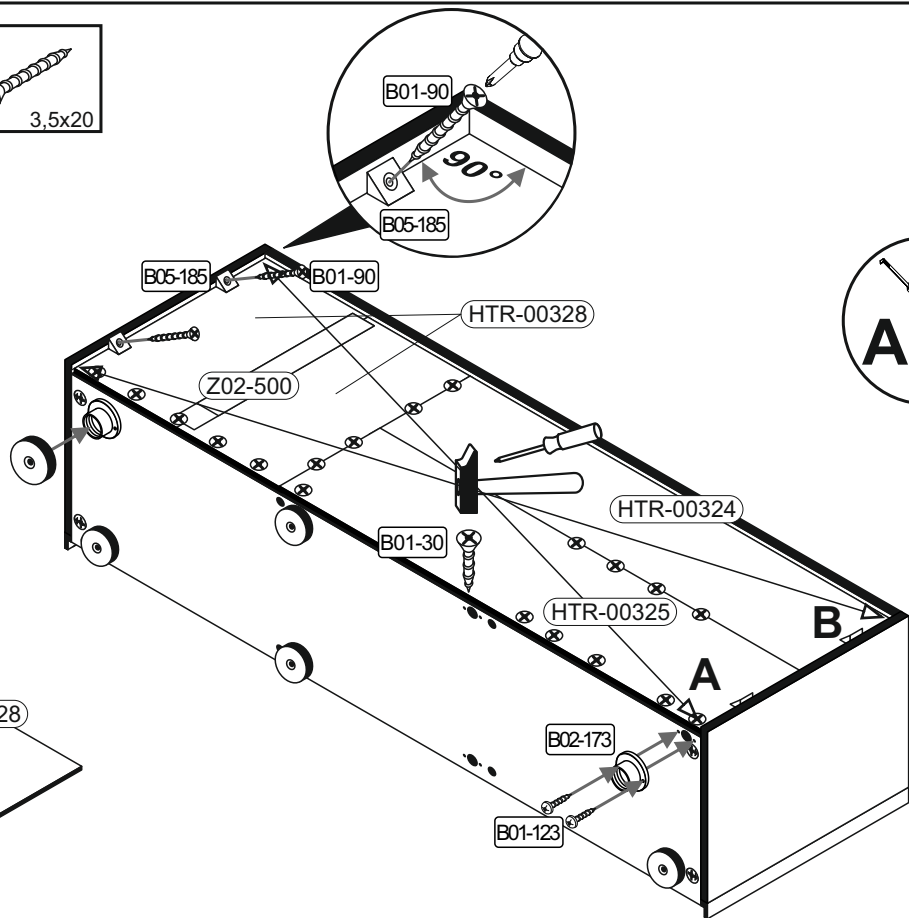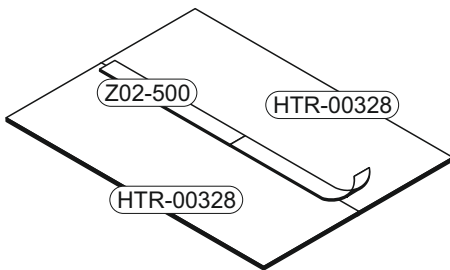


14



B05-01		B05-280	
10x		1x	

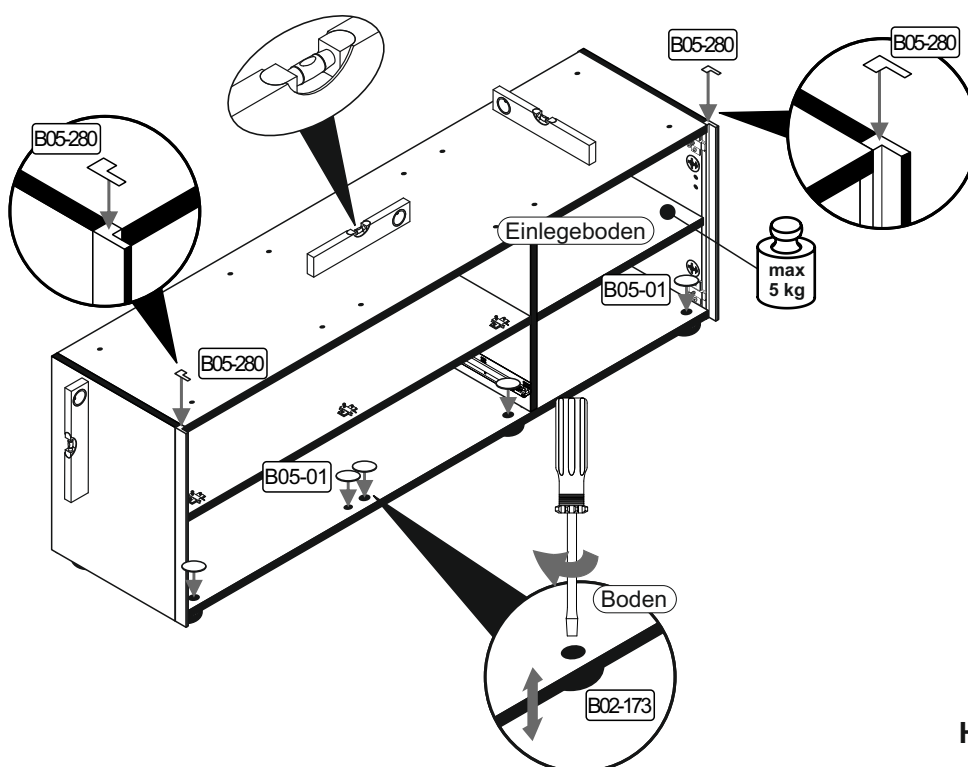

SCAN ME

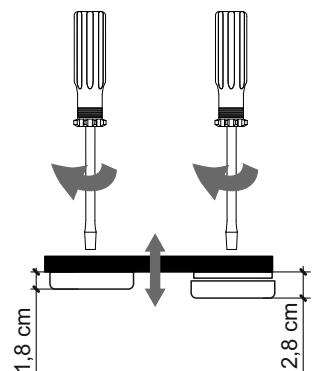


Höhenverstellung der Möbelfüße


15





Einbau des Schubkastens

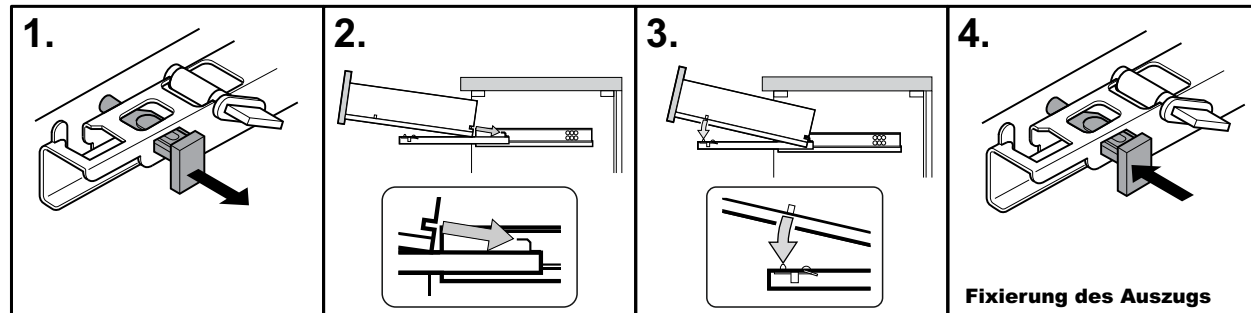



Ausbau des Schubkastens

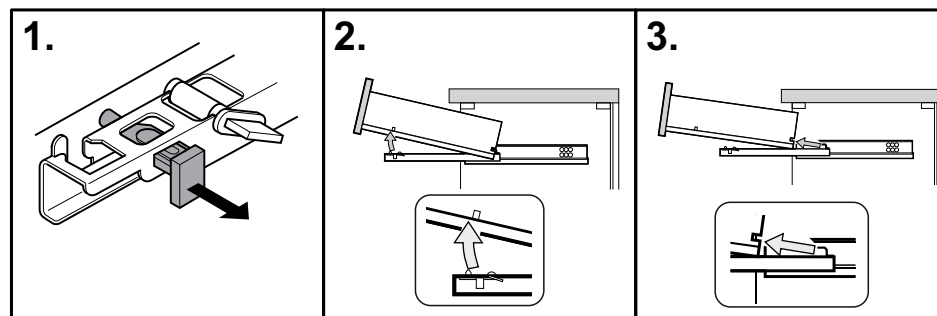




Höhenverstellung des Schubkastens

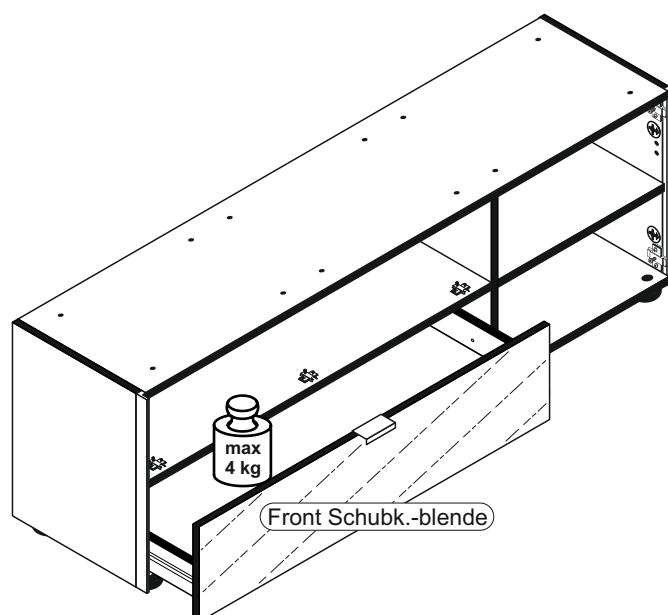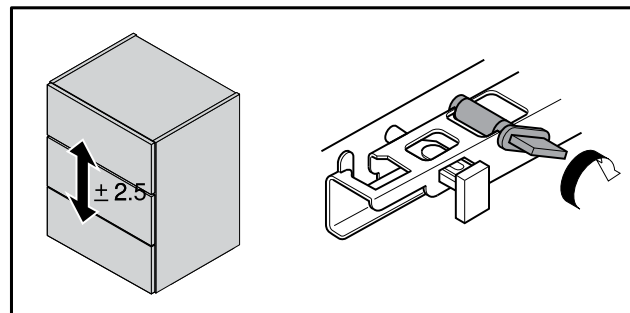



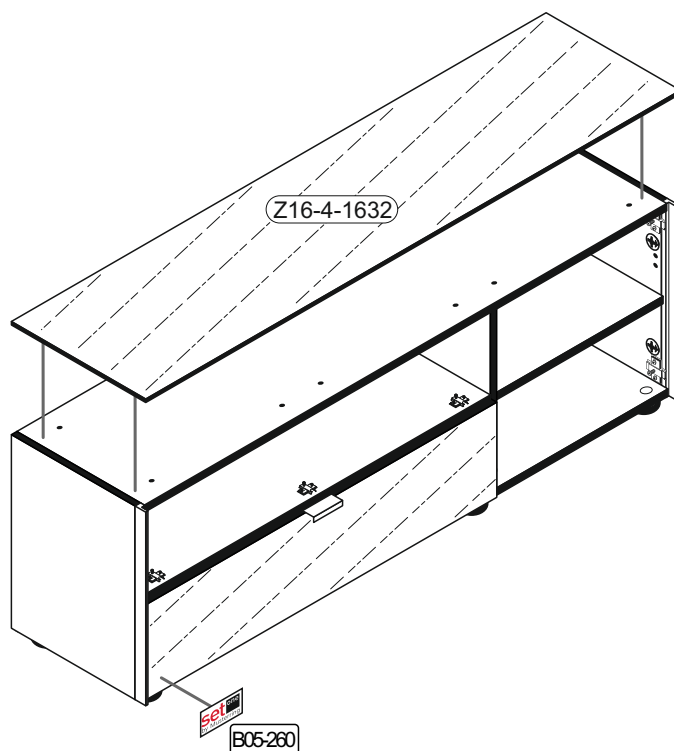


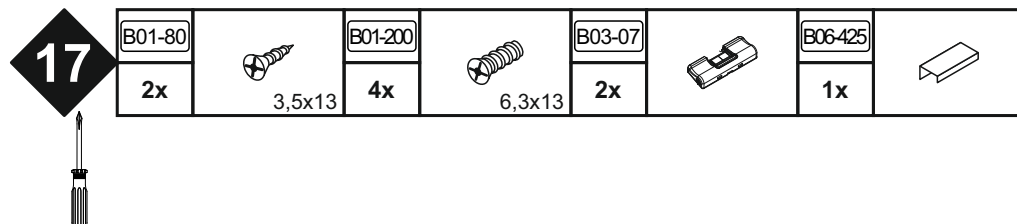

Stütze unten (Z07-27) überdrehen

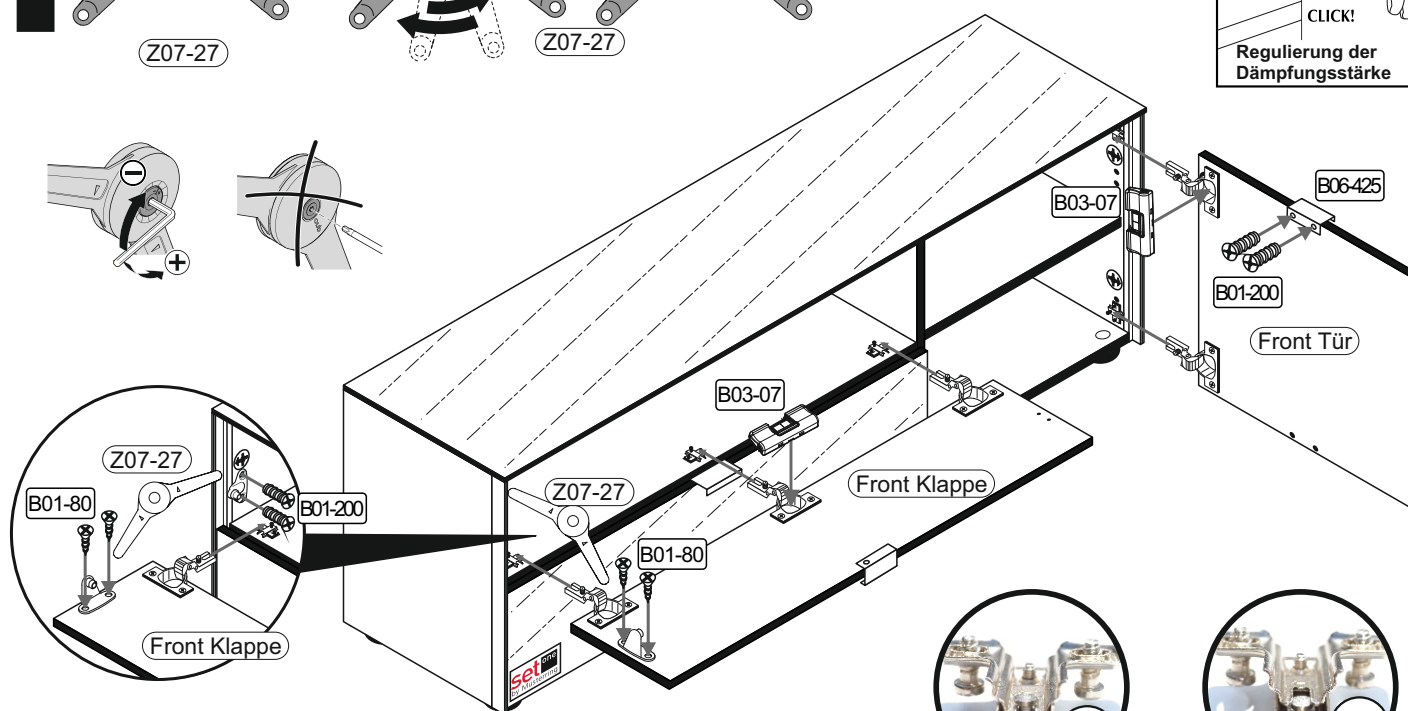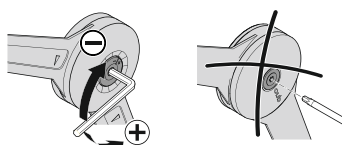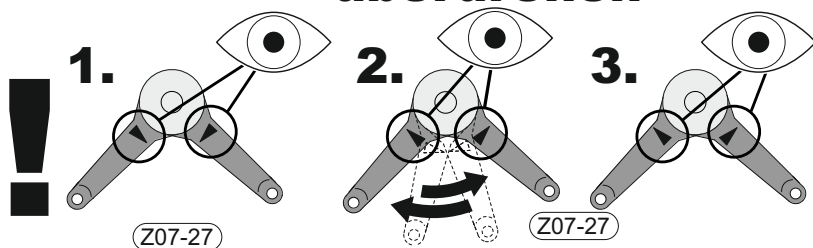

Montage der Türdämpfung

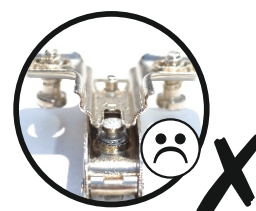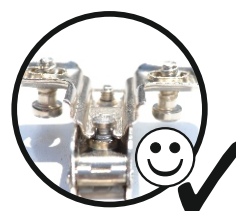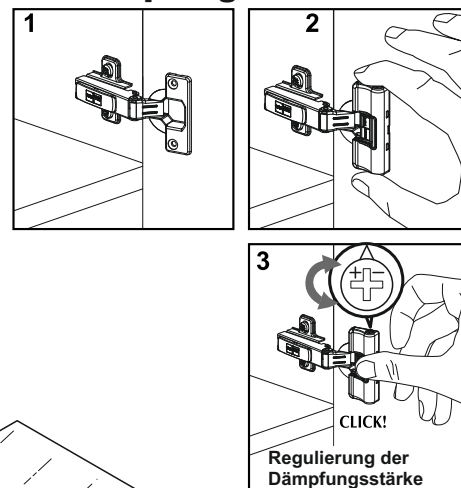

Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Výrovnejte dvířka (seříd'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare uși (ajustare balamale)
Kapıların ayarlanması (menteselerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

