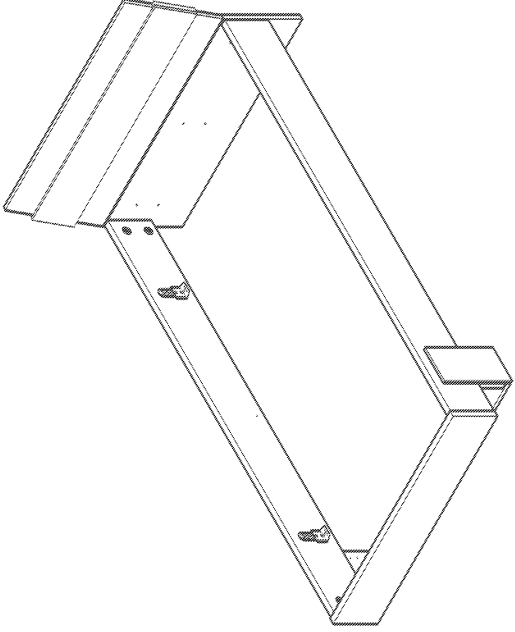
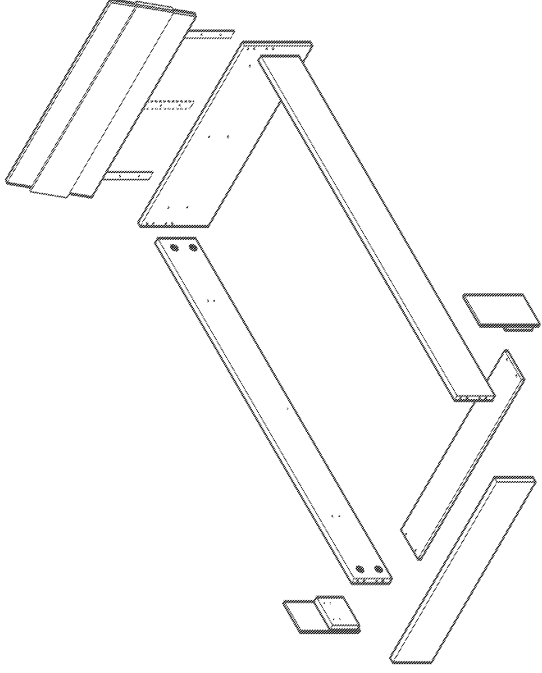


**rühr**Rühr-Bush GmbH&Co.KG  
Dammstraße 32  
33397 Rietberg  
GermanyFon +49 (0) 2944 981 198  
Fax +49 (0) 2944 981 310**Montageanleitung  
A03783.01**




Bitte unbedingt lesen. Bei Nichtbeachtung können wir keine Gewährleistung übernehmen!  
Bitte bewahren Sie diese Montageanleitung für die Produktkennzeichnung (Produktsicherheitsgesetz) und für evtl. spätere Rückfragen (wie z.B. Demontage) auf.

Bei Weitergabe bzw. Übergabe des Artikels übergeben Sie auch diese Montageanweisung.  
Attention! It is essential to read this. In case of non-compliance we can not accept any liability.  
Please retain these assembly instruction for product identification and all future references i.e. disassembling

With all transfers or deliveries of this item these assembly instruction should always be forwarded.  
0280120


**rühr****Montageanleitung  
A03783.02****rühr****Montageanleitung  
A03783.03**

961998 8 x	961998 6 x (9x)	960276 1 x
961998 6 x	961993 2 x	966449 8 x
966490 4 x 7,0x60	966274 1 x	960339 4 x (6 x)
966125 4 x	966694 16 x	0966389 4 x (6x)

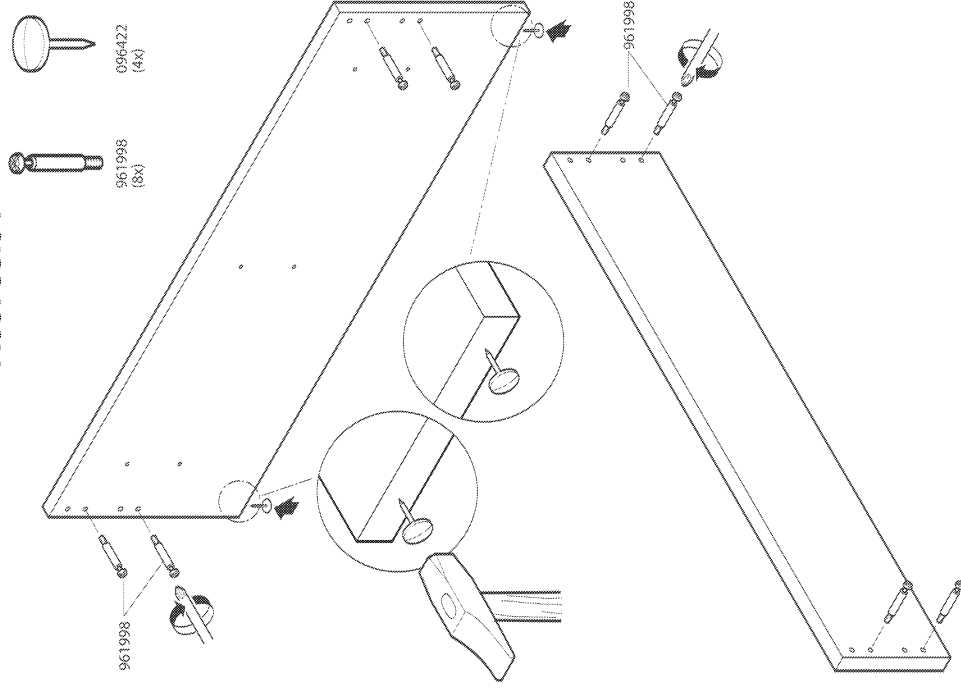**rühr****Montageanleitung  
A03783.04**

**röhr**

Montageanleitung  
A03783.05



096422  
(4x)




096274




096490  
(4x)

7,0x60

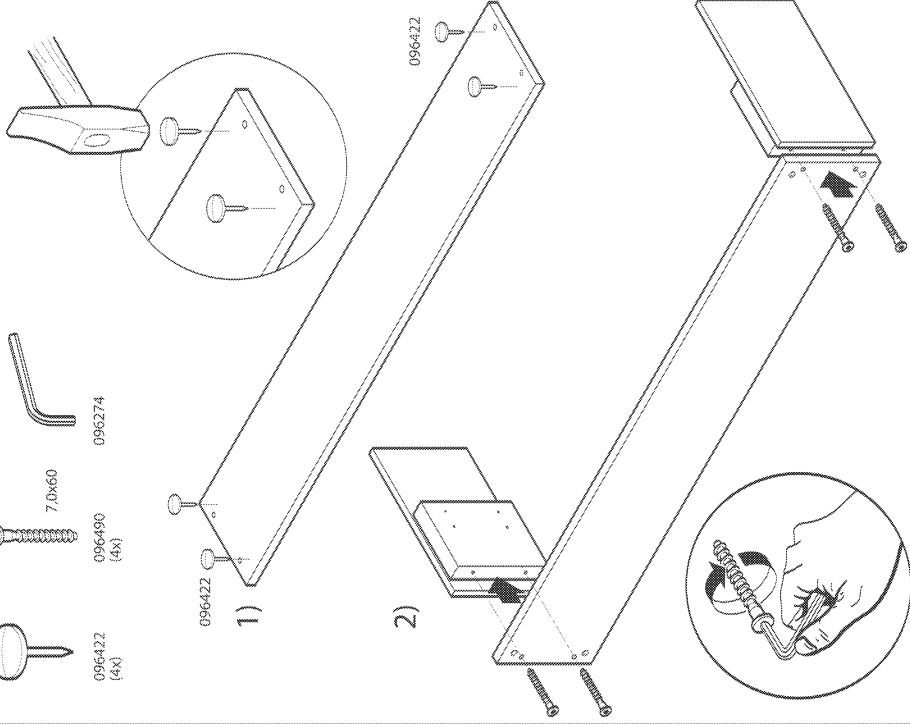

**röhr**

Montageanleitung  
A03783.06

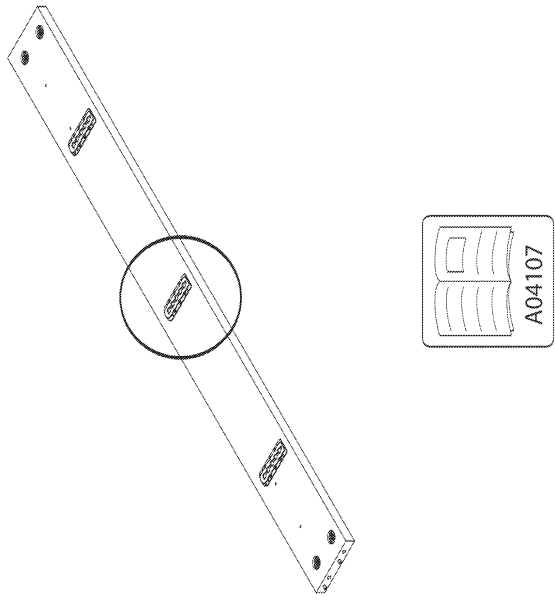


**röhr**

Montageanleitung  
A03783.07



960276

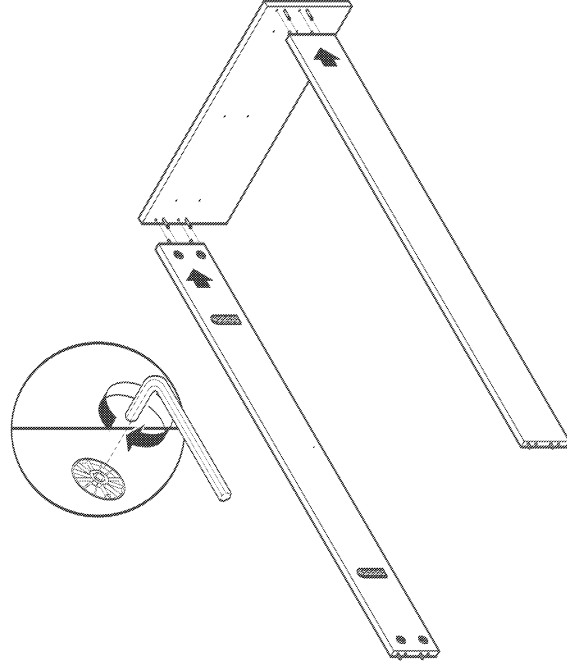


**röhr**

Montageanleitung  
A03783.08




960276

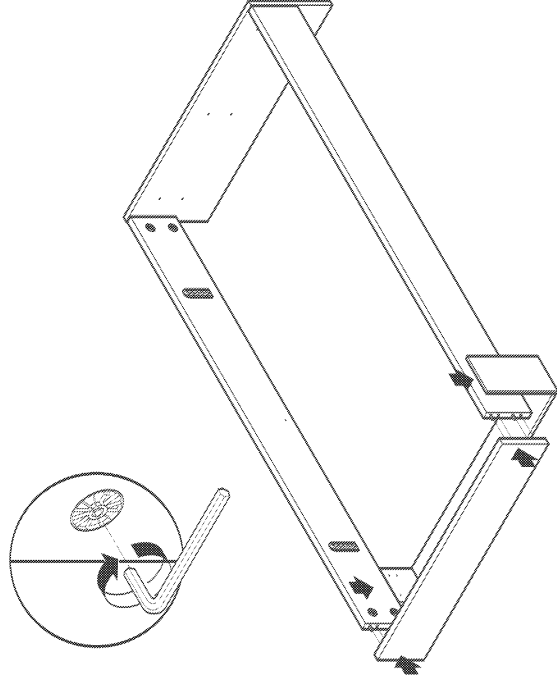

**röhr**

Montageanleitung  
A03783.09






951993  
(2X)




PH 4,0x17

096449  
(8X)

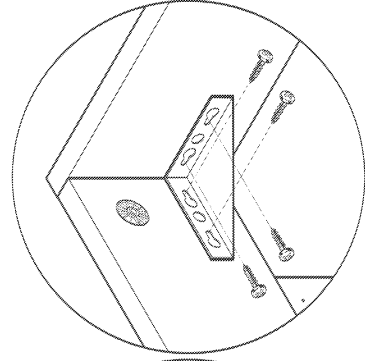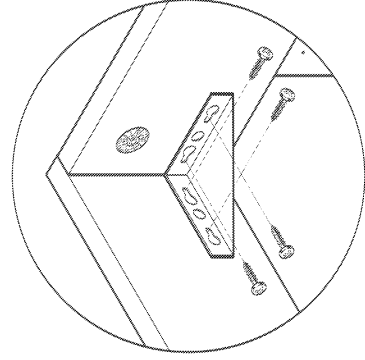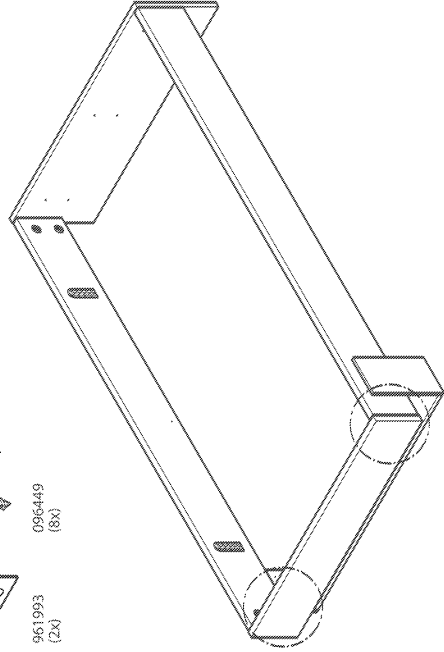

**röhr**

Montageanleitung  
A03783.10




PH 4,0x20

096694  
(16X)



096125  
(4X)

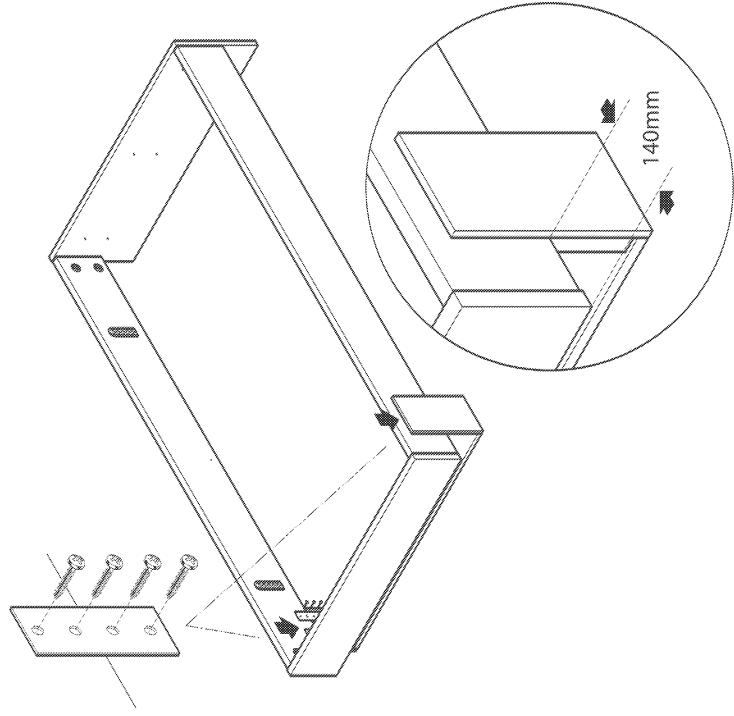


**röhr**

Montageanleitung  
A03783.11



096389  
4X (6X)




PH 5,0x20

096436  
5X (9X)




096274

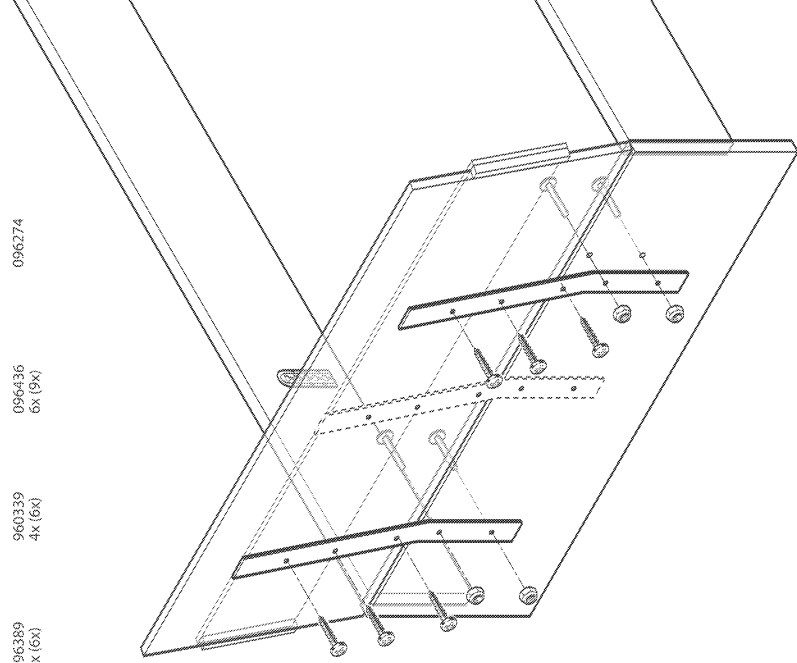


**röhr**

Montageanleitung  
A03783.12

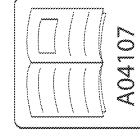


A04107

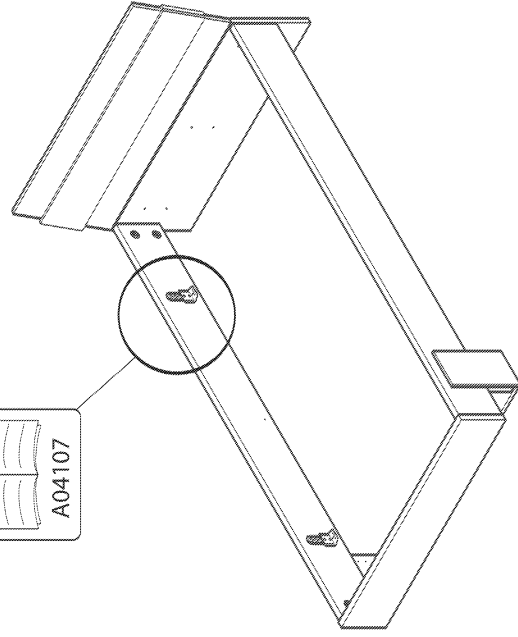

röhr

Montageanleitung  
A04107.01




961616  
(1 X)



085100  
(1 X)


Der Gurt kommt nur bei Betten  
ab einer Breite von 120cm  
zum Einsatz!

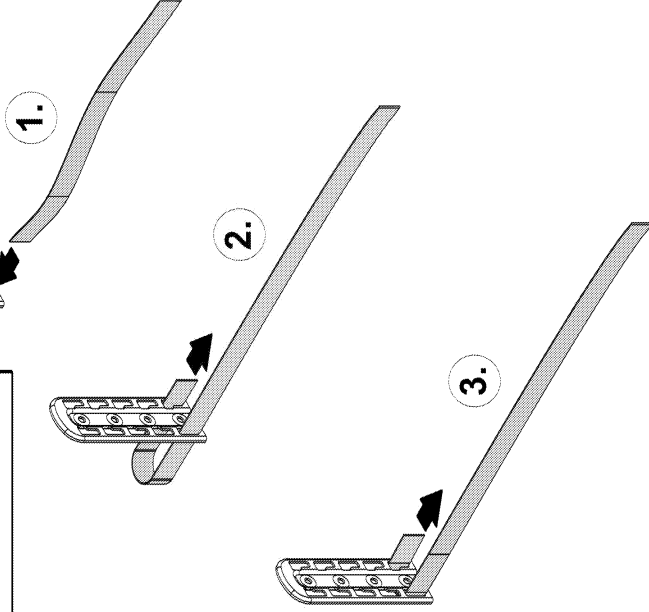

0120220

röhr

Montageanleitung  
A04107.02




961616  
(3 X)



096525  
(12 X)




8 x 30  
092713  
(4 X)

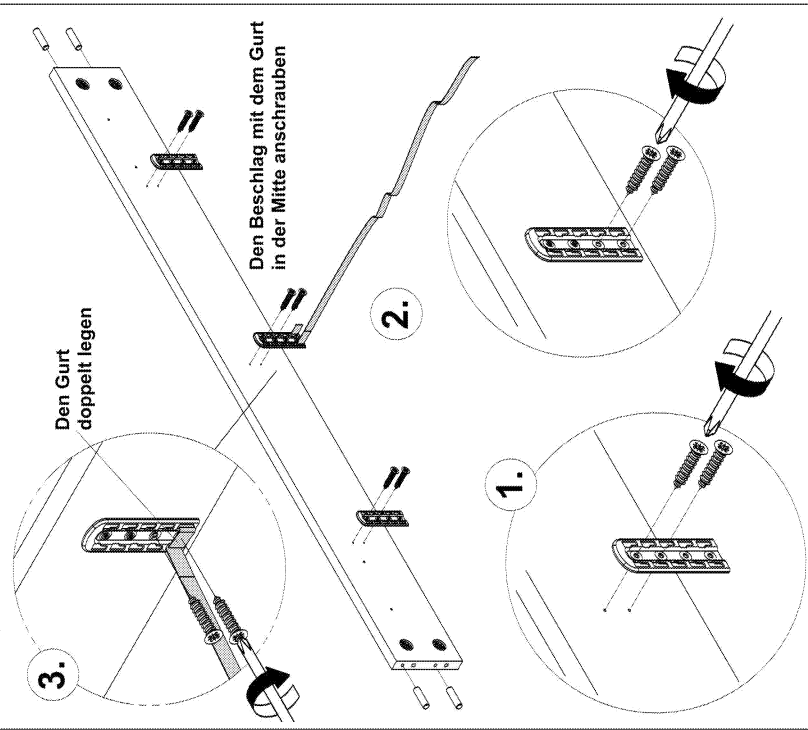

röhr

Montageanleitung  
A04107.03



961616  
(2 X)




096525  
(6 X)



8 x 30  
092713  
(4 X)


in der Mitte keinen  
Beschlag anschrauben!

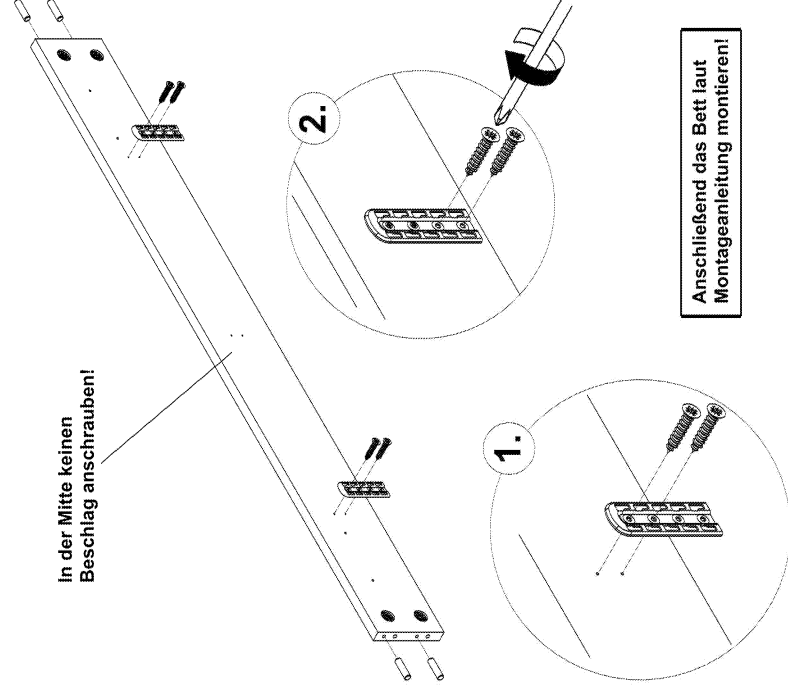


Anschließend das Bett laut  
Montageanleitung montieren!

röhr

Montageanleitung  
A04107.04



961616  
(1 X)

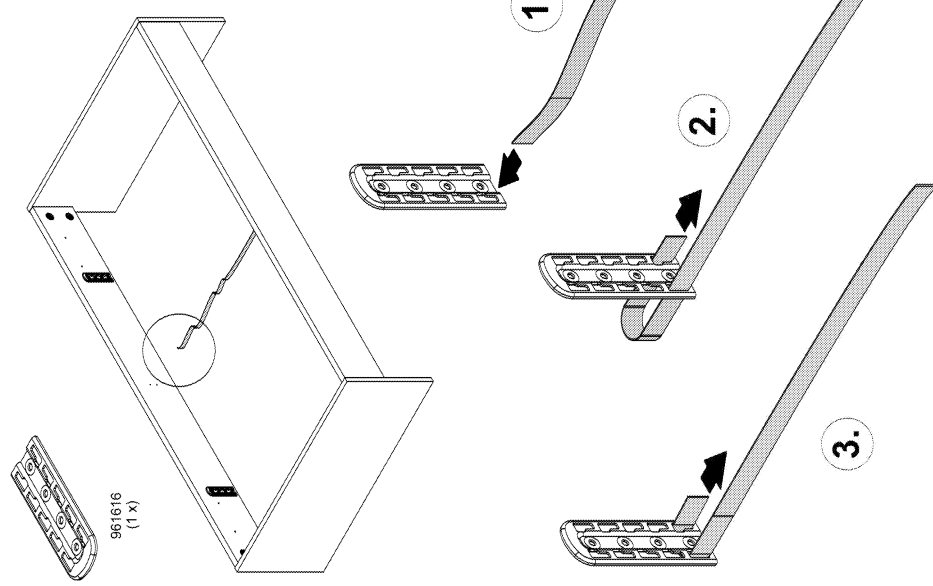



röhr®

Montageanleitung  
A04107.05



4,5 x 25

096525  
(2 x)

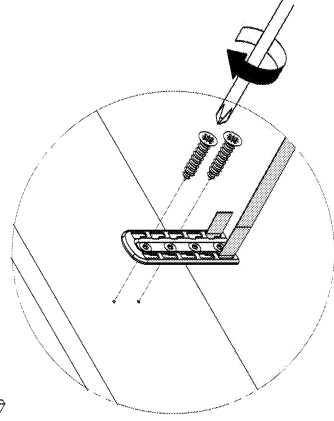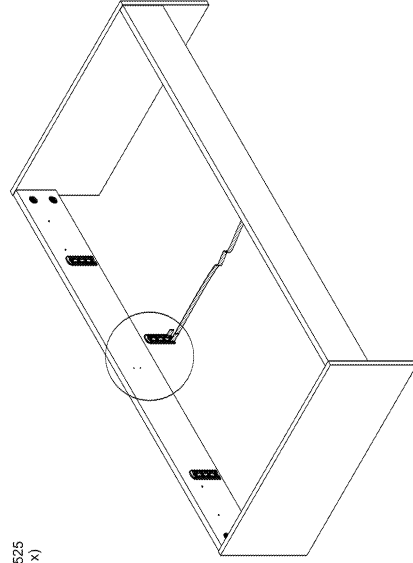


röhr®

Montageanleitung  
A04107.06




4,5 x 25


096525  
(2 x)

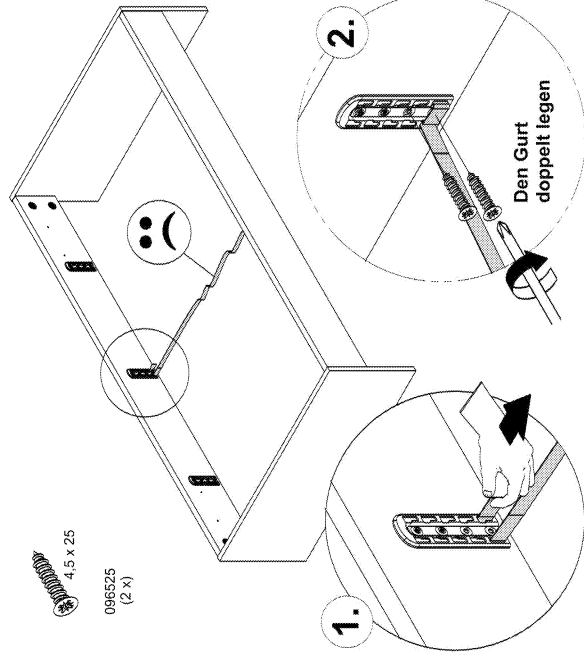

1.

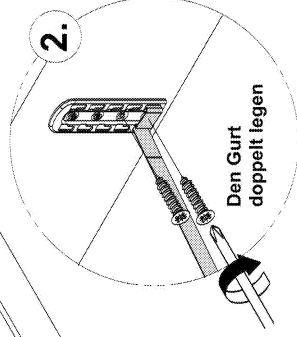

Den Gurt  
doppelt legen

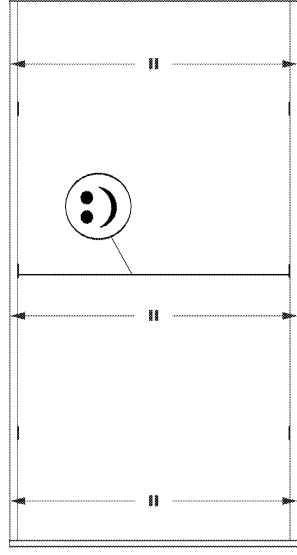


röhr®


Montageanleitung  
A04107.07



961617  
(6 x)

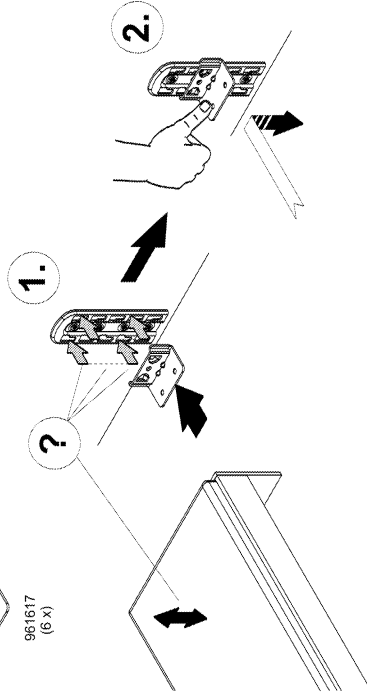

1.

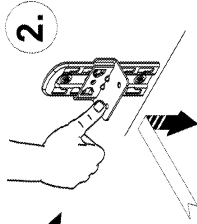

2.

