

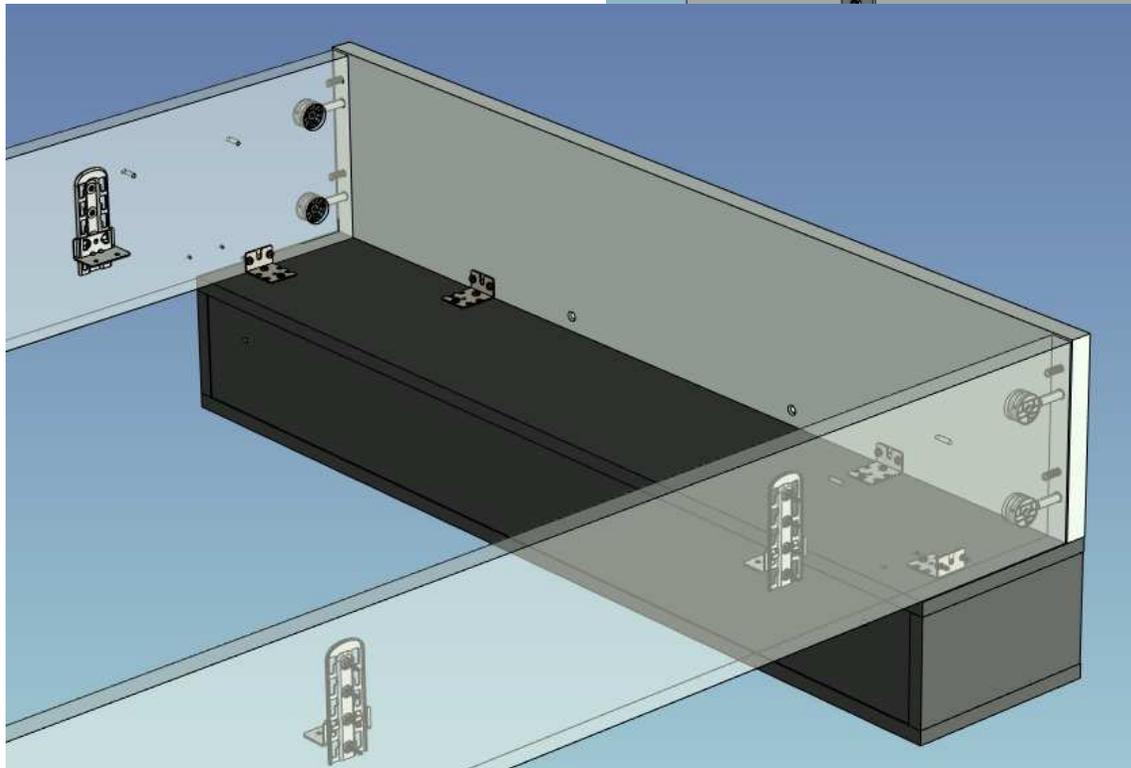



Liegenbett 356 079-081

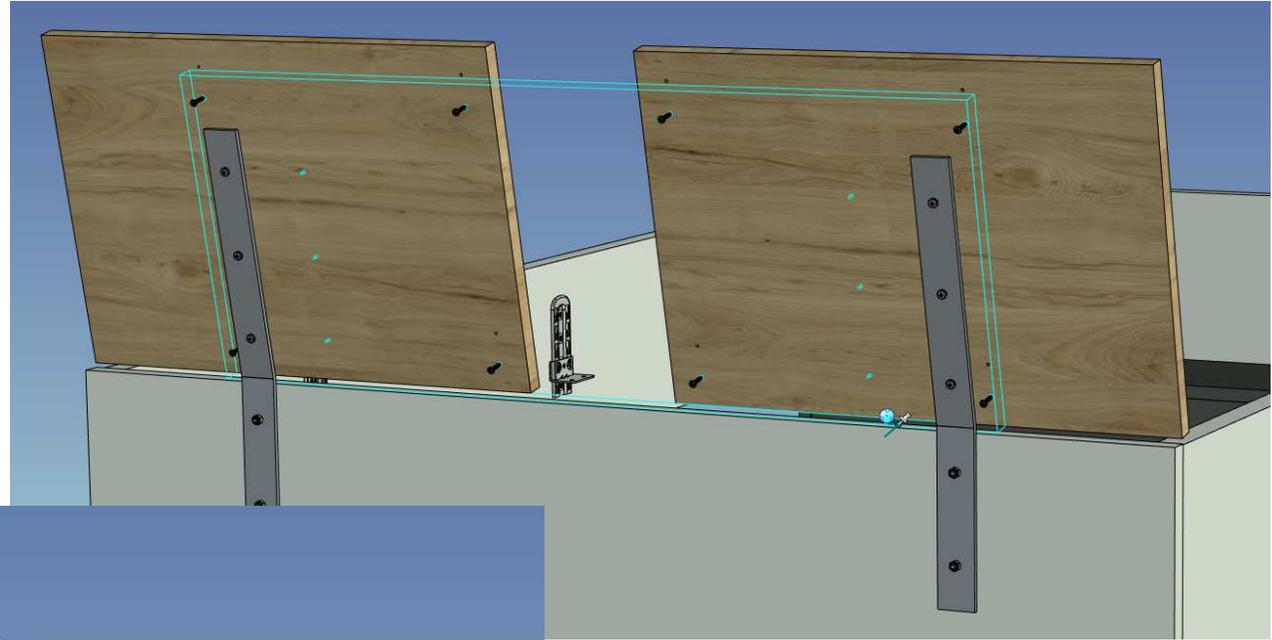

Montageanleitung A04107.01

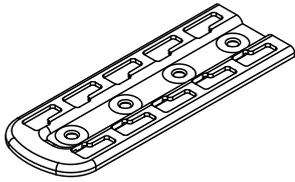


961616
(1 x)

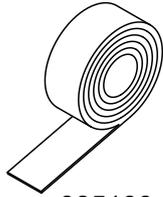


085100
(1 x)


**Der Gurt kommt nur bei Betten
ab einer Breite von 120cm
zum Einsatz!**



1.

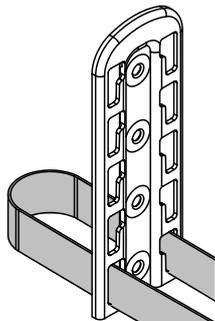


2.

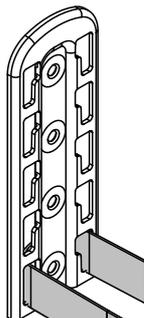

3.


Montageanleitung A04107.02

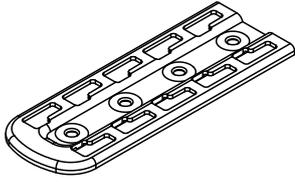

961616
(3 x)




096525
(12 x)




092713
(4 x)

4,5 x 25


8 x 30

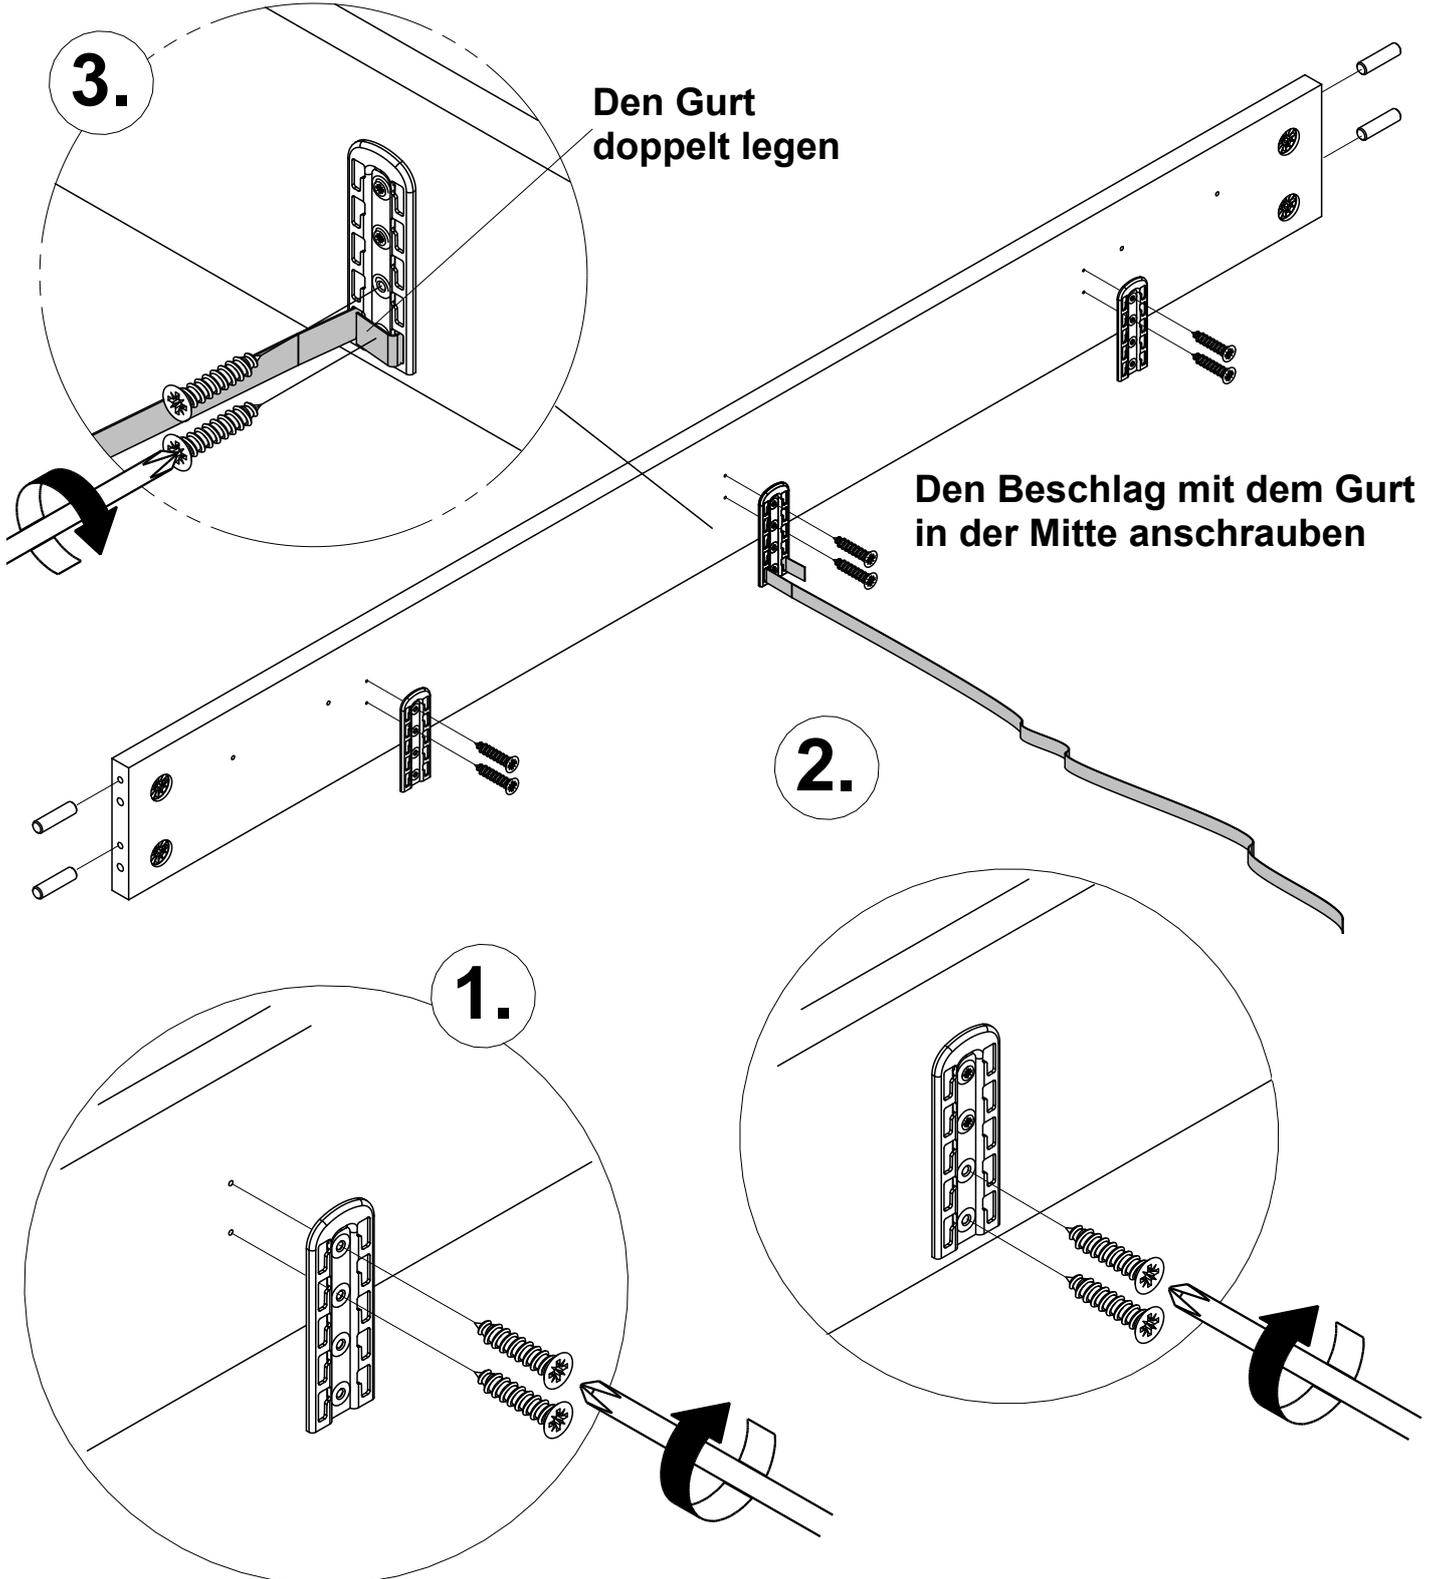


Montageanleitung A04107.03

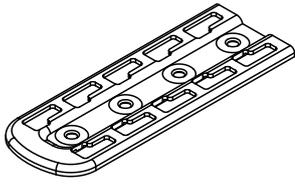

961616
(2 x)





4,5 x 25
096525
(8 x)




8 x 30
092713
(4 x)

**In der Mitte keinen
Beschlag anschrauben!**

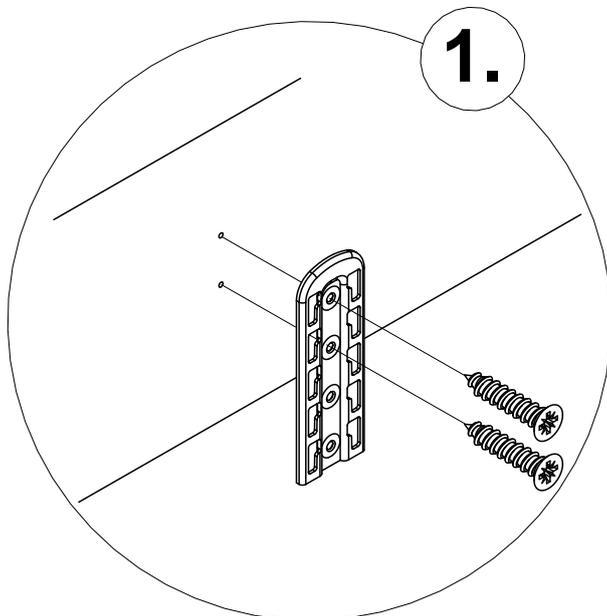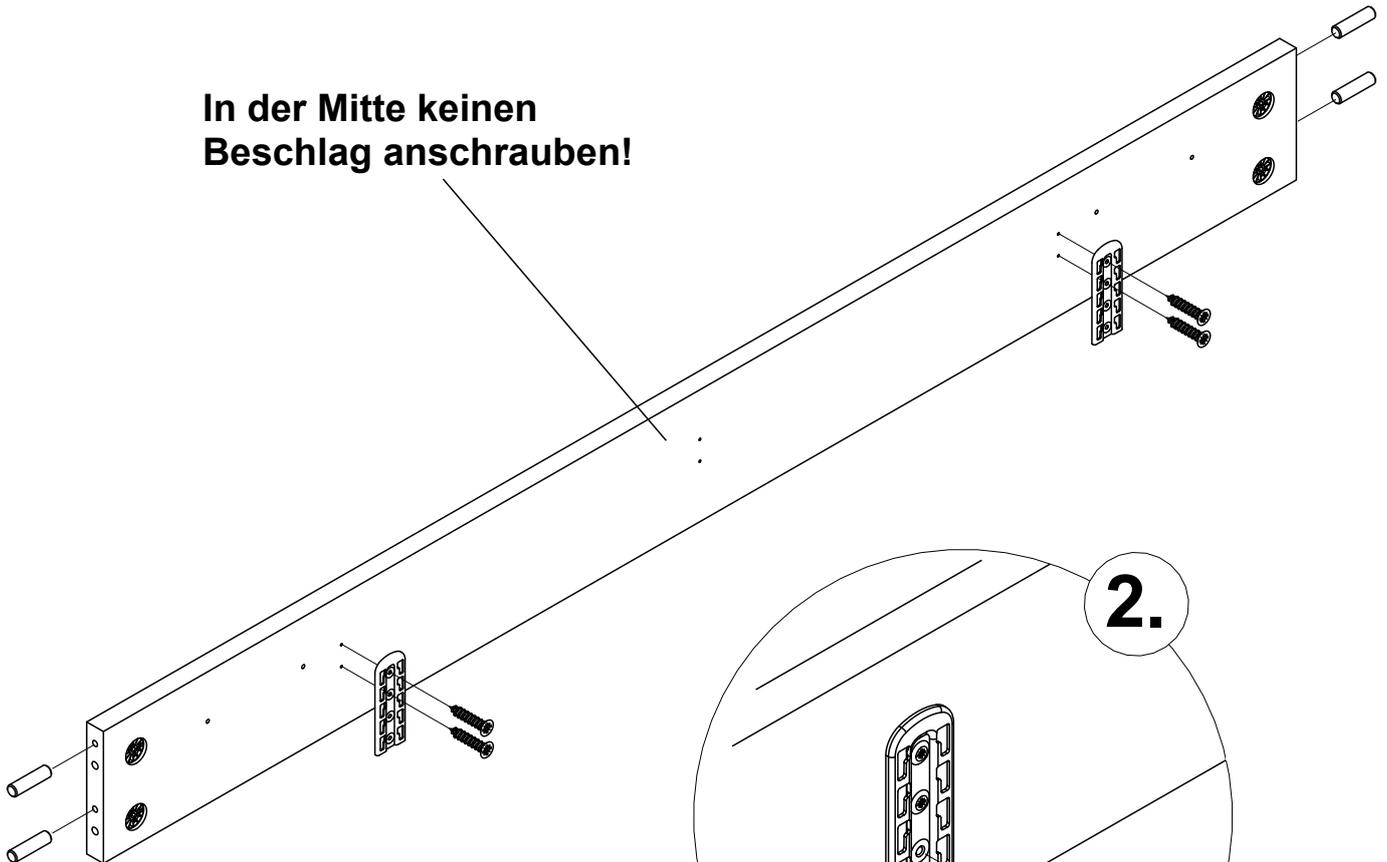


1.

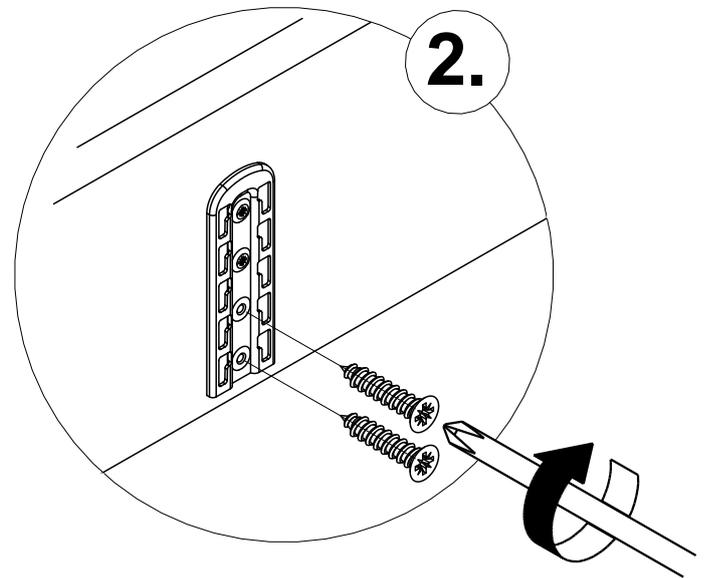



2.

**Anschließend das Bett laut
Montageanleitung montieren!**


Montageanleitung A04107.04

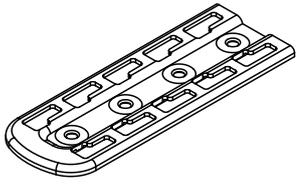


961616
(1 x)

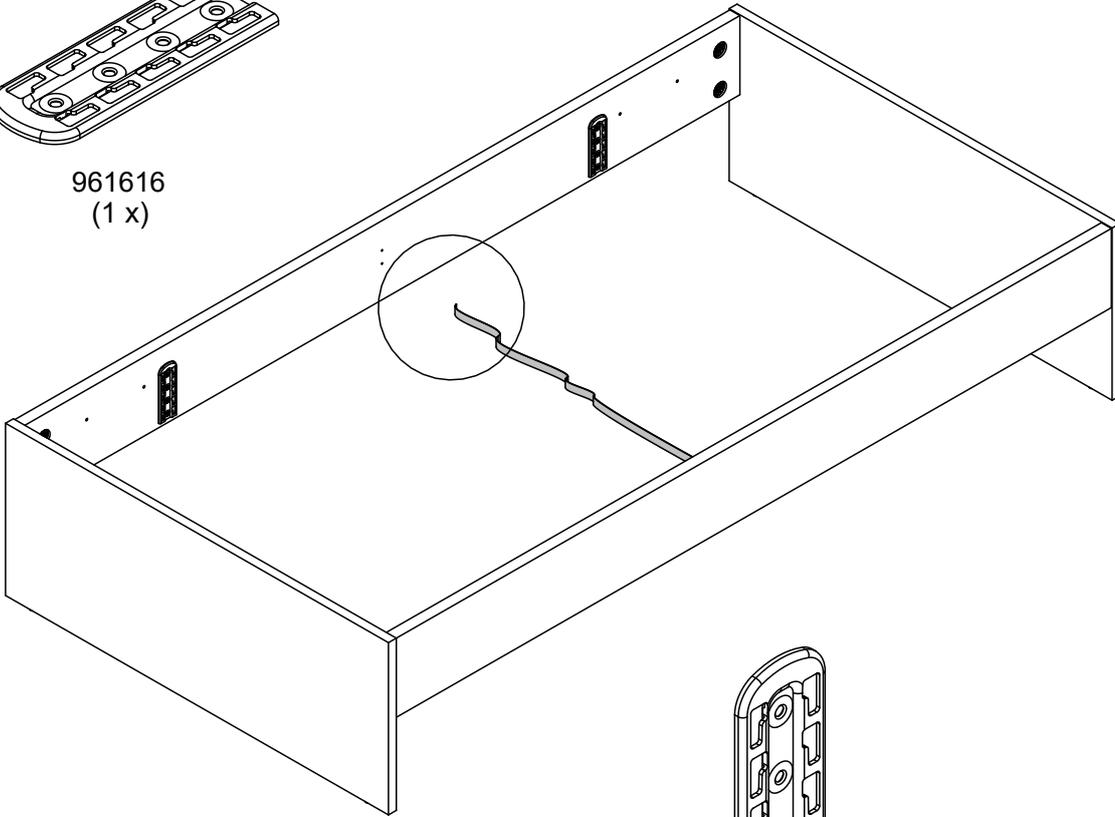


1.

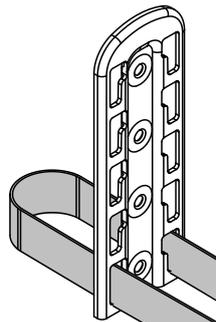

2.




3.


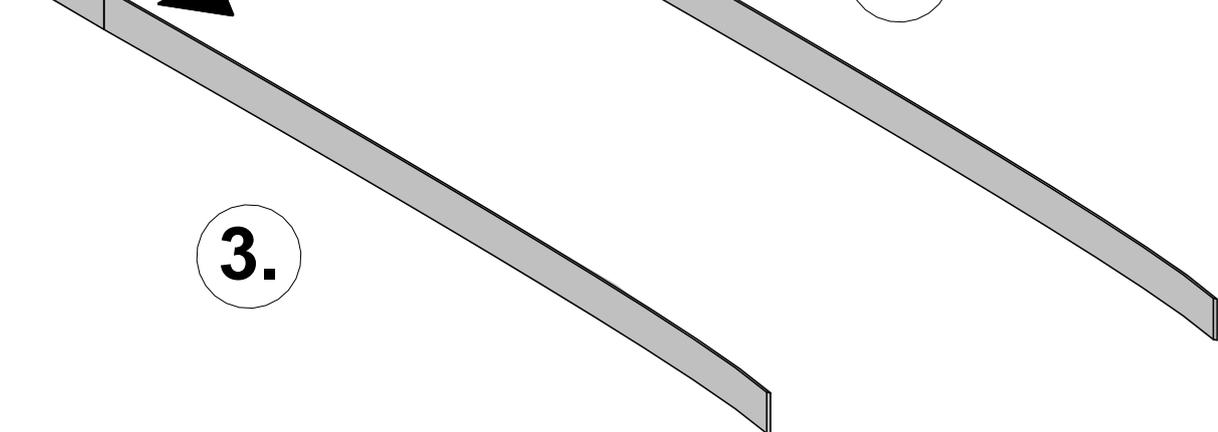


röhr[®]


Montageanleitung A04107.05







096525
(2 x)

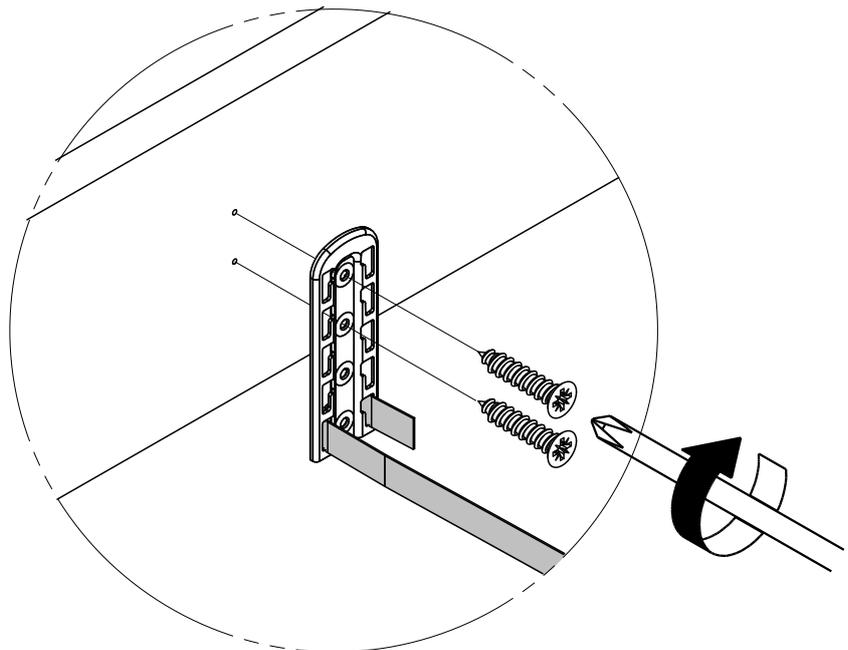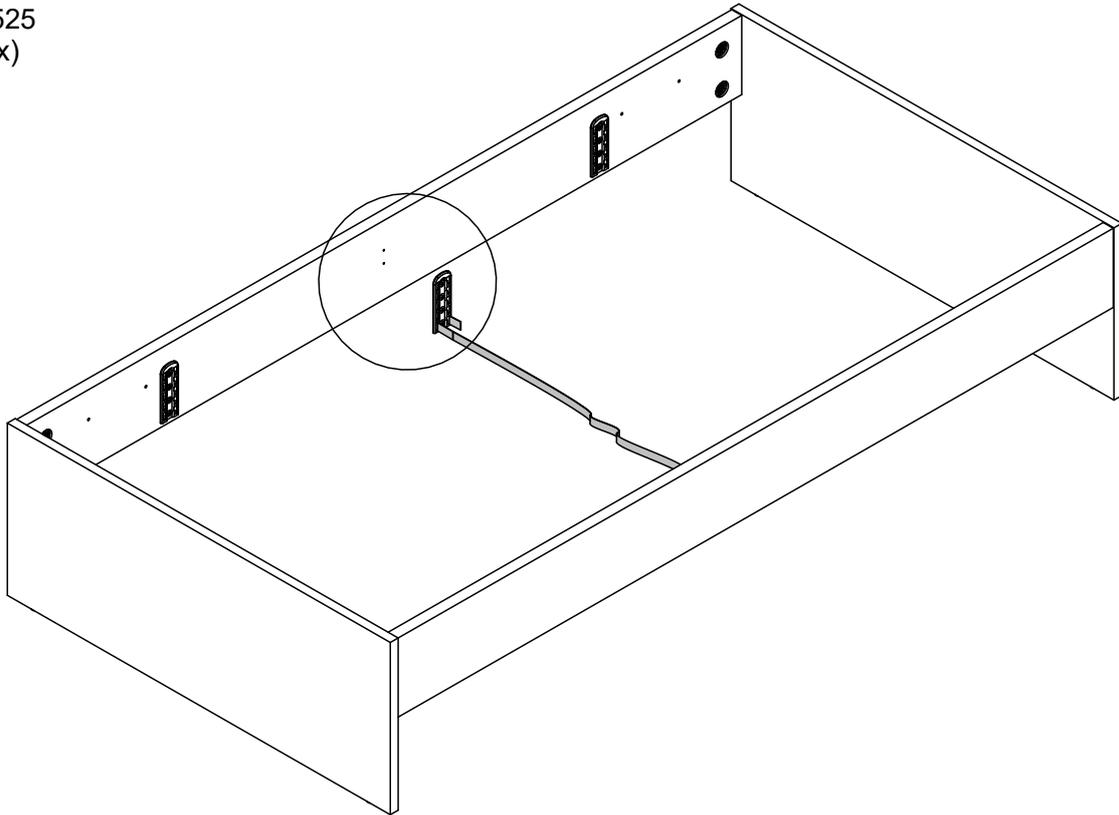

Montageanleitung A04107.06




096525
(2 x)

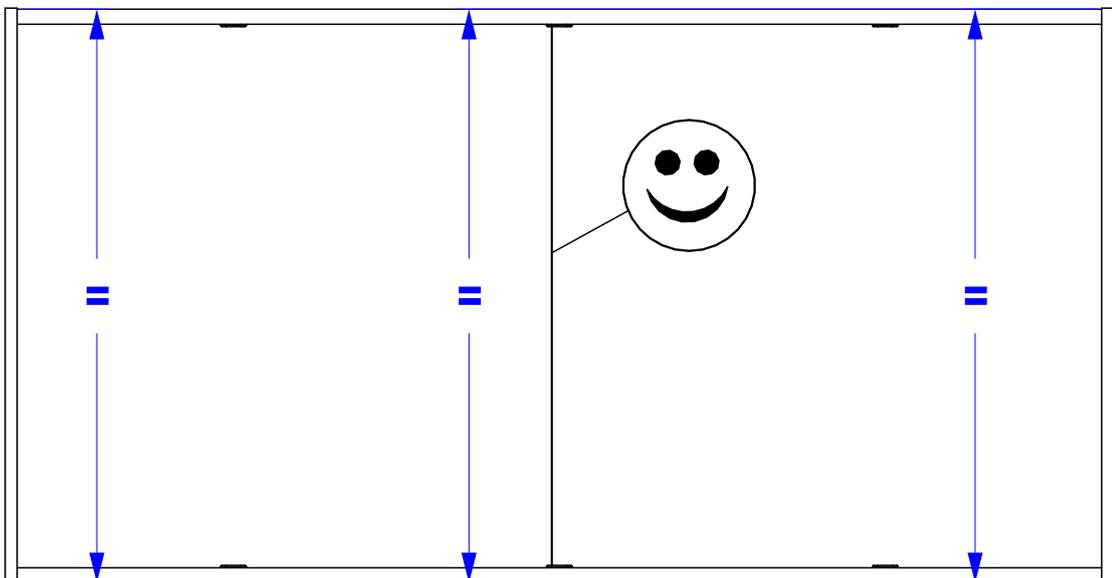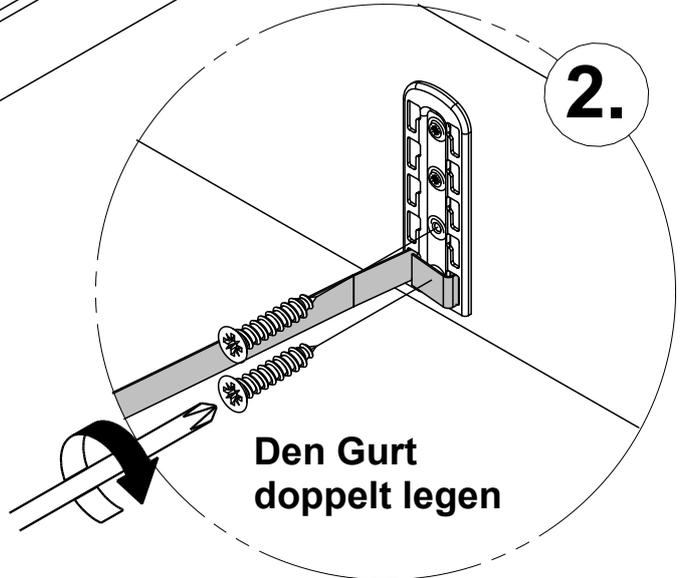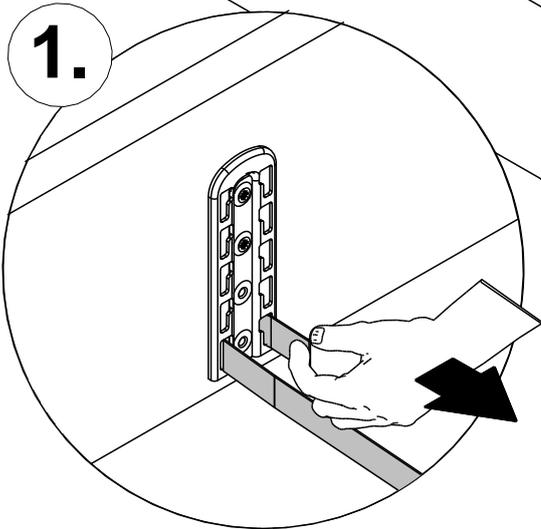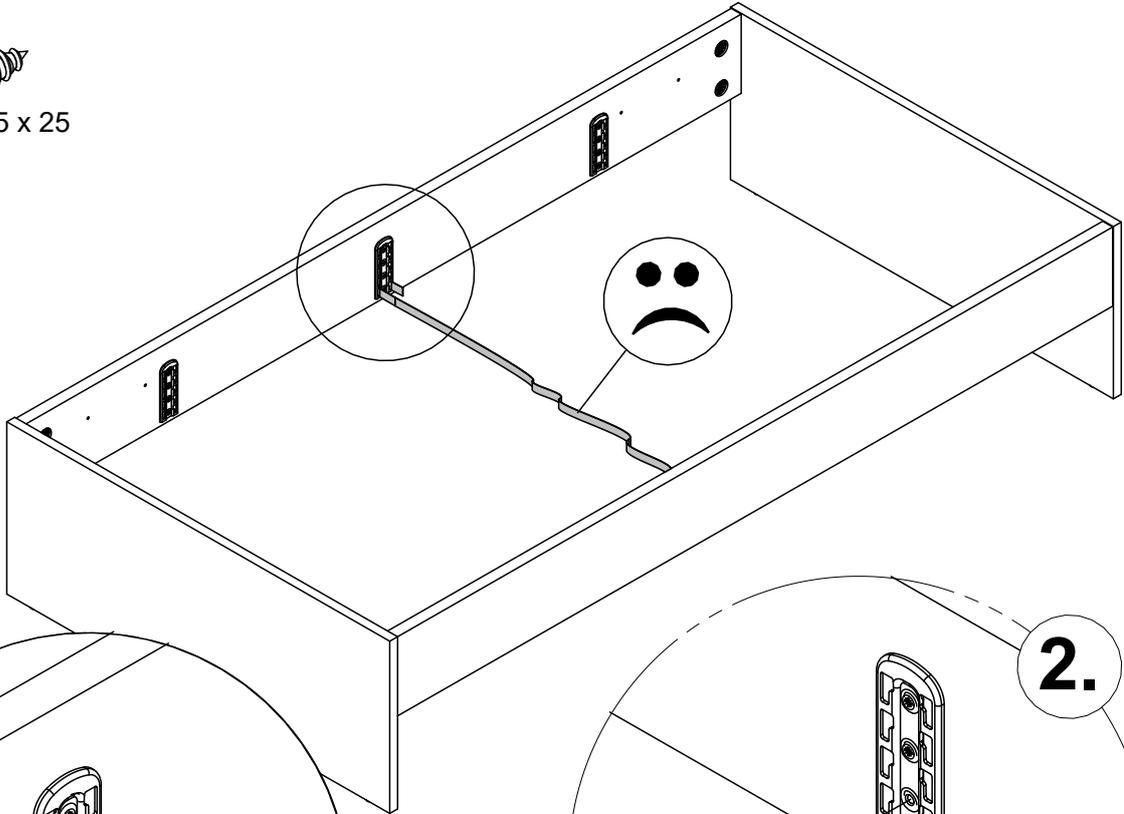

röhr[®]

Montageanleitung A04107.07

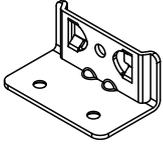

961617
(6 x)

