

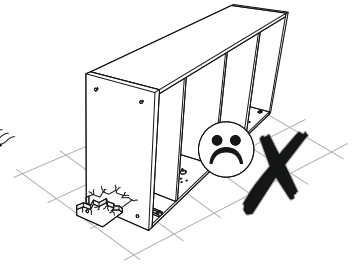
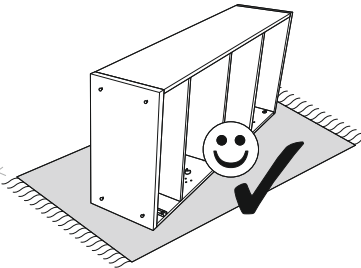
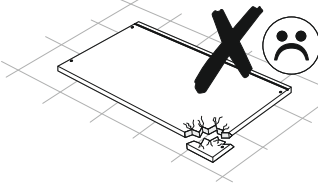
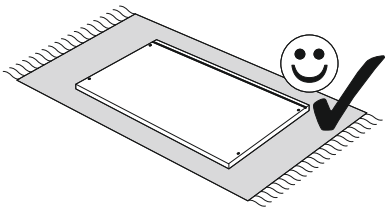
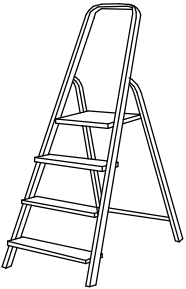
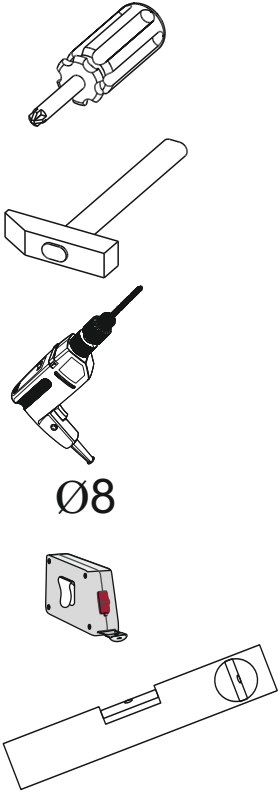
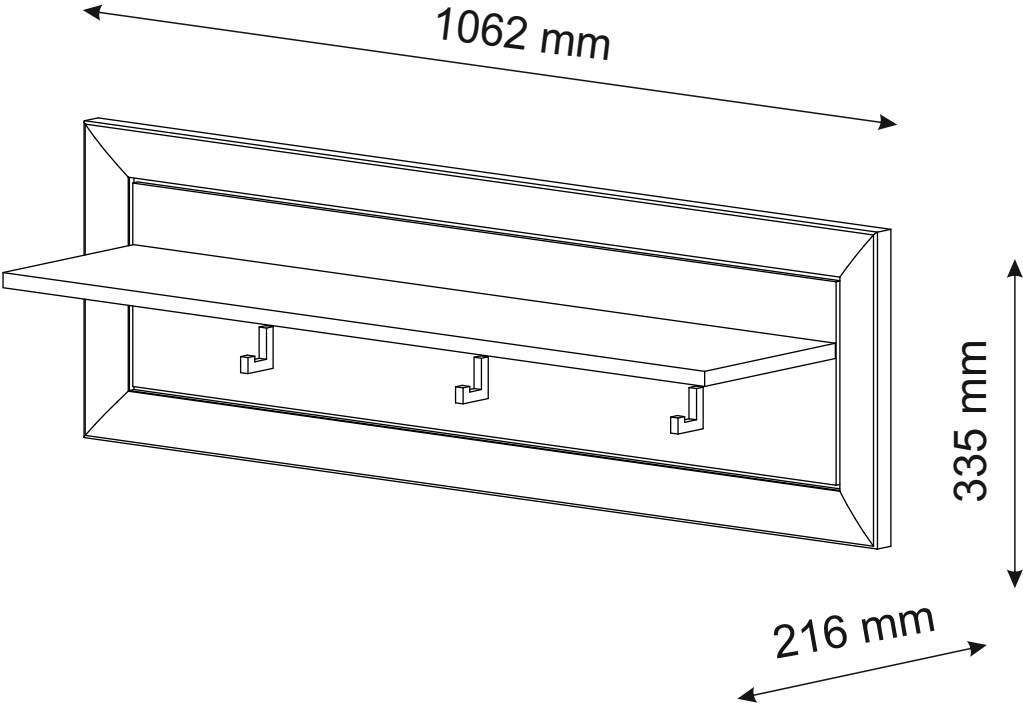








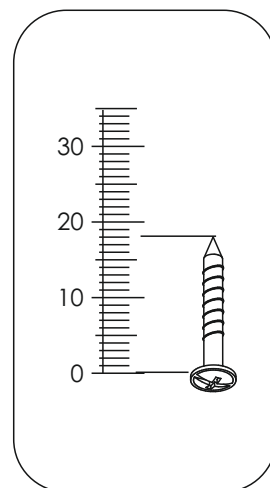
CAMRON - Wandboard 1062x335

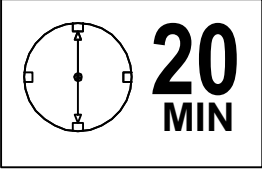


CAMRON - Wandboard 1062x335


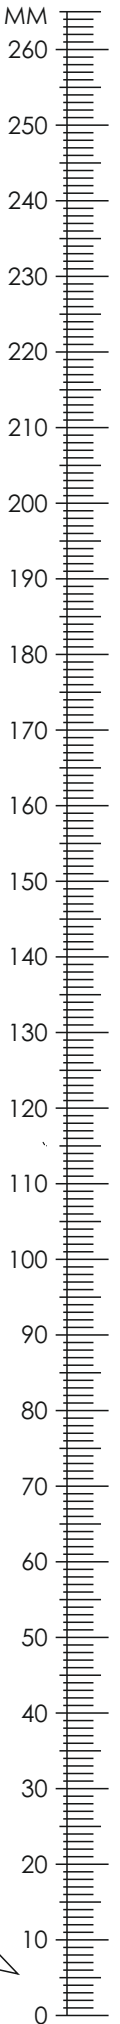


<p>B2 f 7 x 70 mm x7</p> 	<p>D22 5 x 11 mm x4</p> 	<p>E1 8 x 40 mm x2</p> 
<p>H6 4 x 22 mm x6</p> 	<p>K 4mm x1</p> 	<p>P16 x3</p> 






CAMRON - Wandboard 1062x335




1	940	220	16	x1	1/1
2	1062	335	25	x1	1/1
					1/1

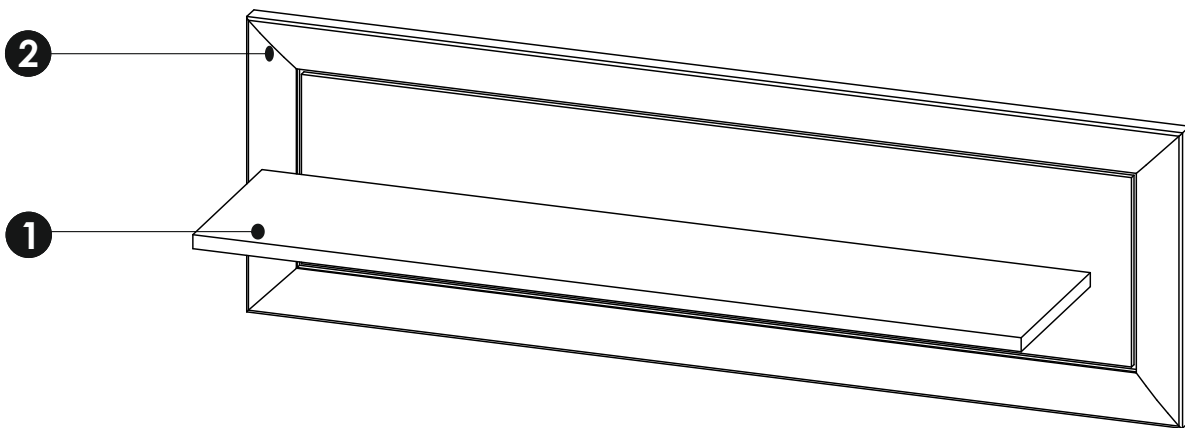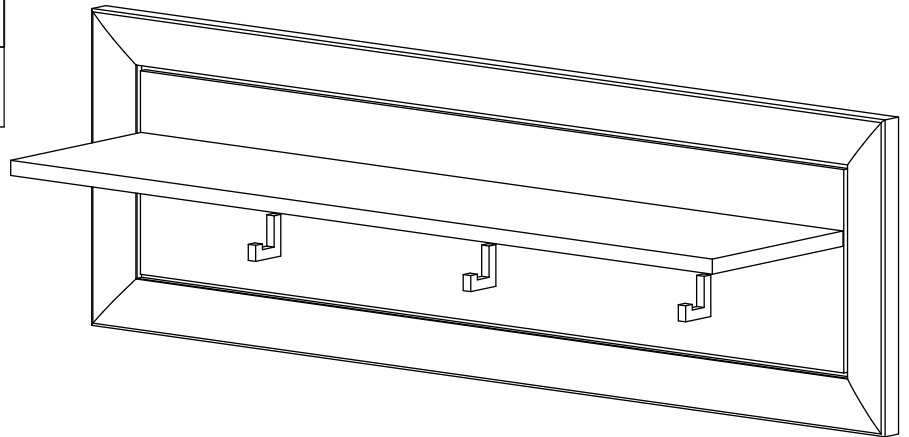



1 ▶

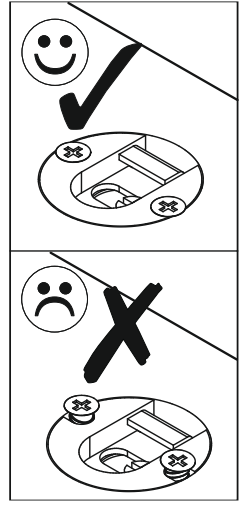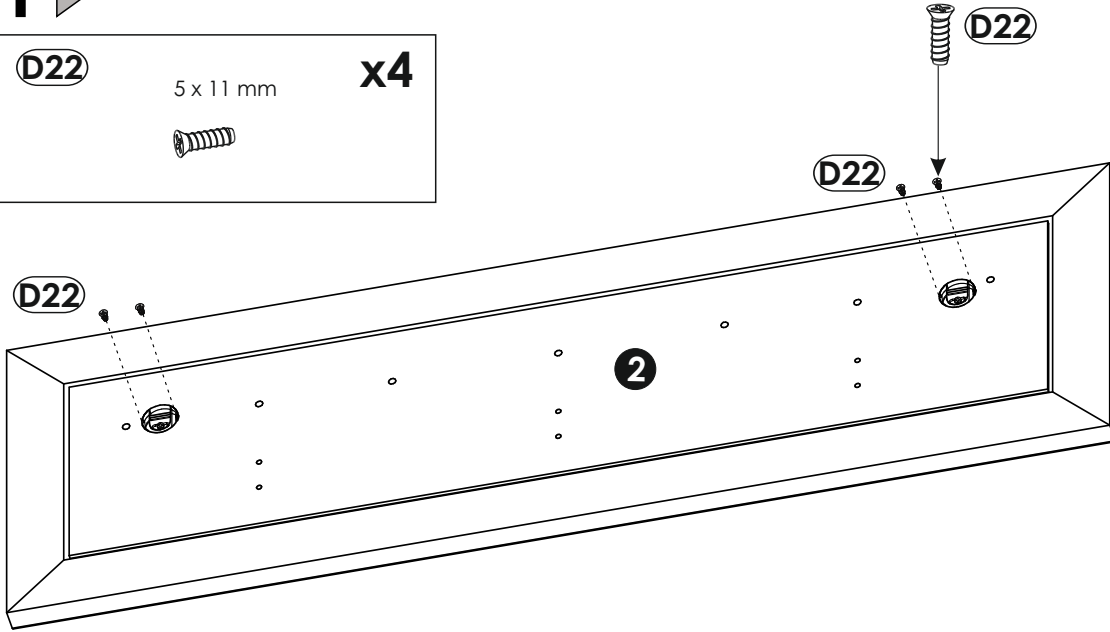
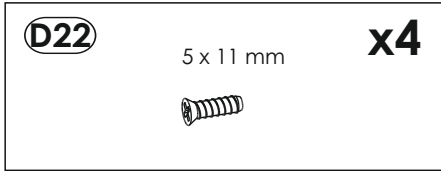


2 ▶






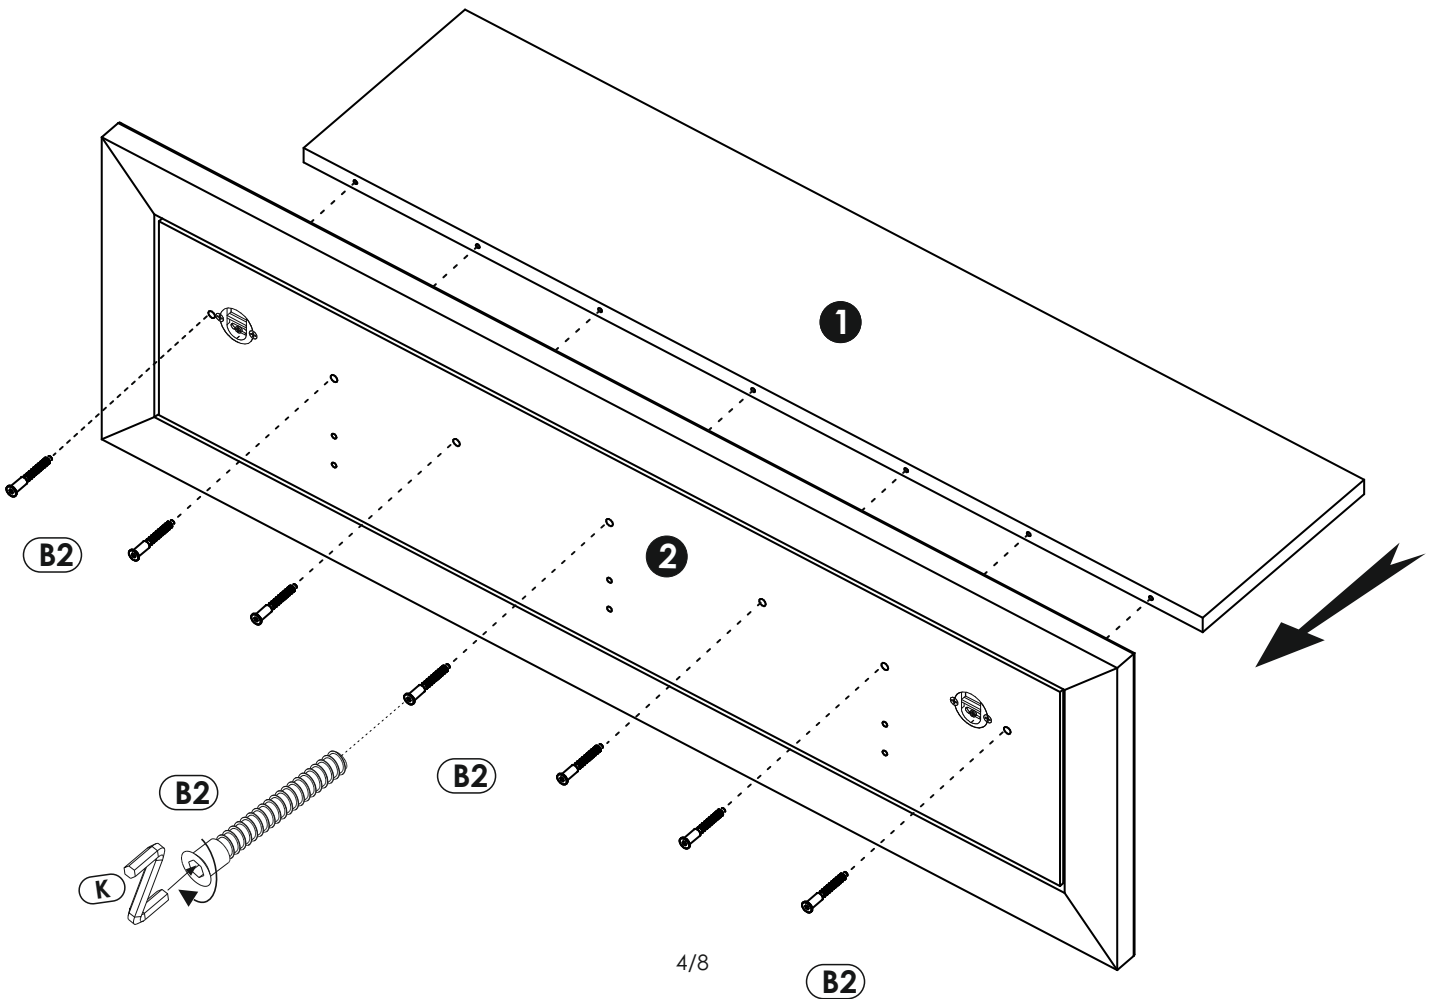
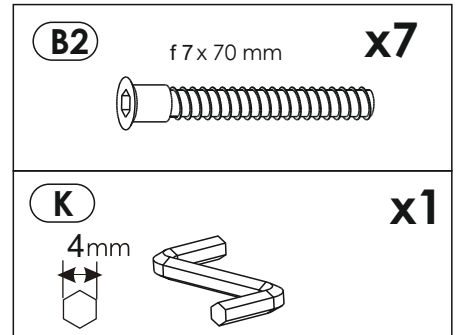
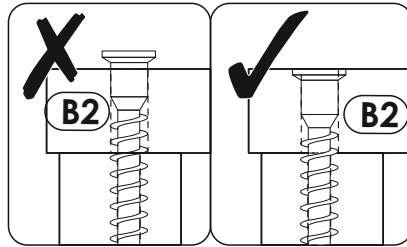


3 ▶

P16		x3
H6		x6

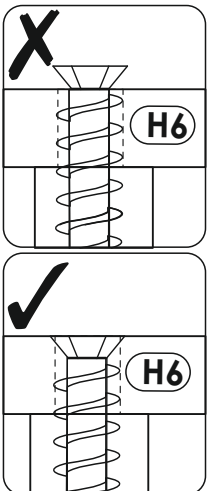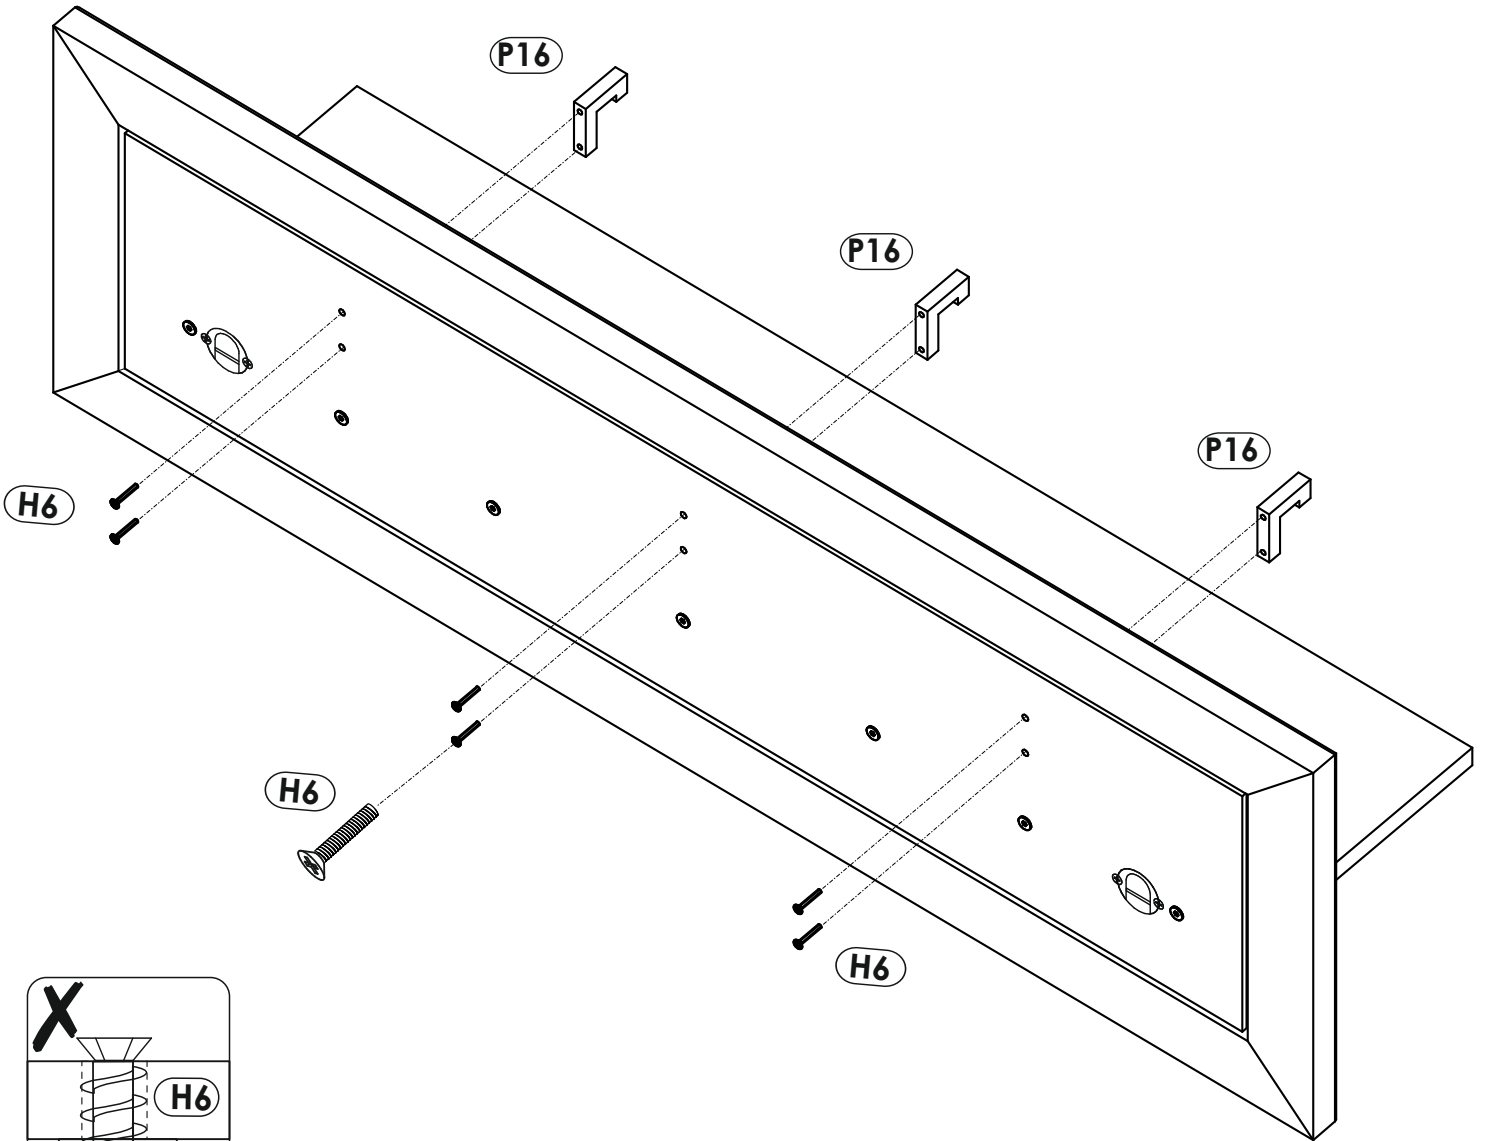

4

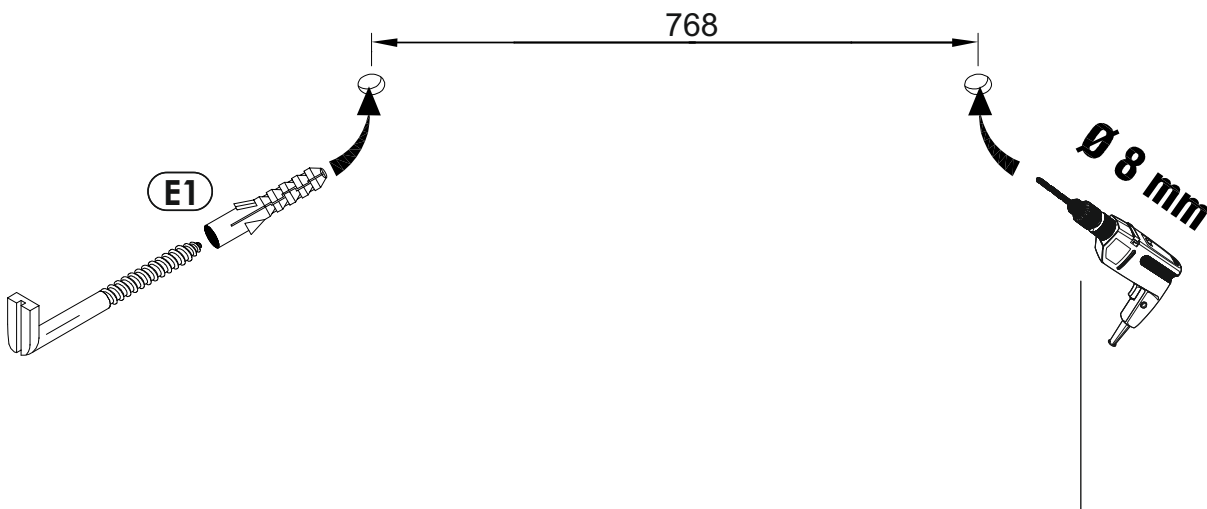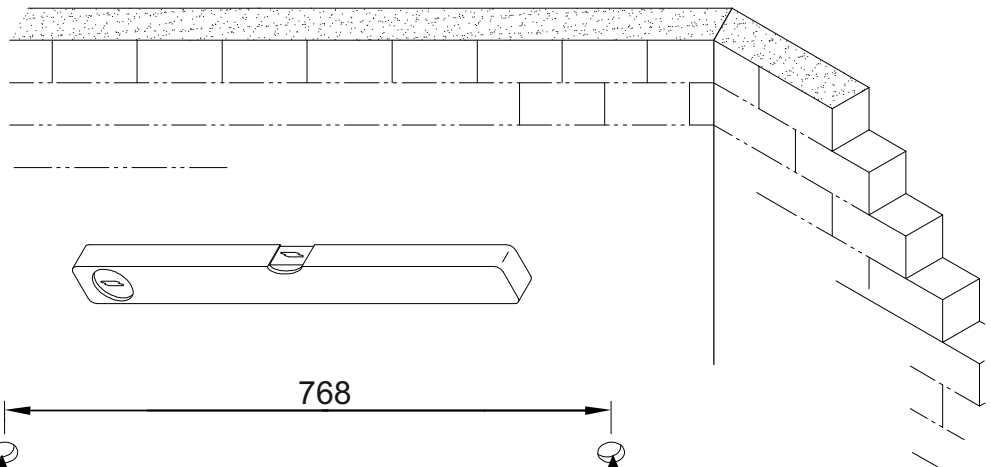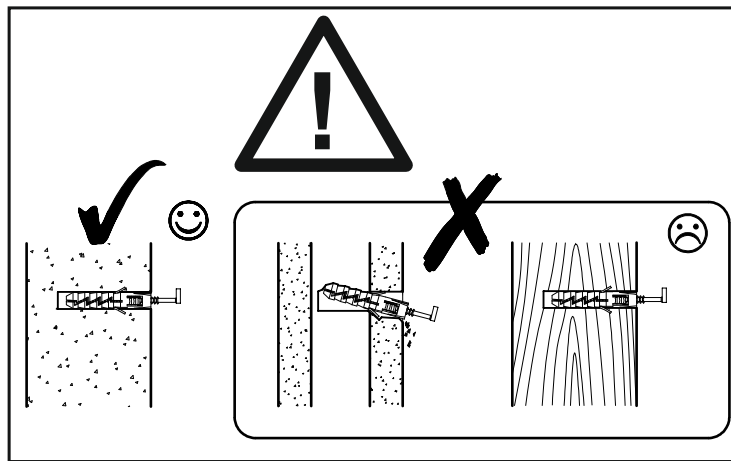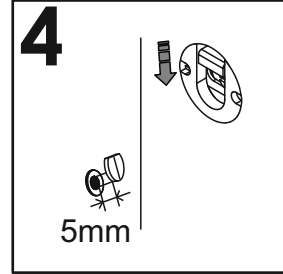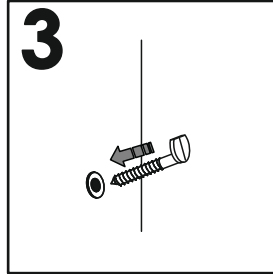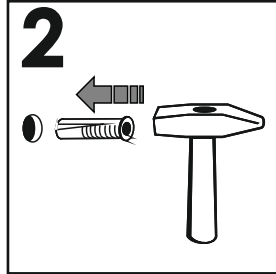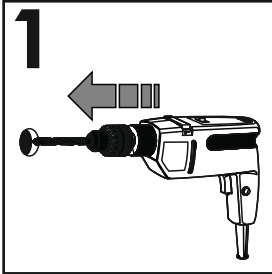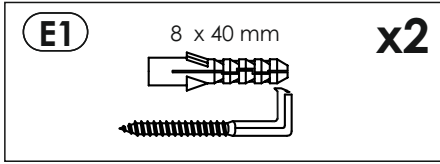

5 ▶

