

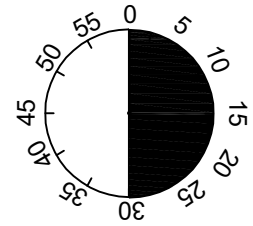



# DUSTIN

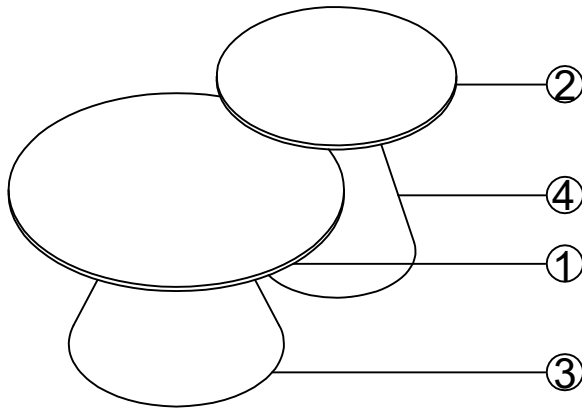


1

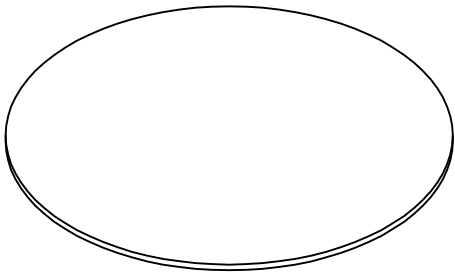



2

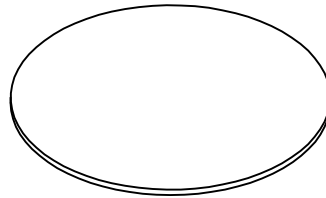


3

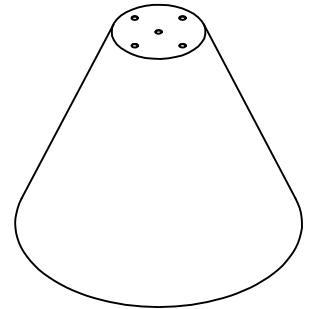

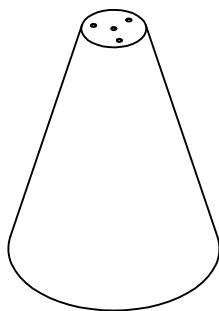



4



1	1X	1/2	Ø700
2	1X	1/2	Ø500
3	1X	2/2	Height 375
4	1X	2/2	Height 435









2/2

A	M6x13	B	Ø16xØ6x1.5mm	C	M6	D	M5		
	7x		7x		7x		1x		

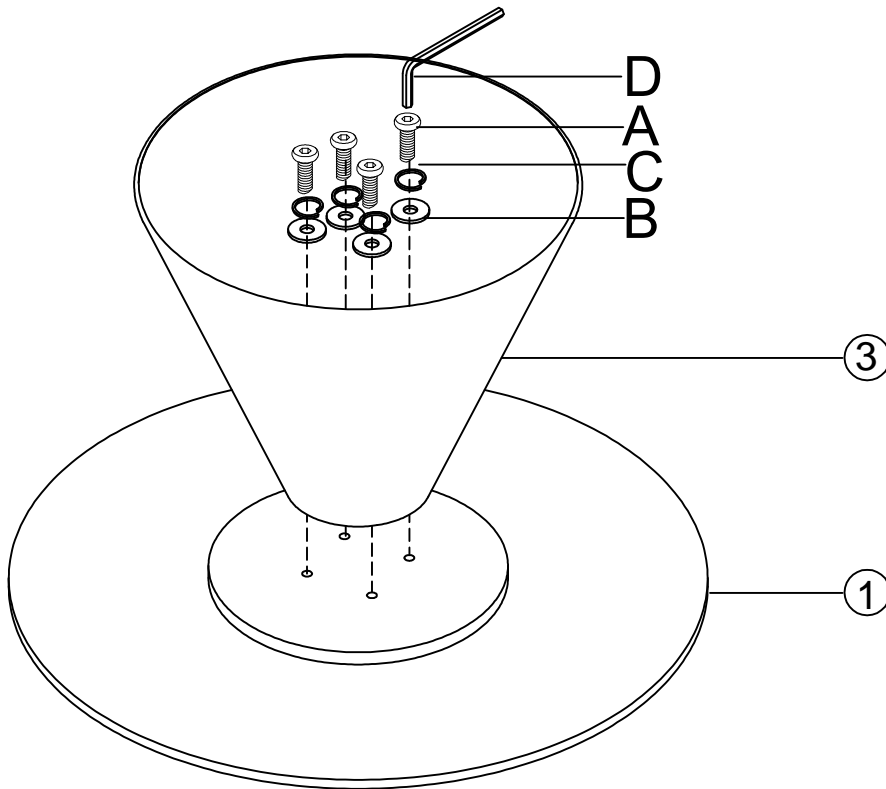
I.






1



A	M6x13	
	4x	
B	Ø16xØ6x1.5mm	
	4x	
C	M6	
	4x	
D	M5	
	1x	
		

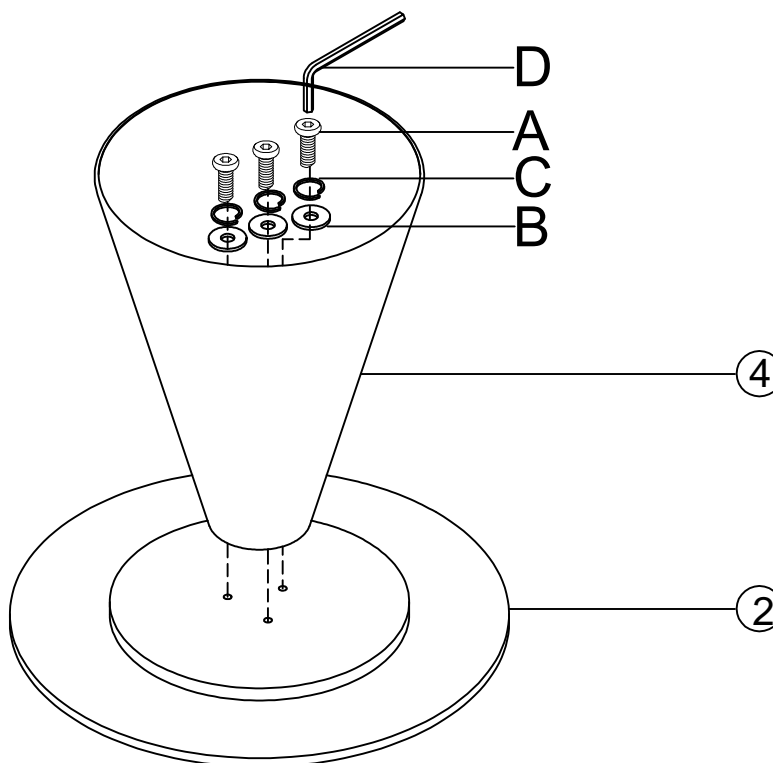
2





A	M6x13	
	3x	
B	Ø16xØ6x1.5mm	
	3x	
C	M6	
	3x	
D	M5	
	1x	
		

II.

3

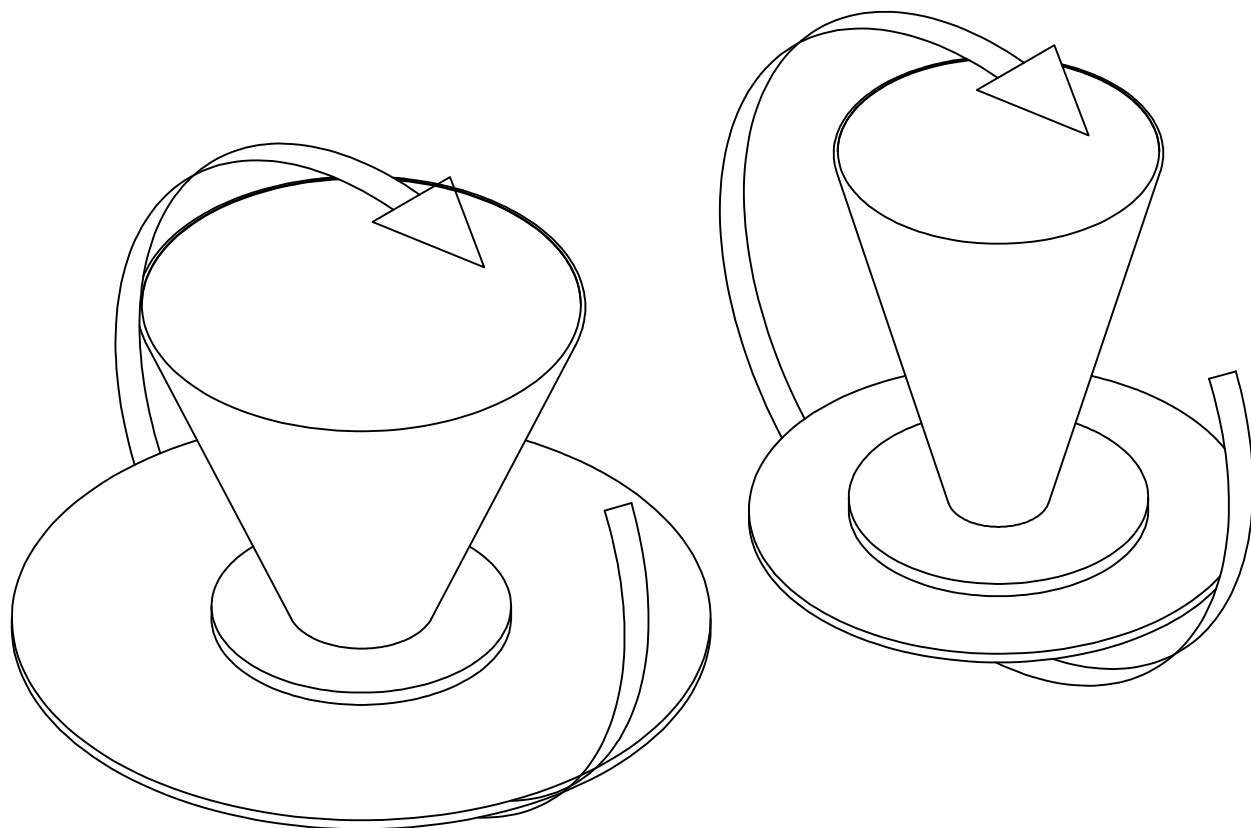

4

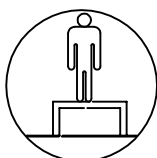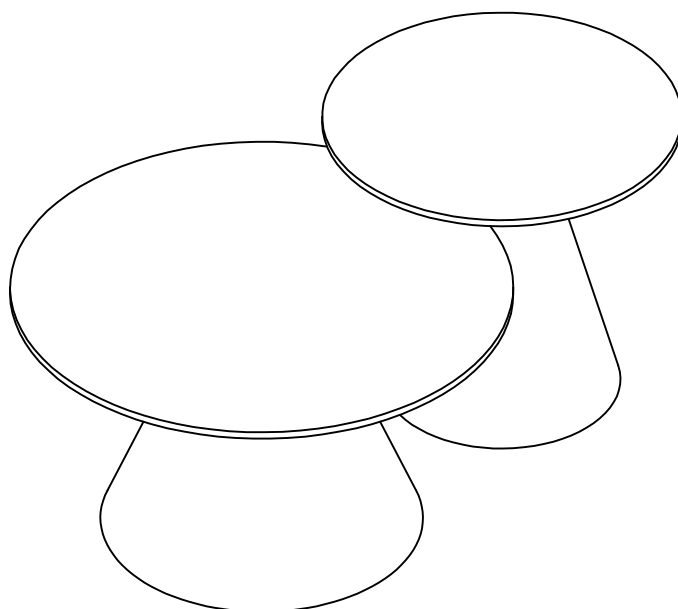

**LE TRI  
+ FACILE**



*Séparez les éléments avant de trier*