
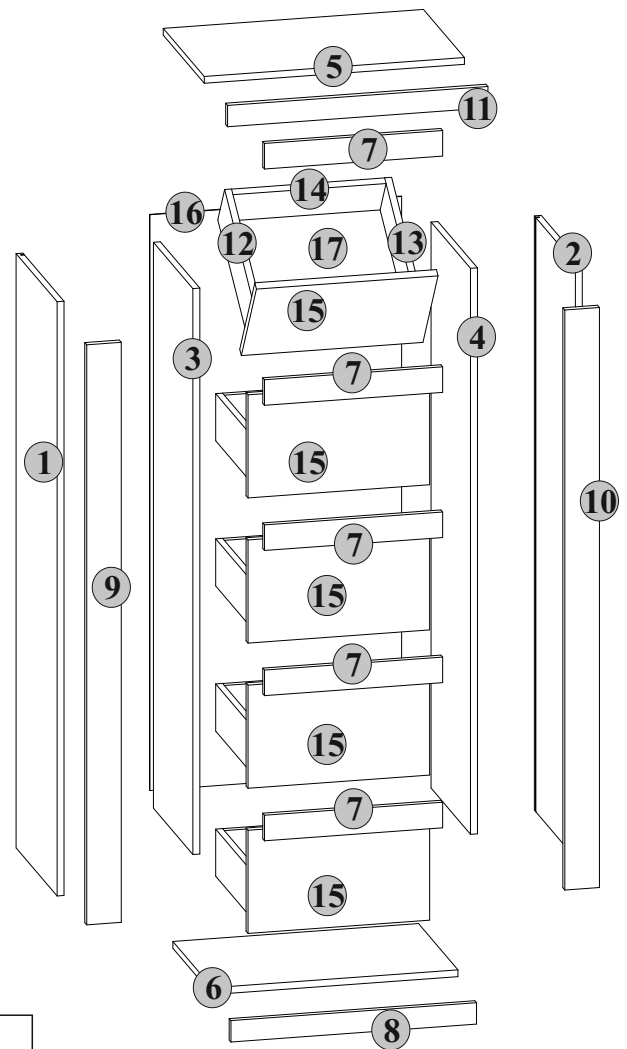
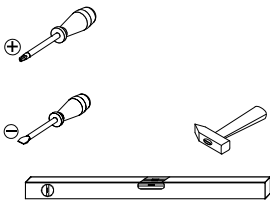
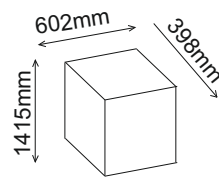




“2561”

versionsnummer: 04.03.2019


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

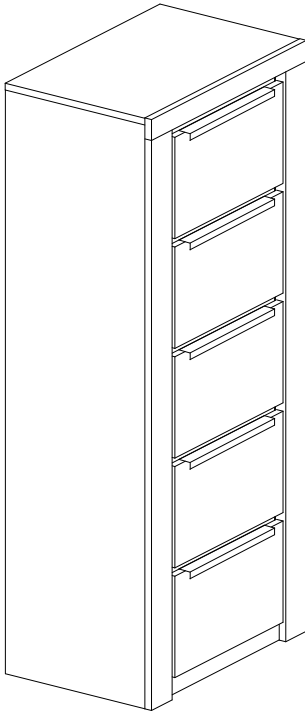



B1

7x  l2	
25x  s2	68x  r1 φ15 #12.5
68x  r16	4x  k1

B2

2x  φ4x30 mm p9	75x  φ3.5x13 mm p1
1x  y1	10x  φ6.5x50 mm e1
52x  φ8x30 mm f1	10x  s1
1x  z1	25x  1x16 l1








5x  300 mm c32	5x  w350
--	---

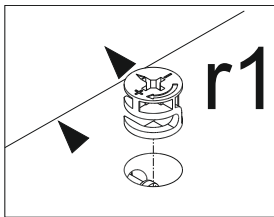

14x
 $\phi 8 \times 30$ mm
f1
















19x
r16

23x
 $\phi 15 \#12.5$
r1

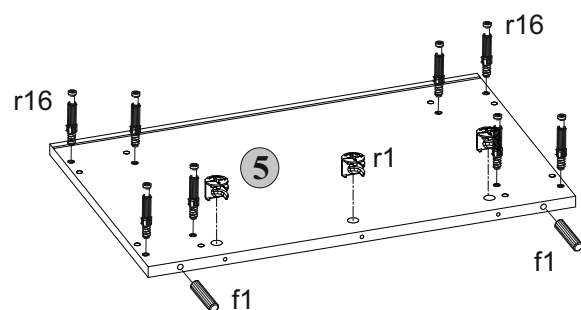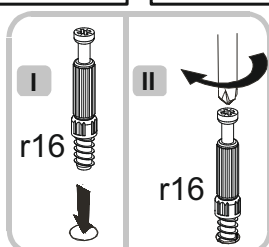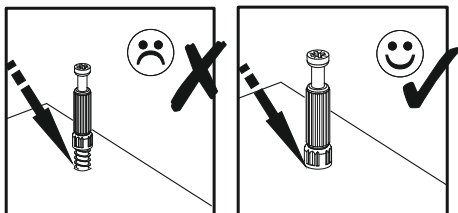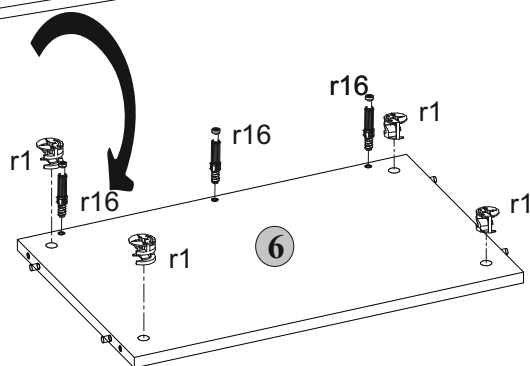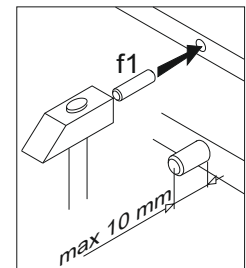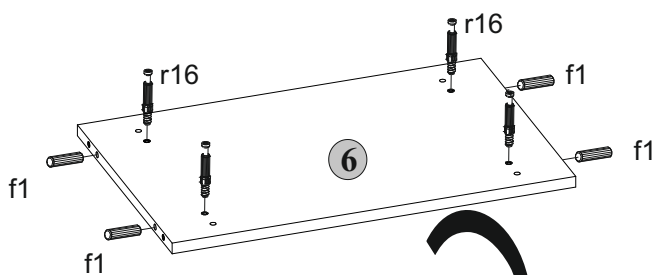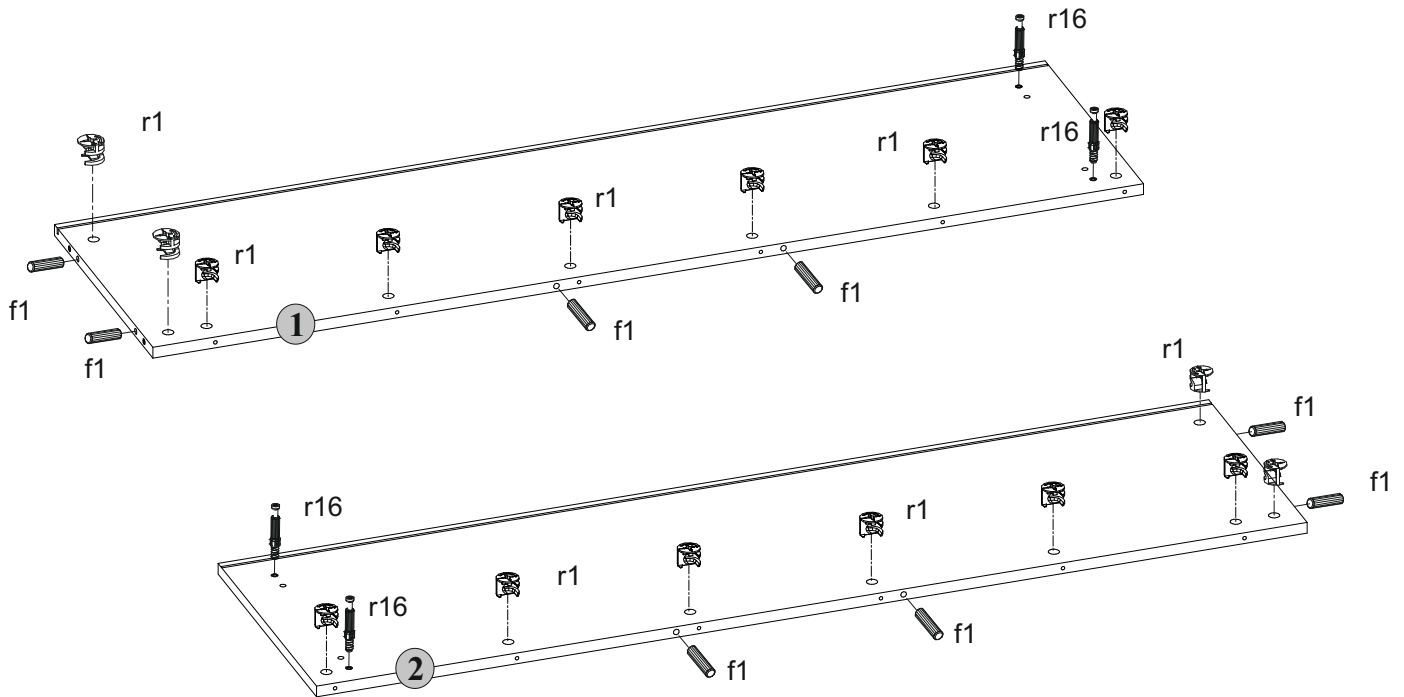








2

2

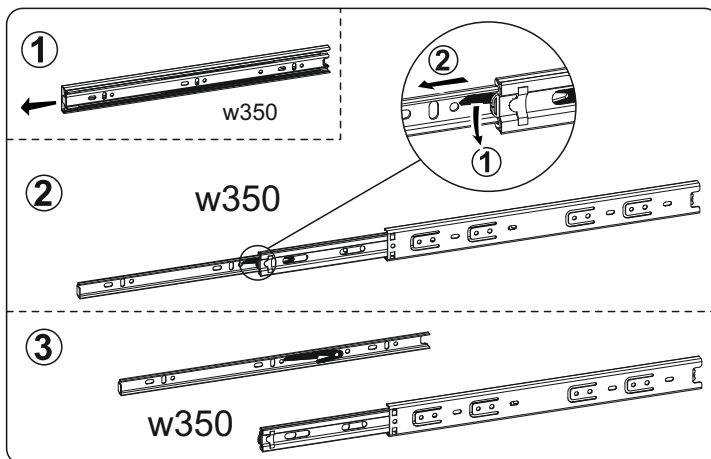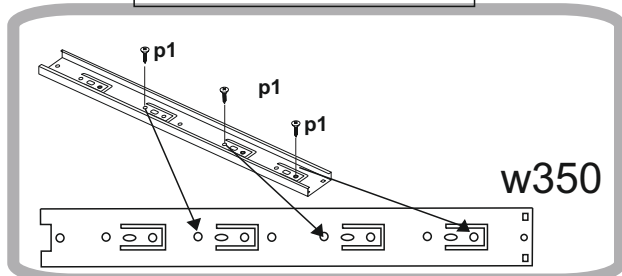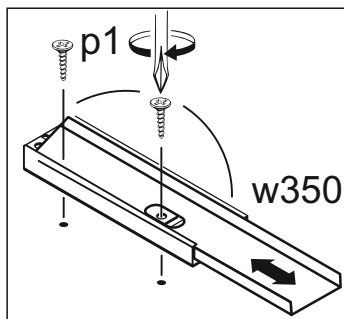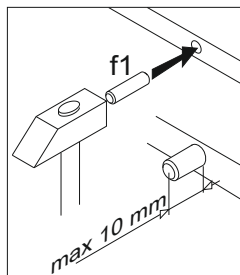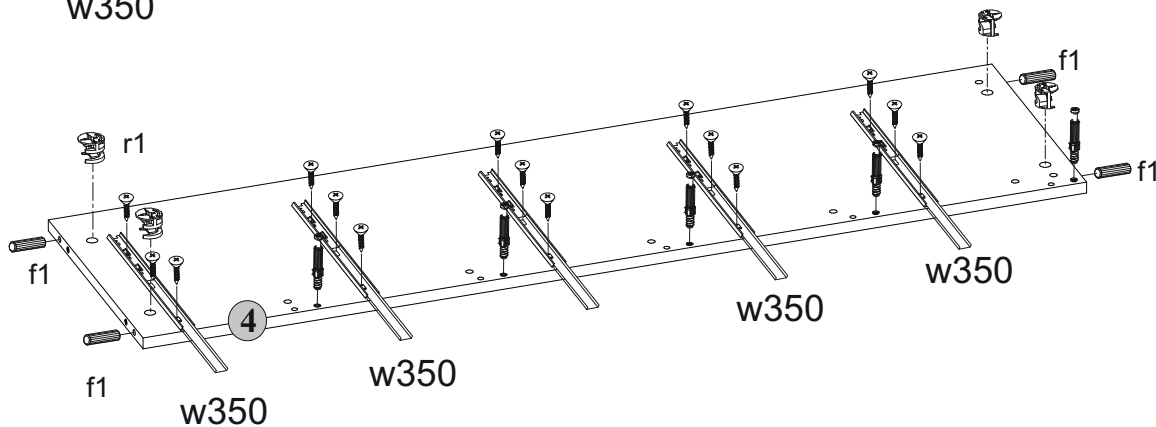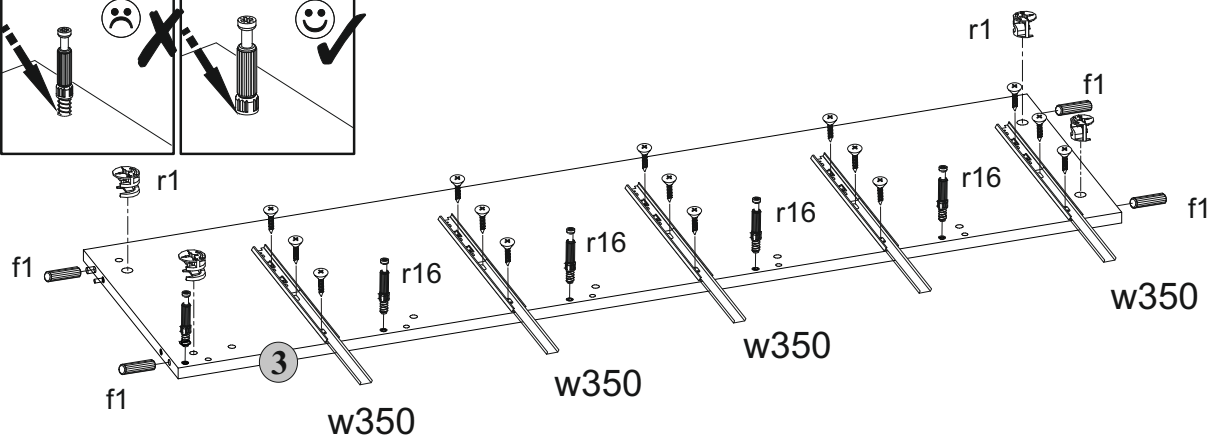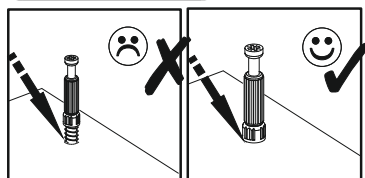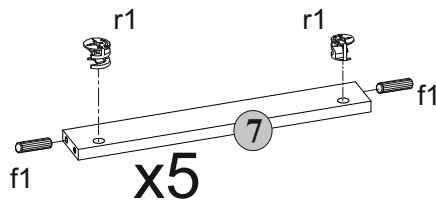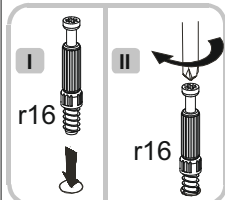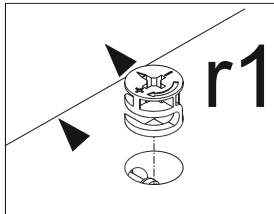
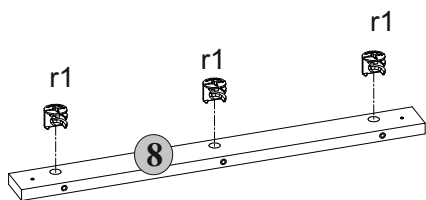


3

3

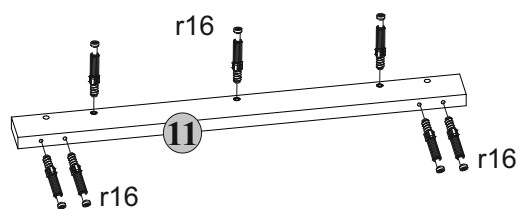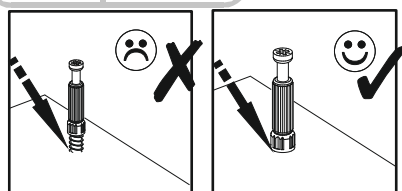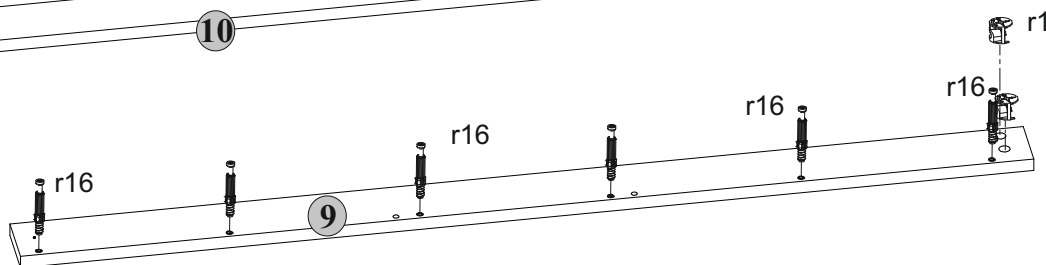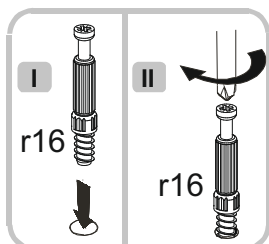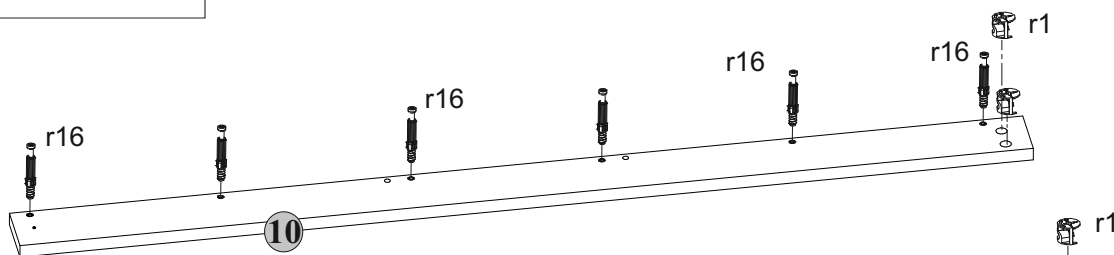
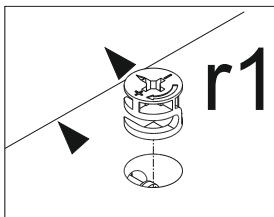


4

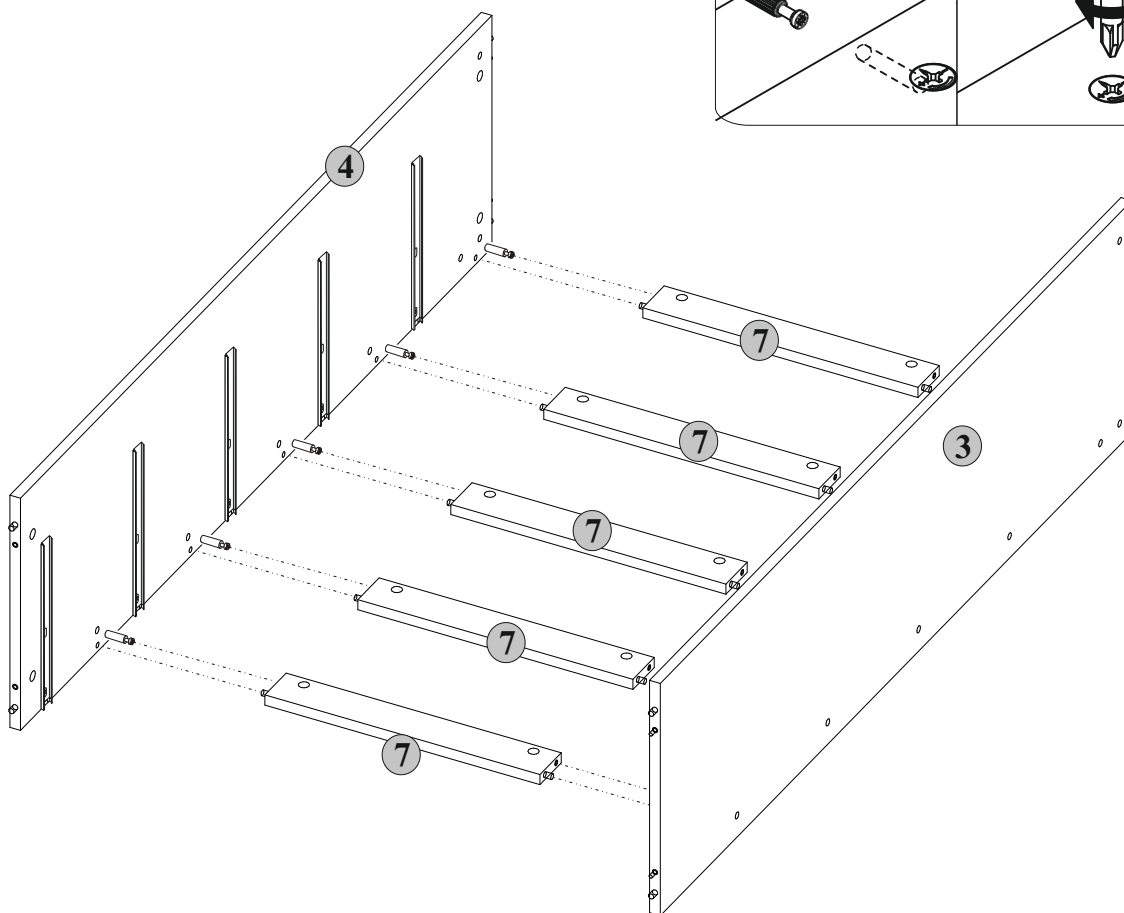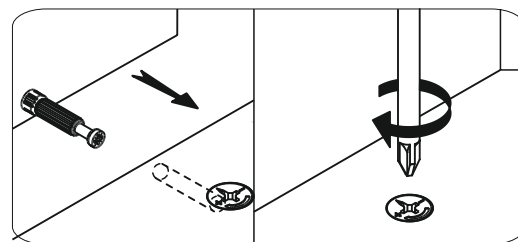


4

5

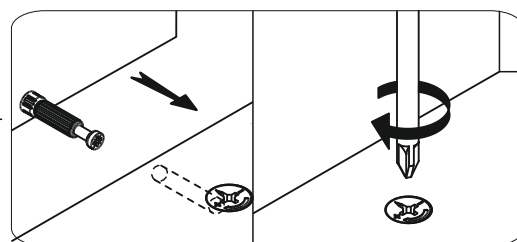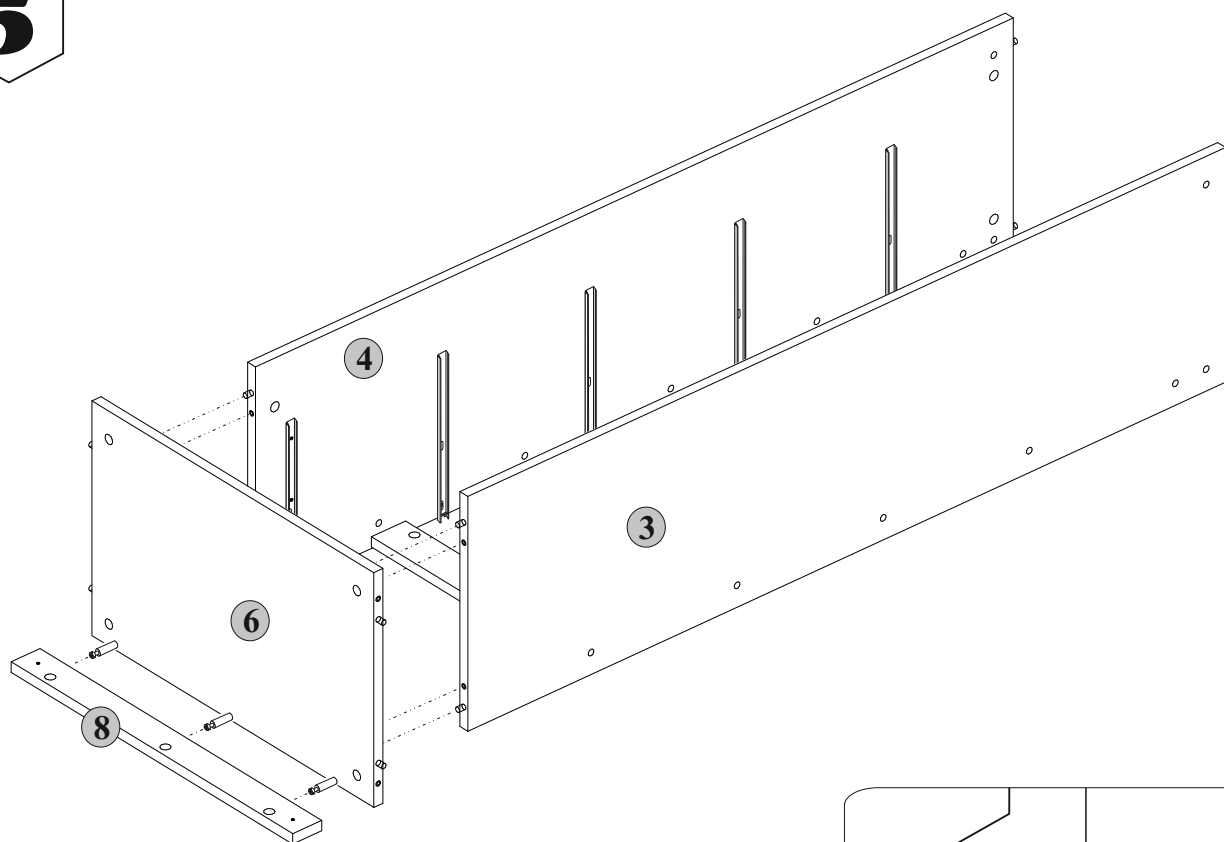


6

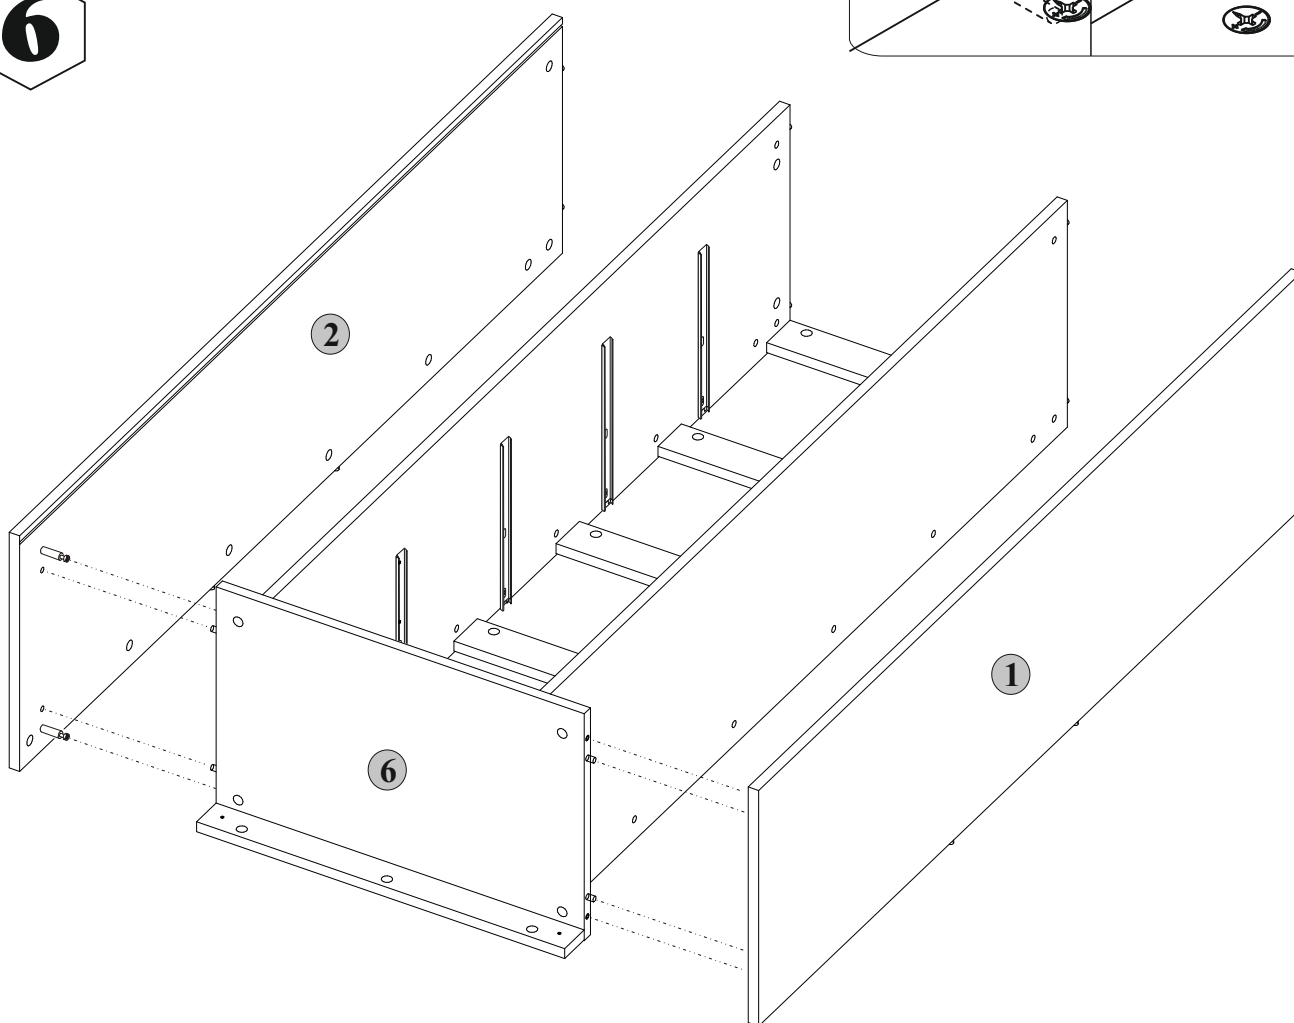


5

7




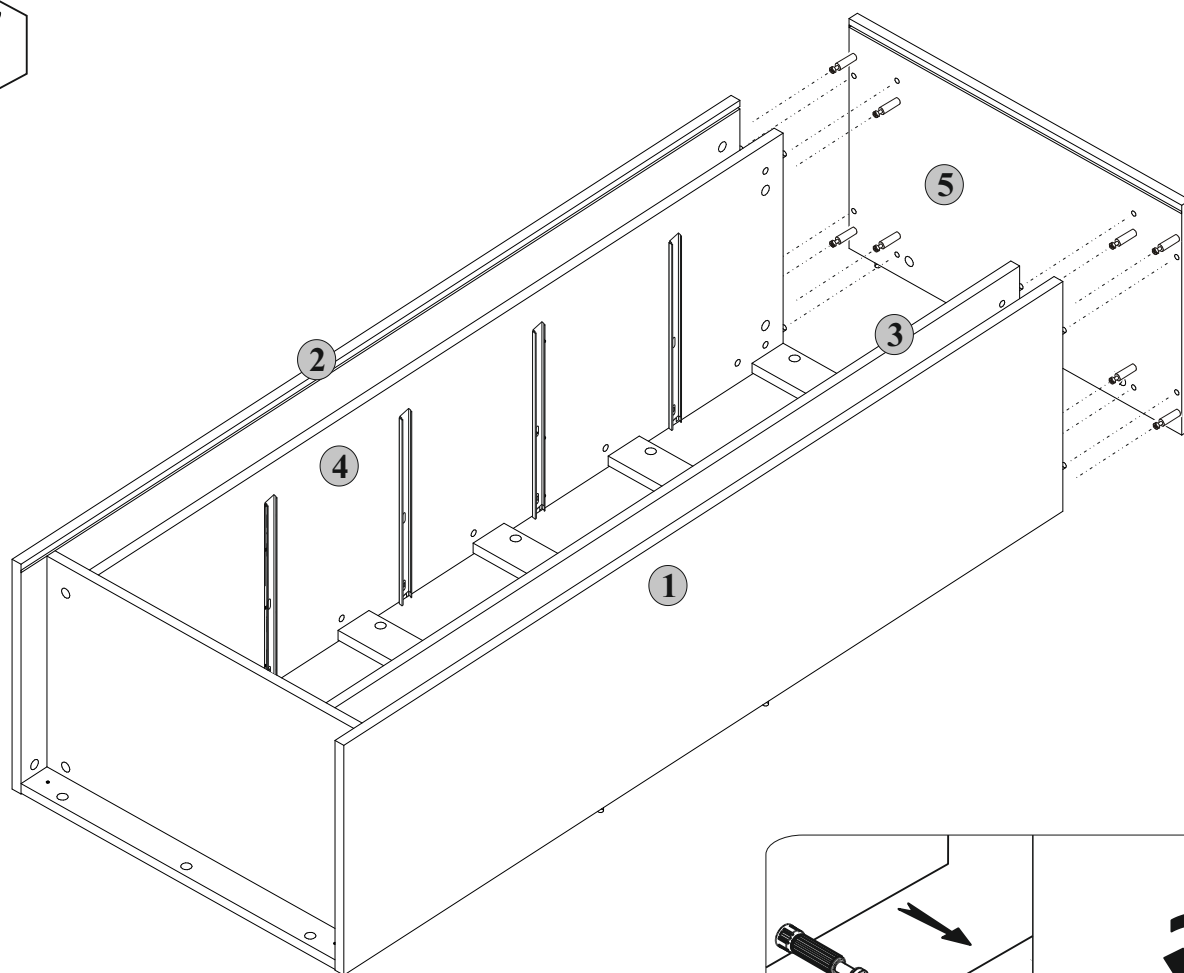


8

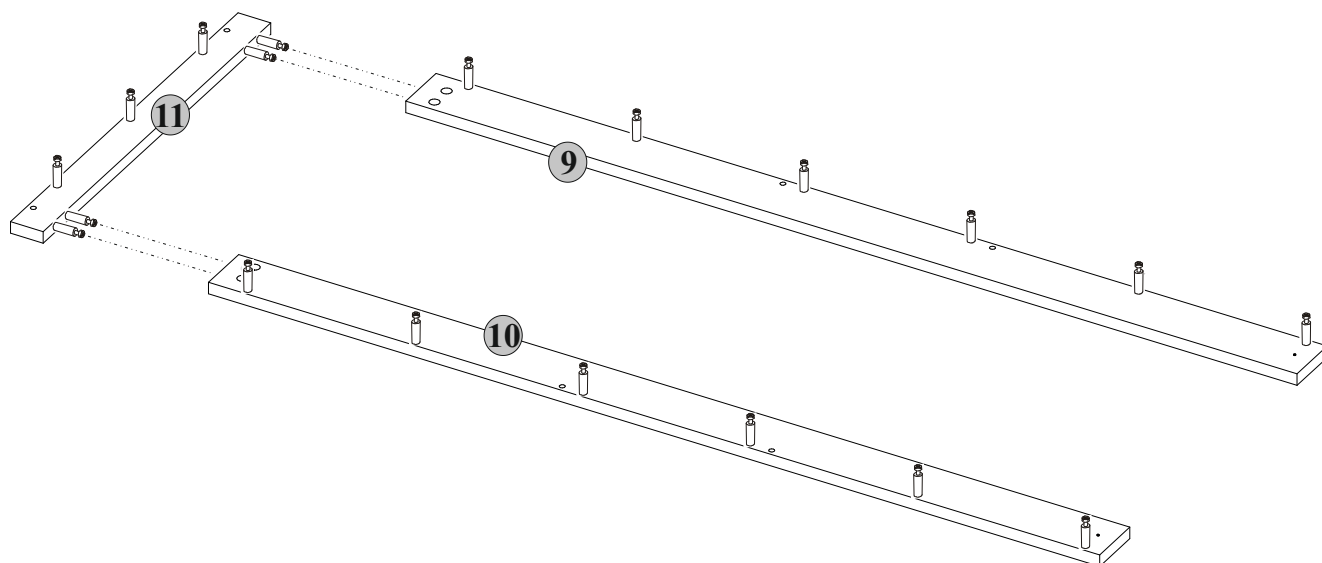

6

9

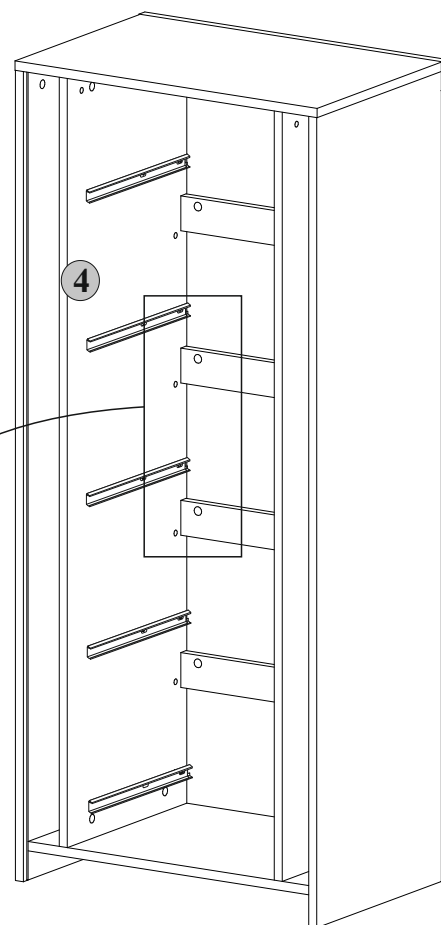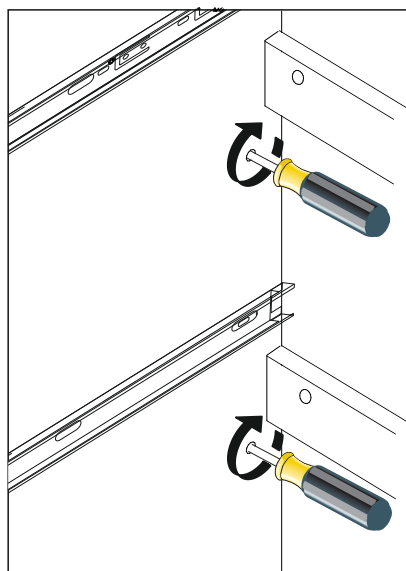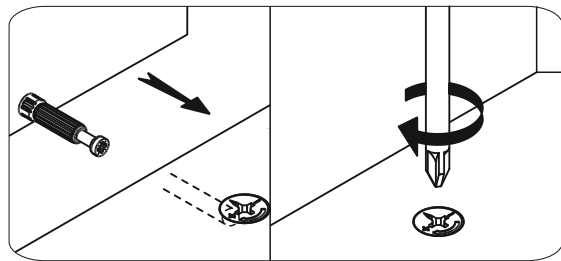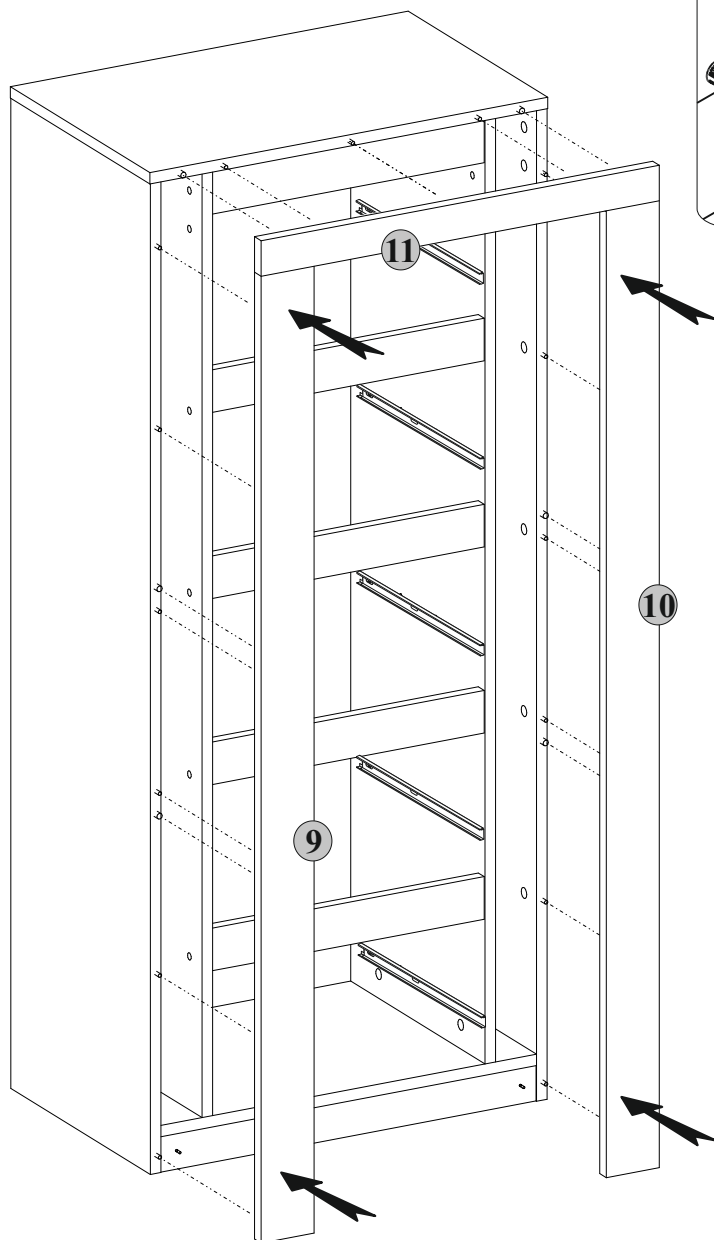

7

10

5x

l1

7x






l2

4x



















k1

2x

 $\phi 4 \times 30$ mm
p9

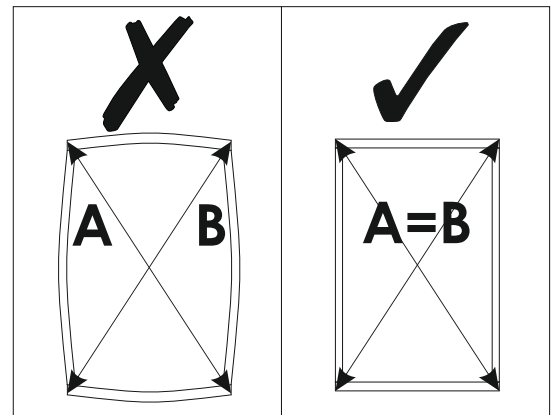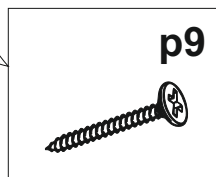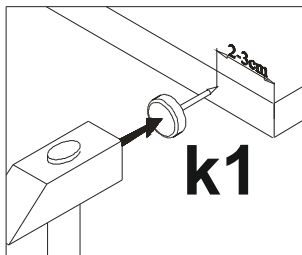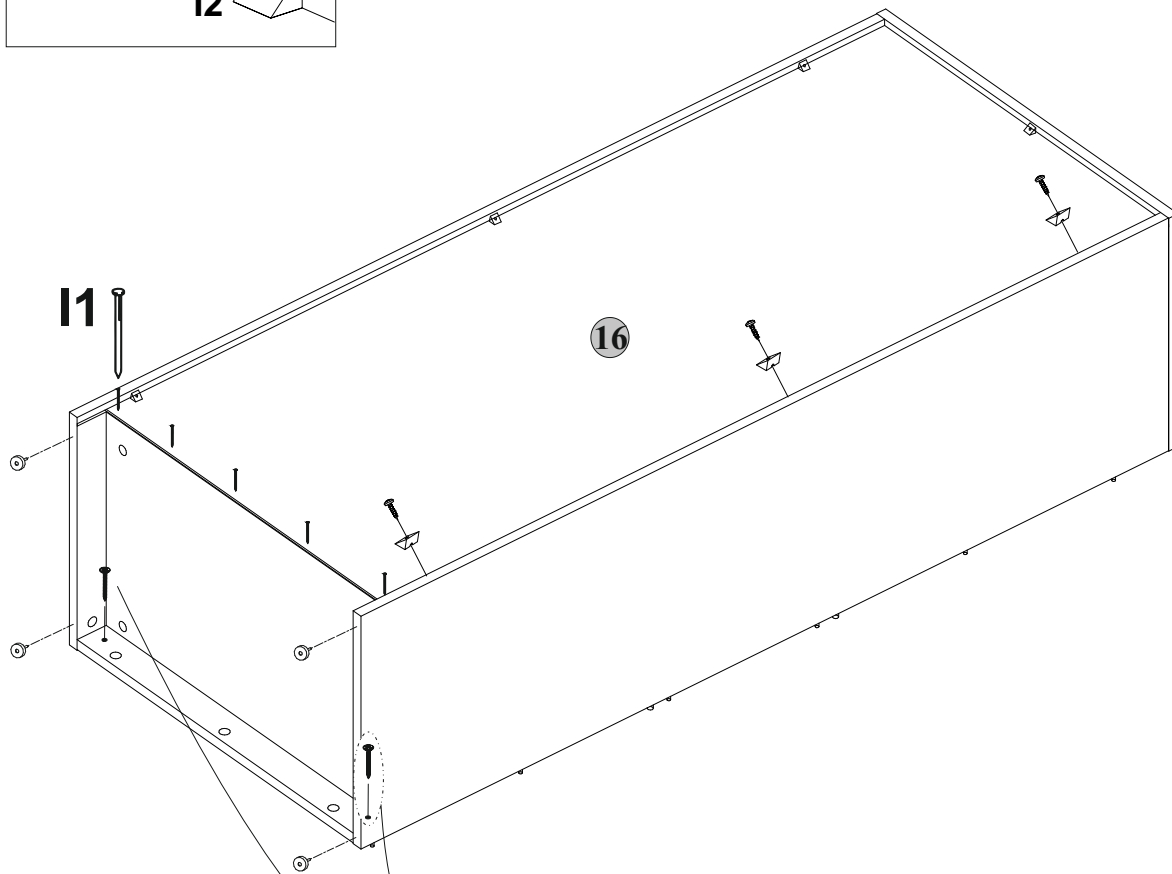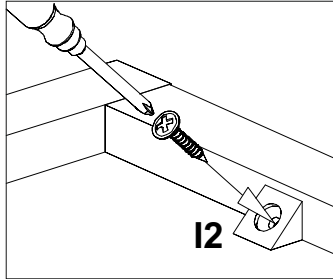

11x5

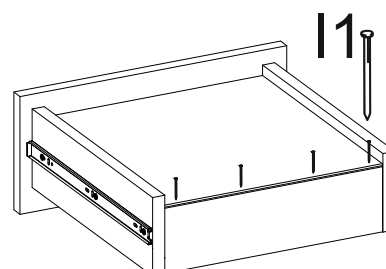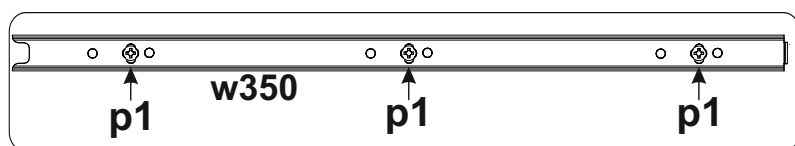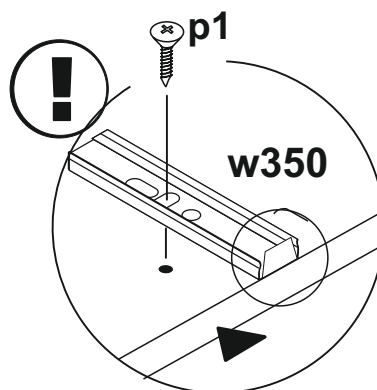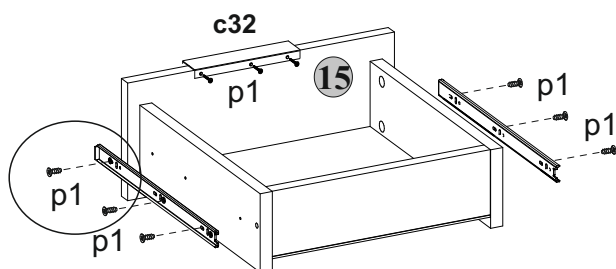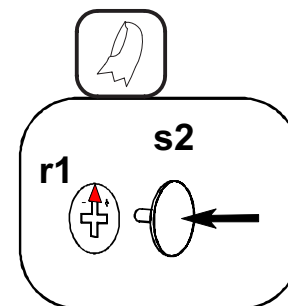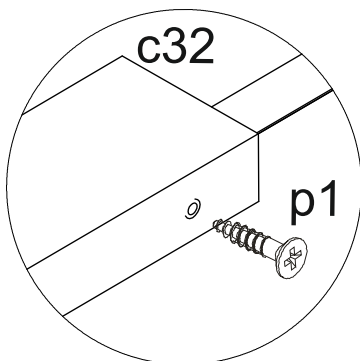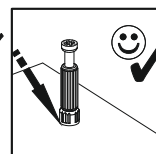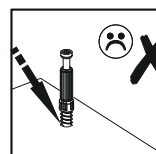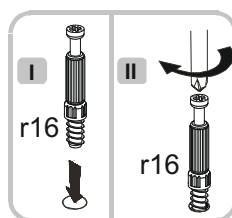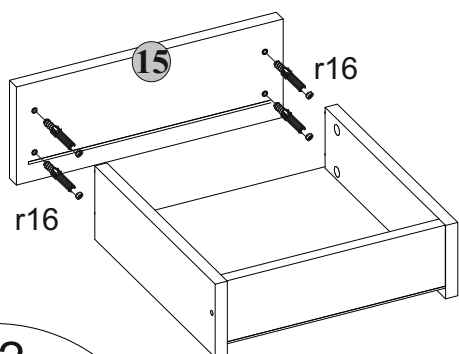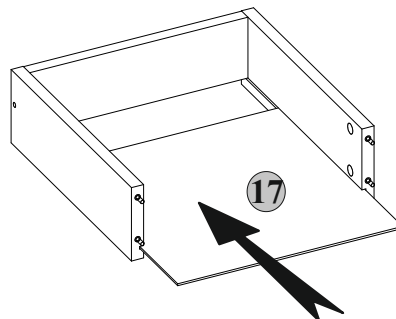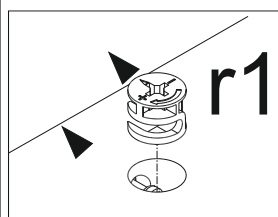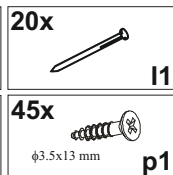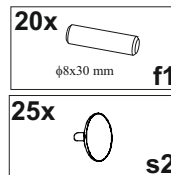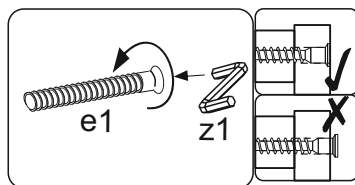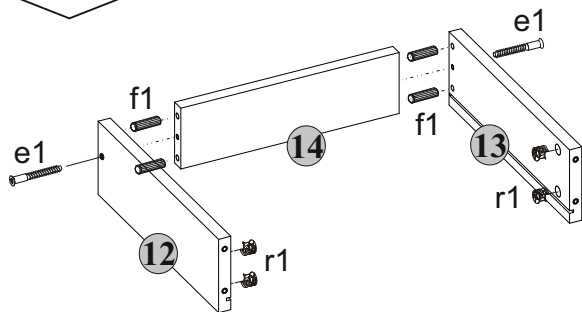

12

