
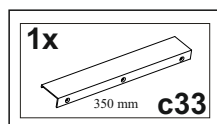
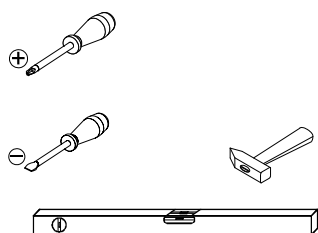
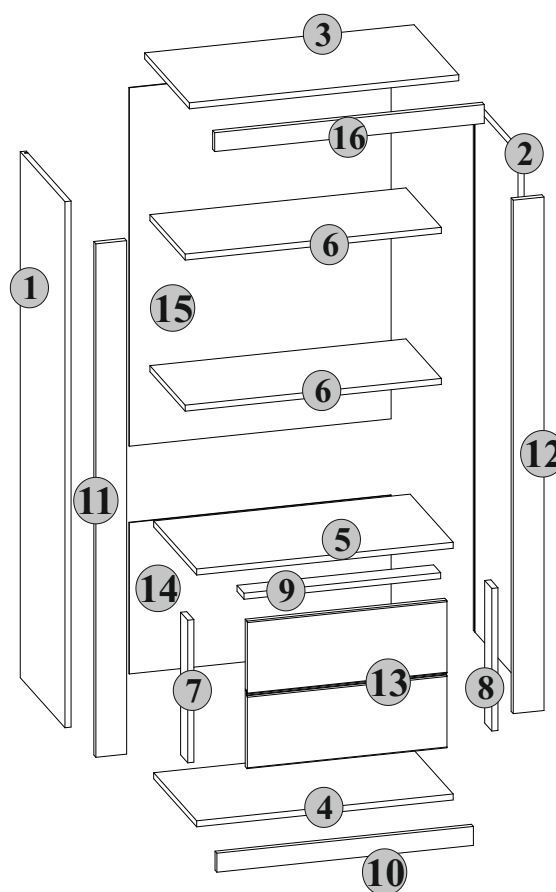
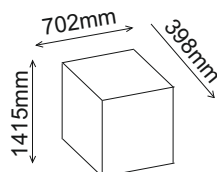



“2542”

versionsnummer: 18.02.2019

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

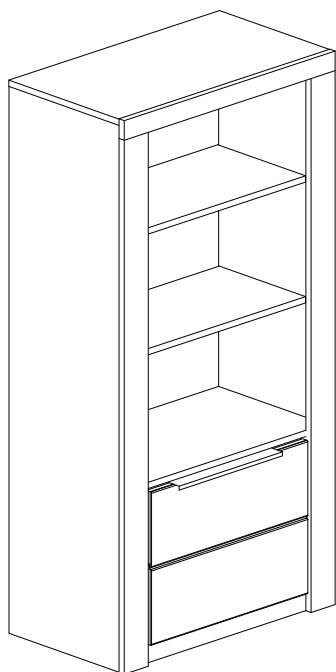

B1	
7x 	4x
39x 	8x
39x 	39x

B2	
22x 	1x
1x 	5x

B3	
4x 	
3x 	7x
5x 	3x
4x 	4x





B4	
2x 	
2x 	

1

8x
 $\phi 8 \times 30$ mm
f1

8x
r16

16x
 $\phi 15$ #12.5
r1




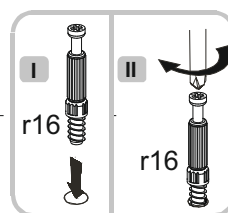
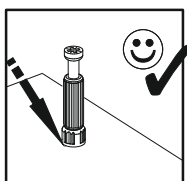
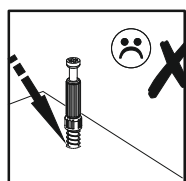
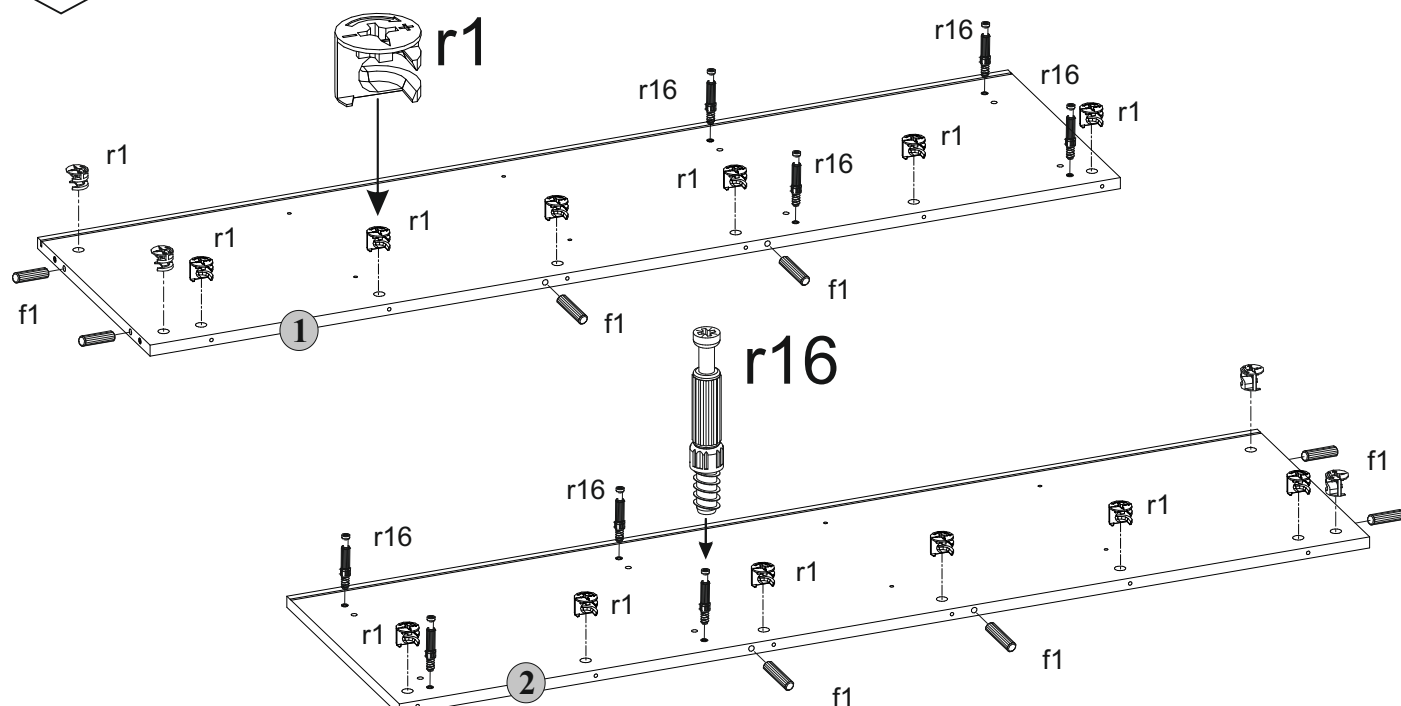


6x
r16

11x
 $\phi 15$ #12.5
r1


6x
 $\phi 8 \times 30$ mm
f1

2

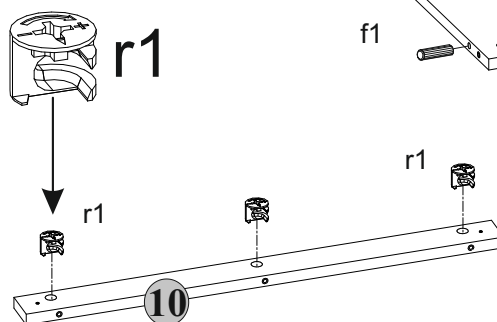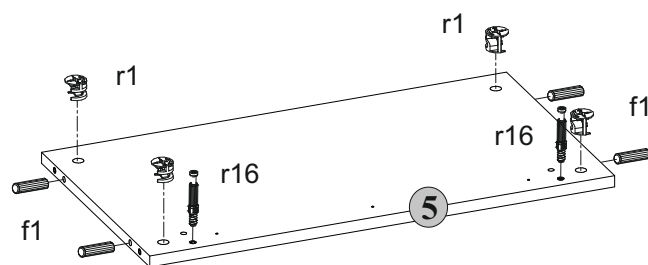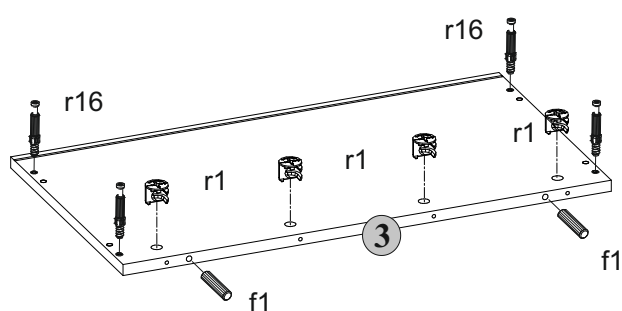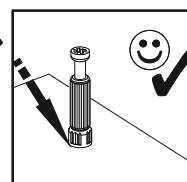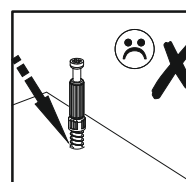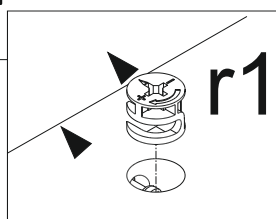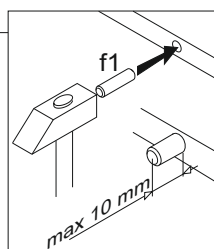

2





3

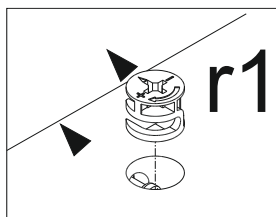



4x
 $\phi 8 \times 30$ mm
f1

5x
r16

4x
 $\phi 15$ #12.5
r1

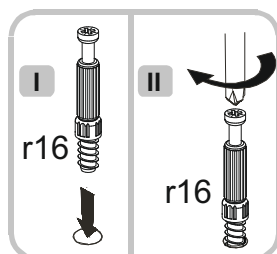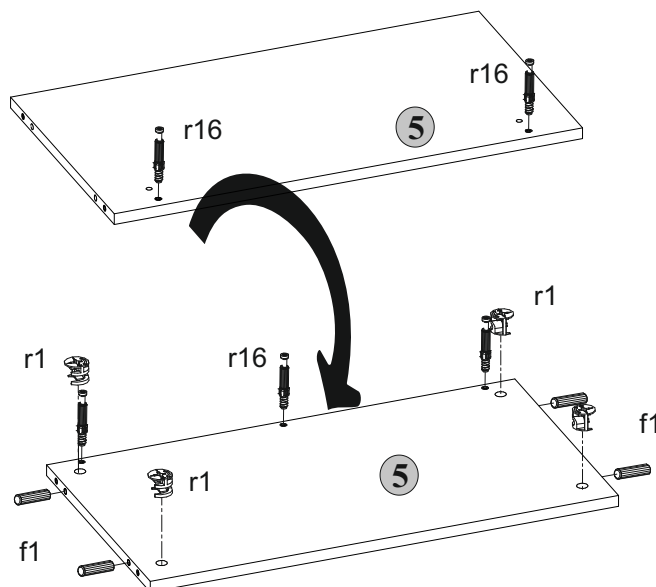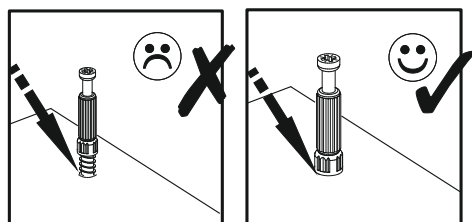
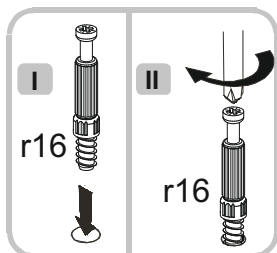


4

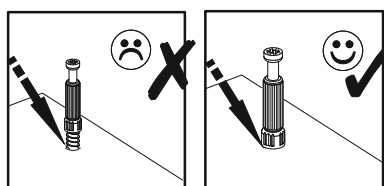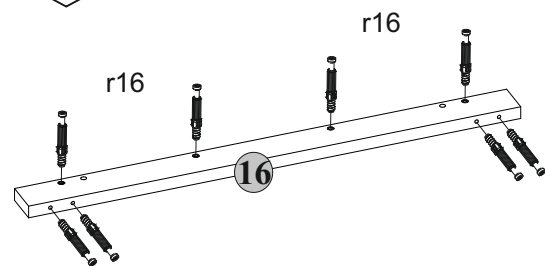















20x
r16

4x
 $\phi 15$ #12.5
r1



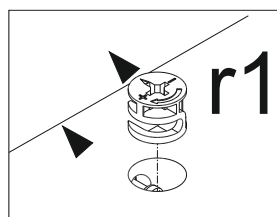
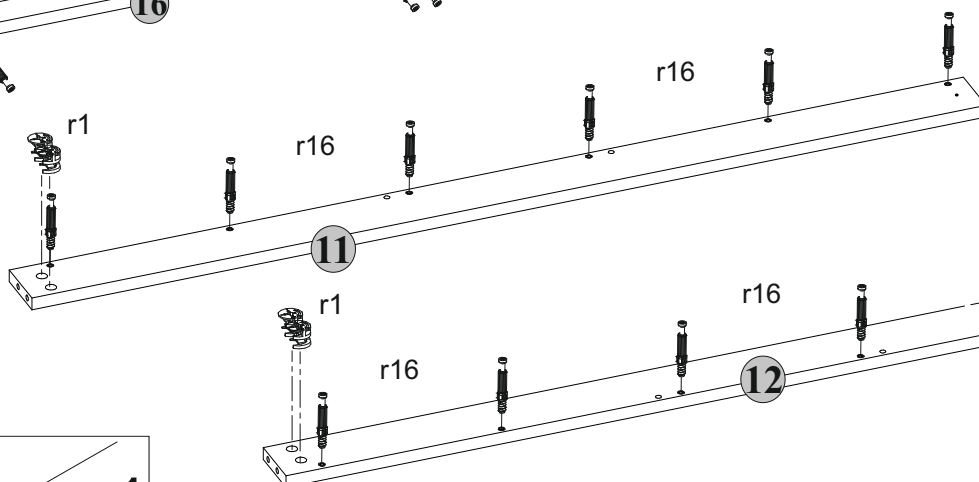


3

5

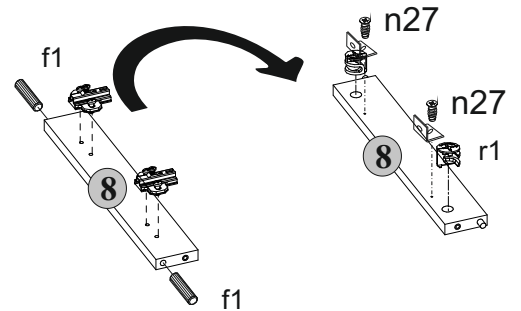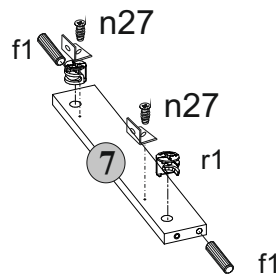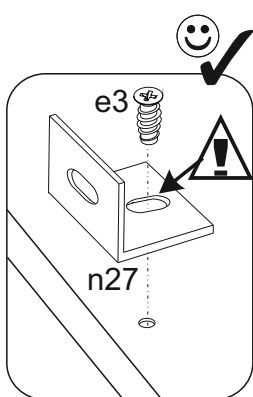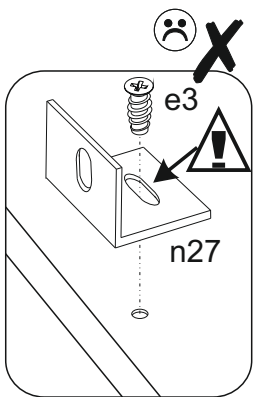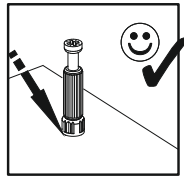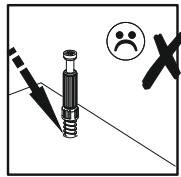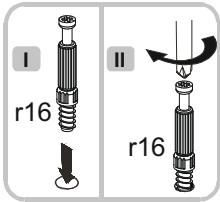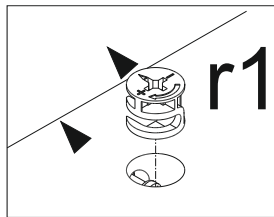
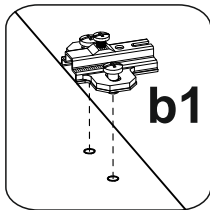


6

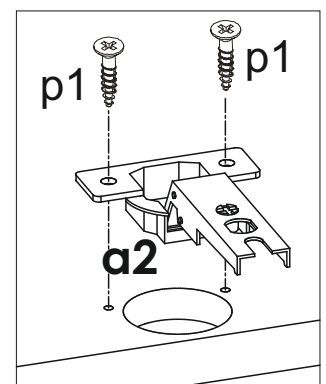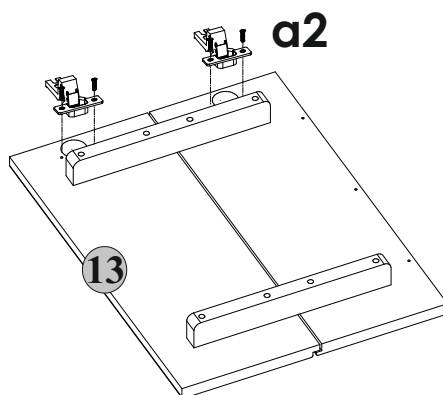



4

7



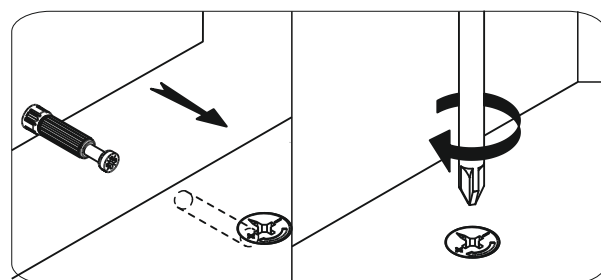
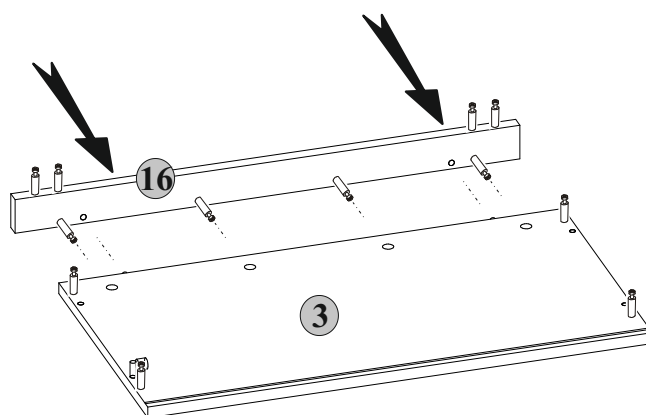


8

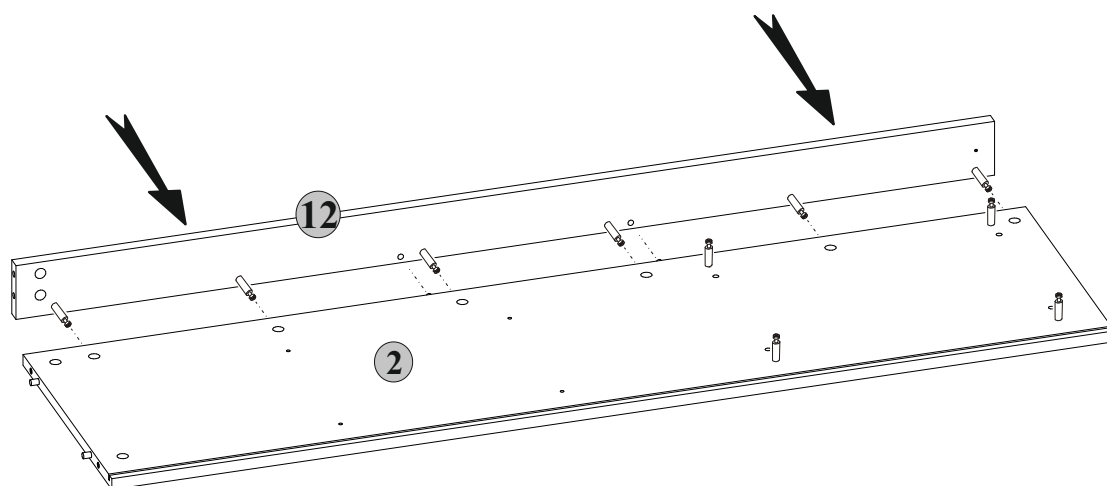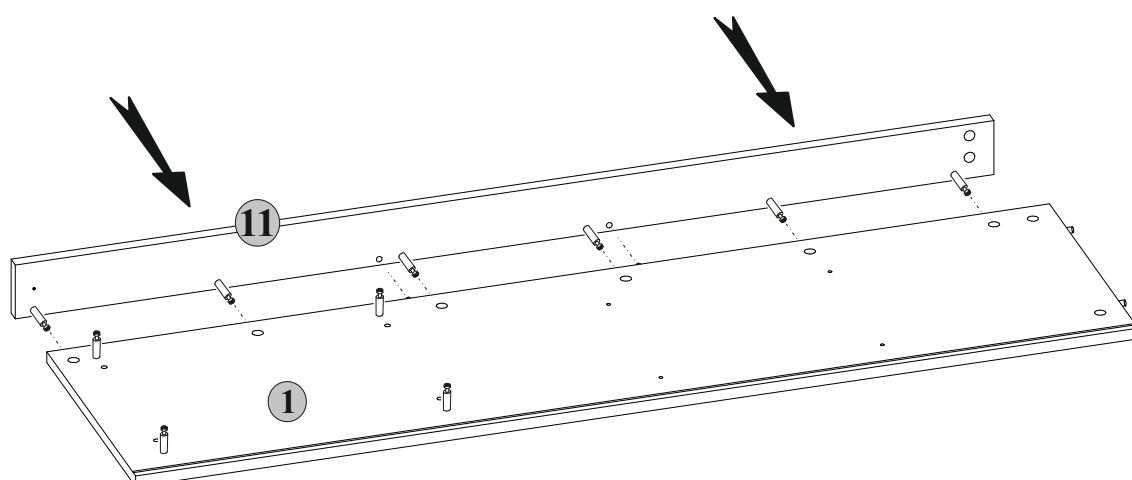


9

3x
p9
φ4x30 mm

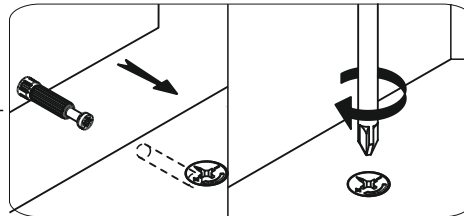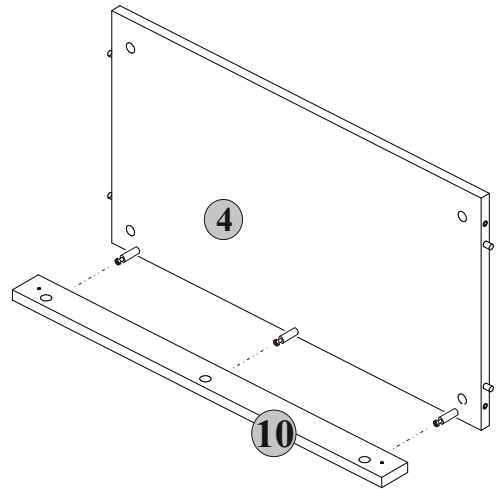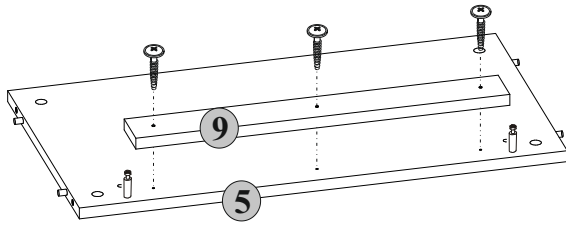
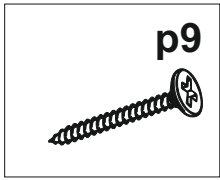


10

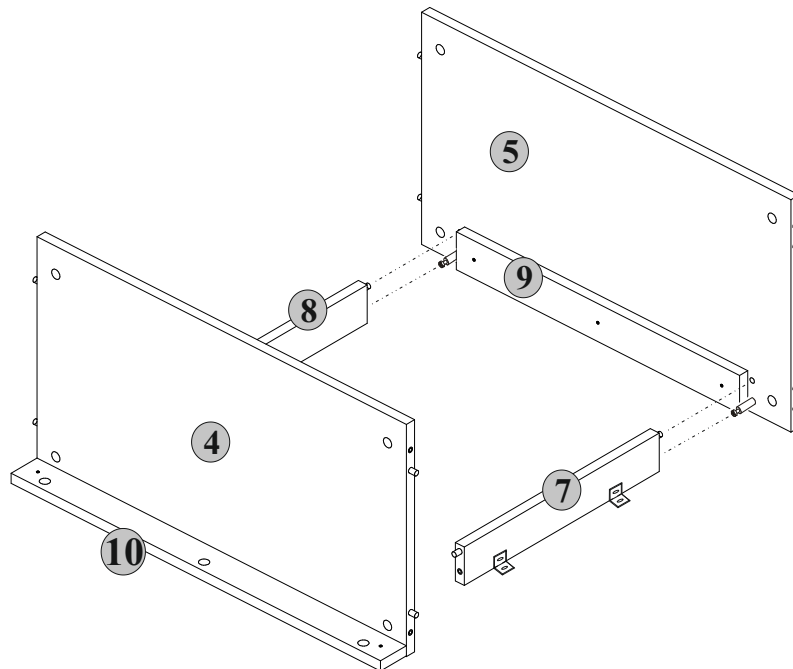



6

11

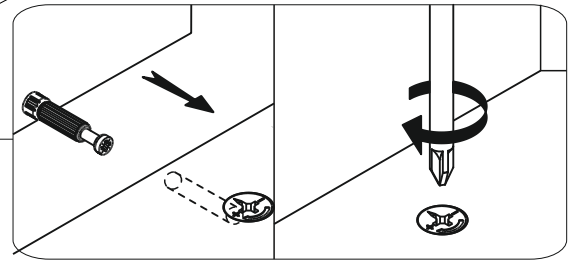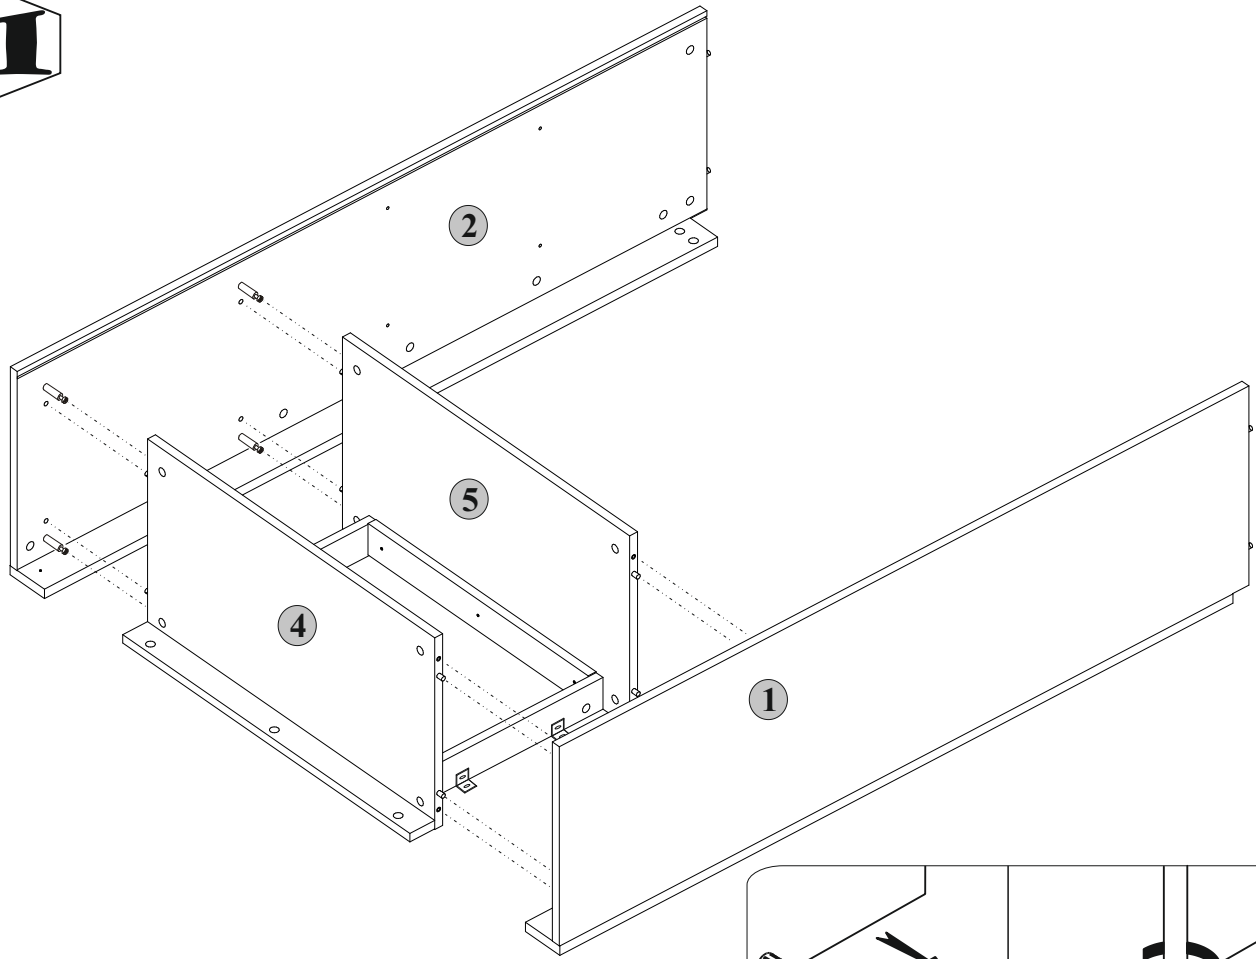

12





4x
k1

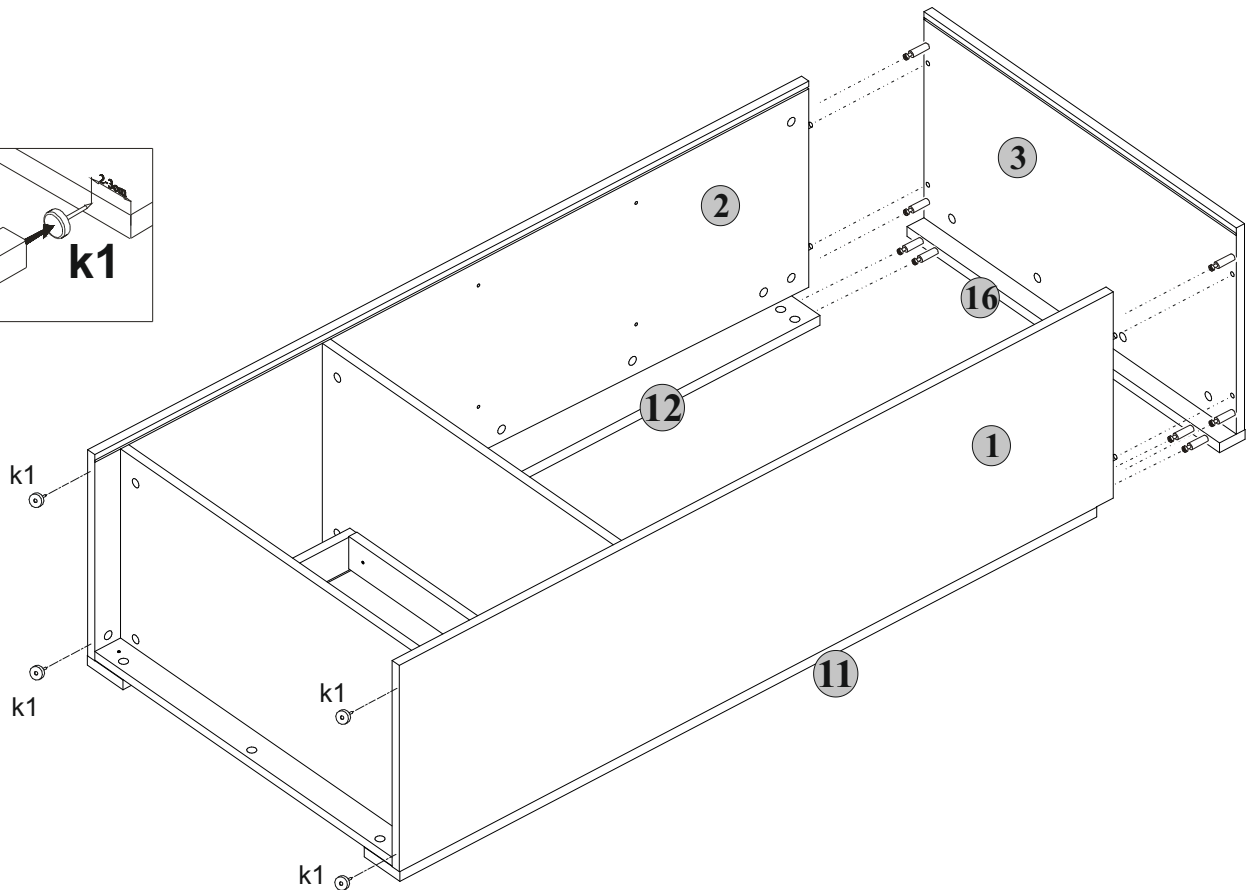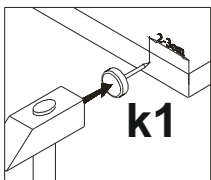


13

4x  $\phi 4.2 \times 13 \text{ mm}$ p38

2x  $\phi 4 \times 30 \text{ mm}$ p9

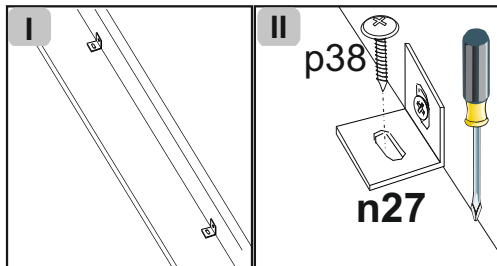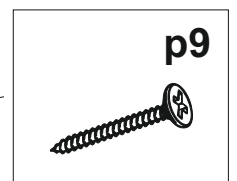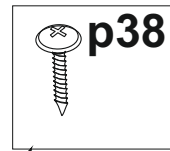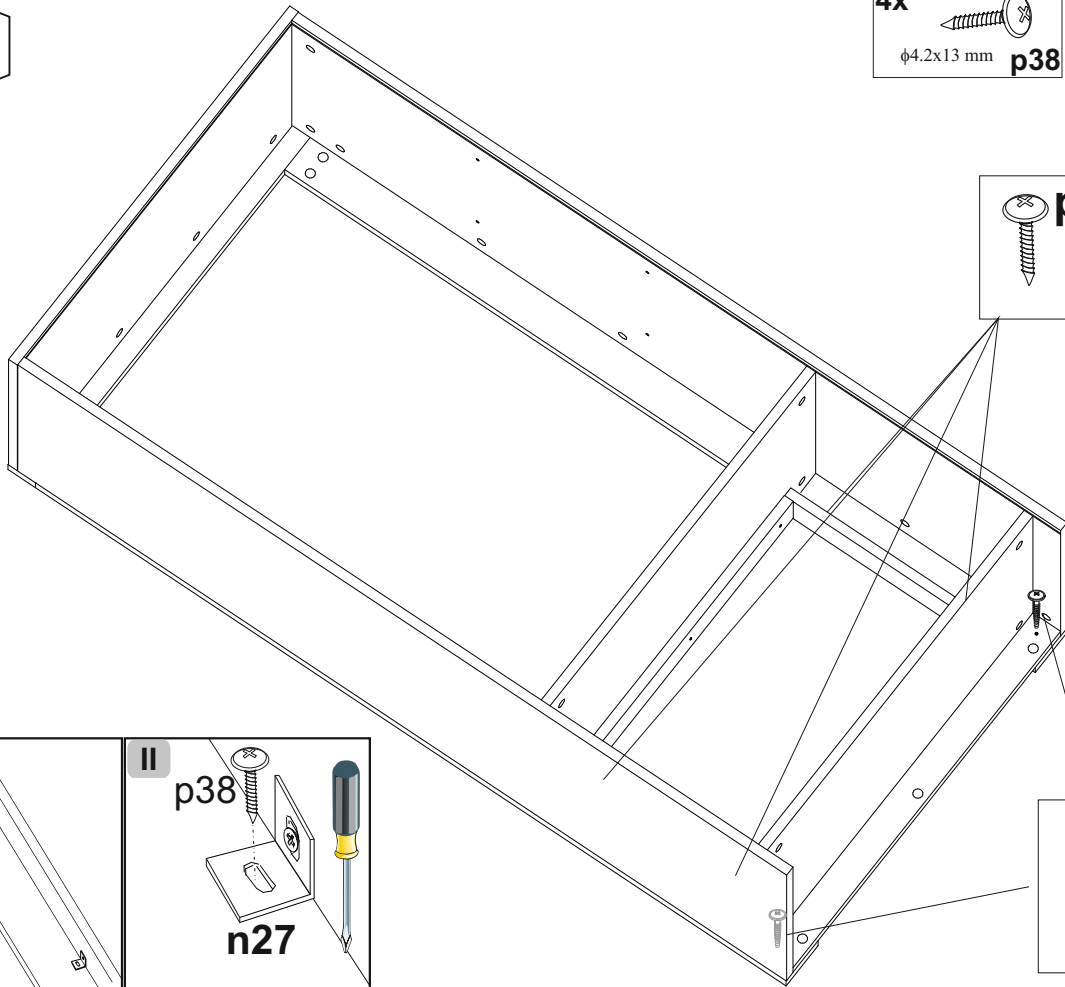

14



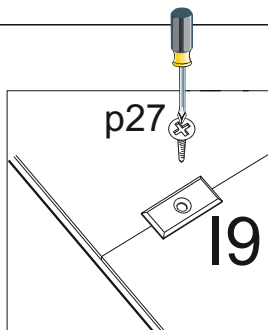


3x  19

5x  l1








3x  $\phi 2 \times 20 \text{ mm}$ p27

7x  12

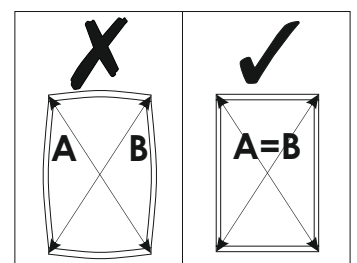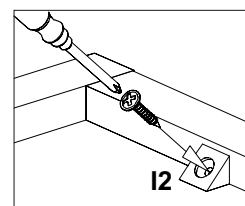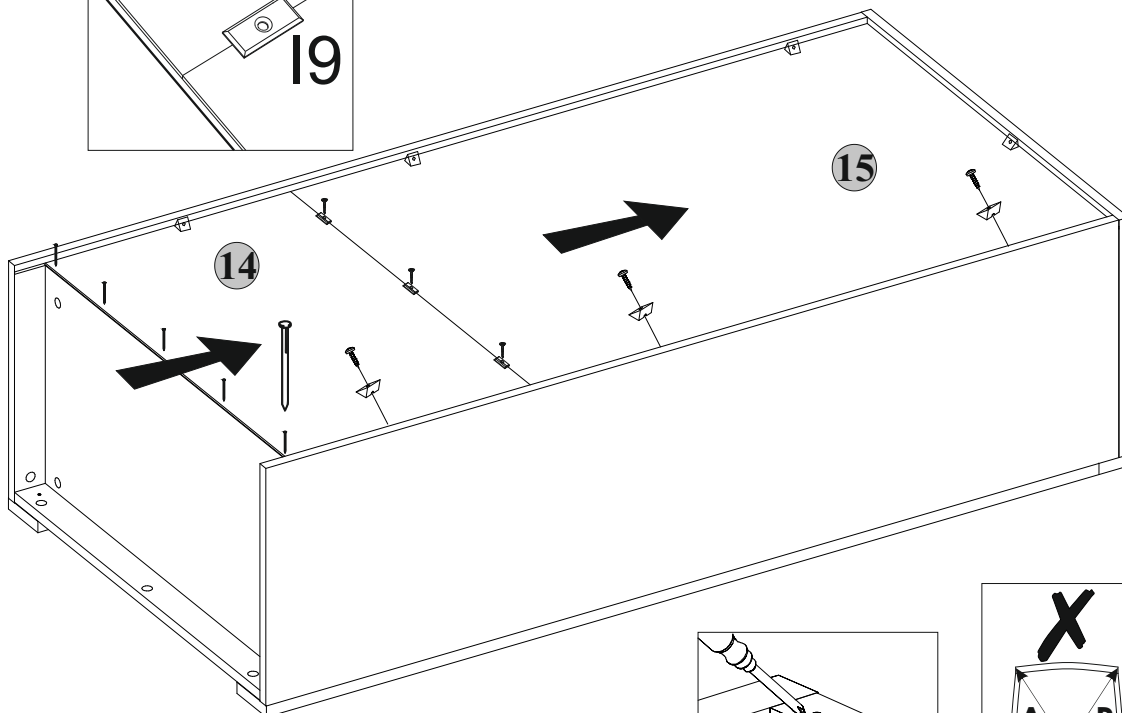

8

15

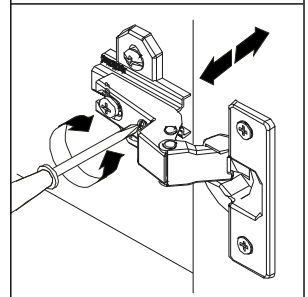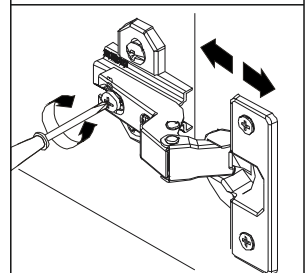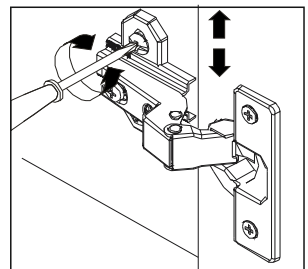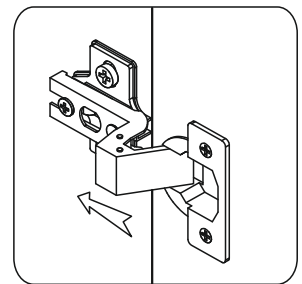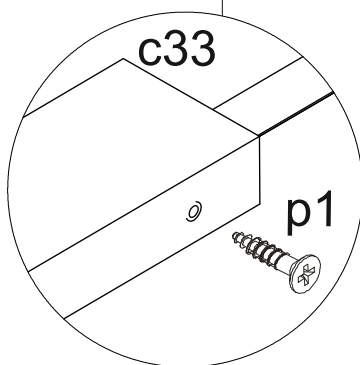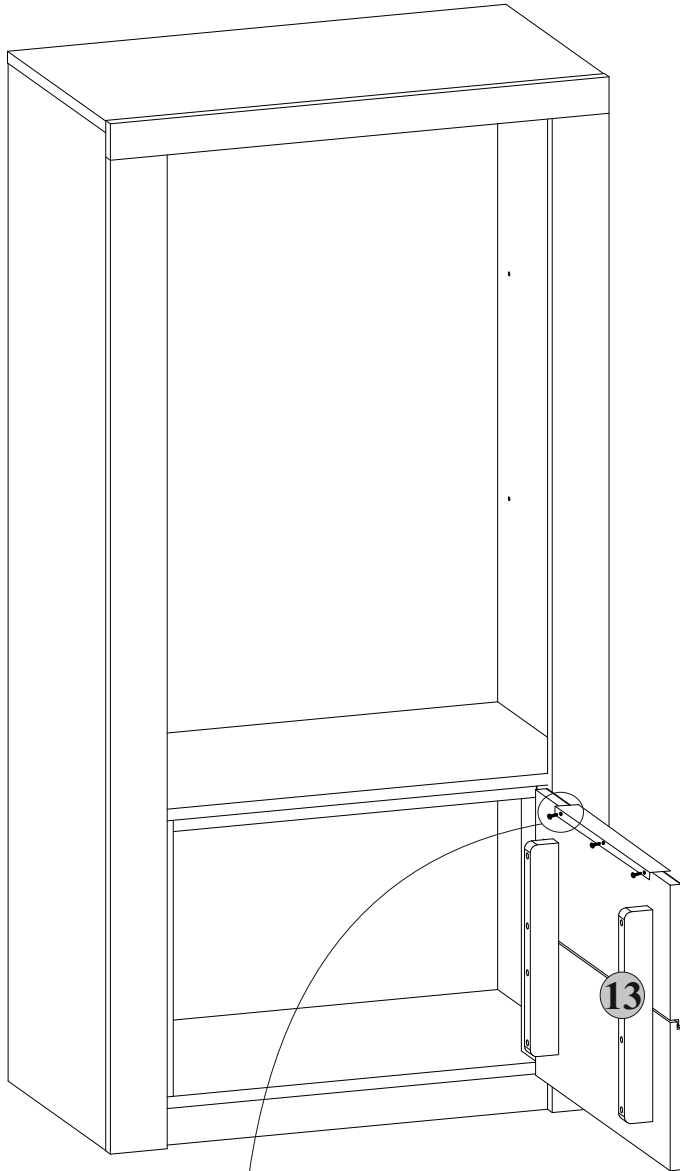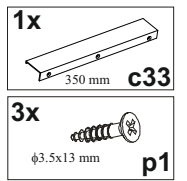

16

