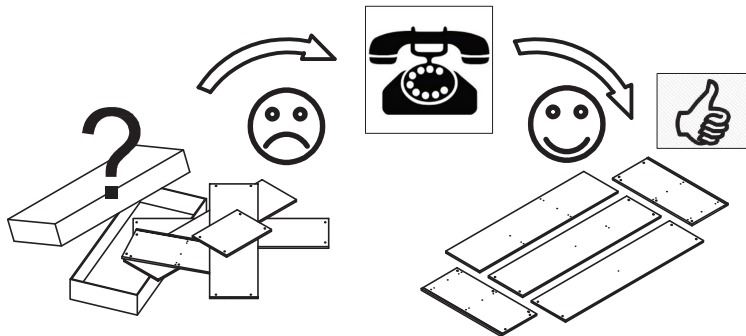
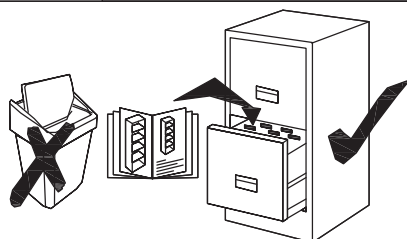


Service


Name

BARCELONA

Typ

T83 - GARDEROBENSCHRANK

- ① 752x372x38
- ② 666x330x25
- ③ 712x352x29
- ④ 752x372x28
- ⑤ 1934x352x19
- ⑥ 1934x352x19
- ⑦ 712x320x18
- ⑧ 710x290x18
- ⑨ 1929x296x20
- ⑩ 1929x446x20
- ⑪ 1921x728x3
- ⑫ 60x60x15
- ⑬ 711x15x10
- ⑭ 690x342x342 - **beleuchtung!!**

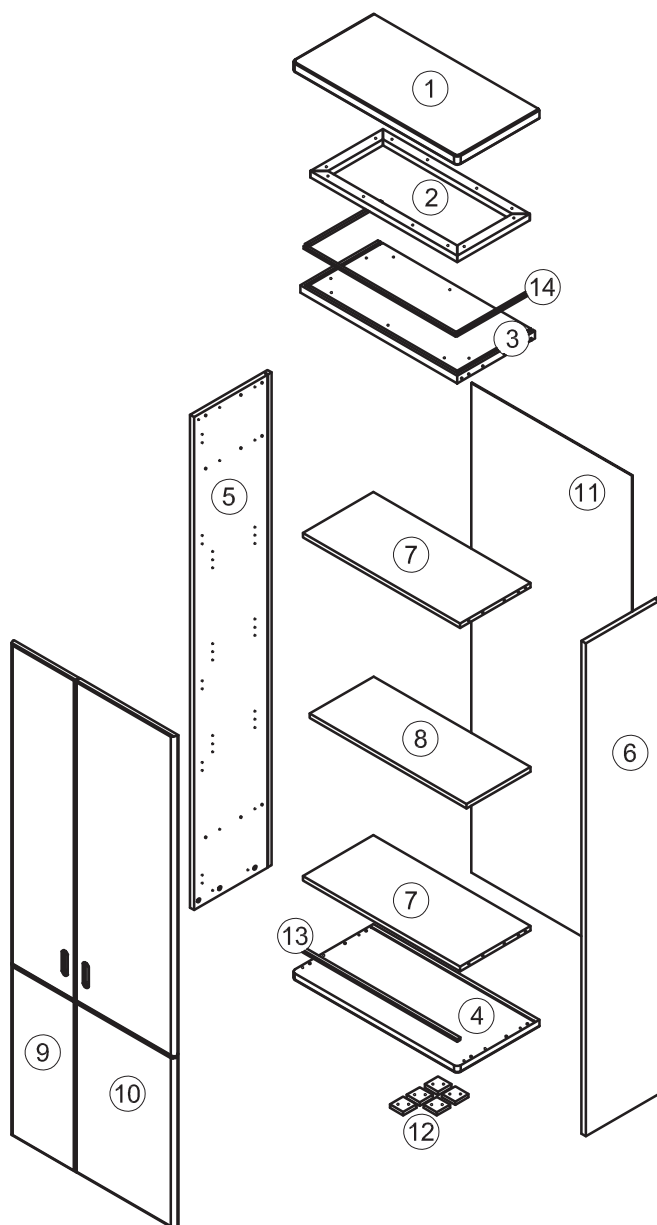

D1
Ø8x32 mm

A2
60x20x15 mm

ES
6,3x13 mm

EX
Ø15x12 mm

S1 -16
3,0x16 mm

PG
64 mm

S2-45
4x45mm

C2

M1

T1

B

W1

S2-30
4x30 mm

VI
260mm

P1

GL

ST

S -16
3,5x16 mm

H1

S2-16L
4x16 mm

M20
M4x20 mm

Modellname: **BARCELONA**


MONTAGEANLEITUNG TYPE T83 - GARDEROBENSCHRANK

1/1




1 Person

10
Min.




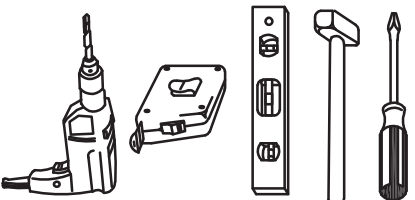


(M20)	M4x20 mm	x4	(W1)		x4
(C2)		x20	(PG)	64 mm	x2
(S2-16L)	4x16 mm	x2	(ST)		x4
(A2)	60x20x15 mm	x2			

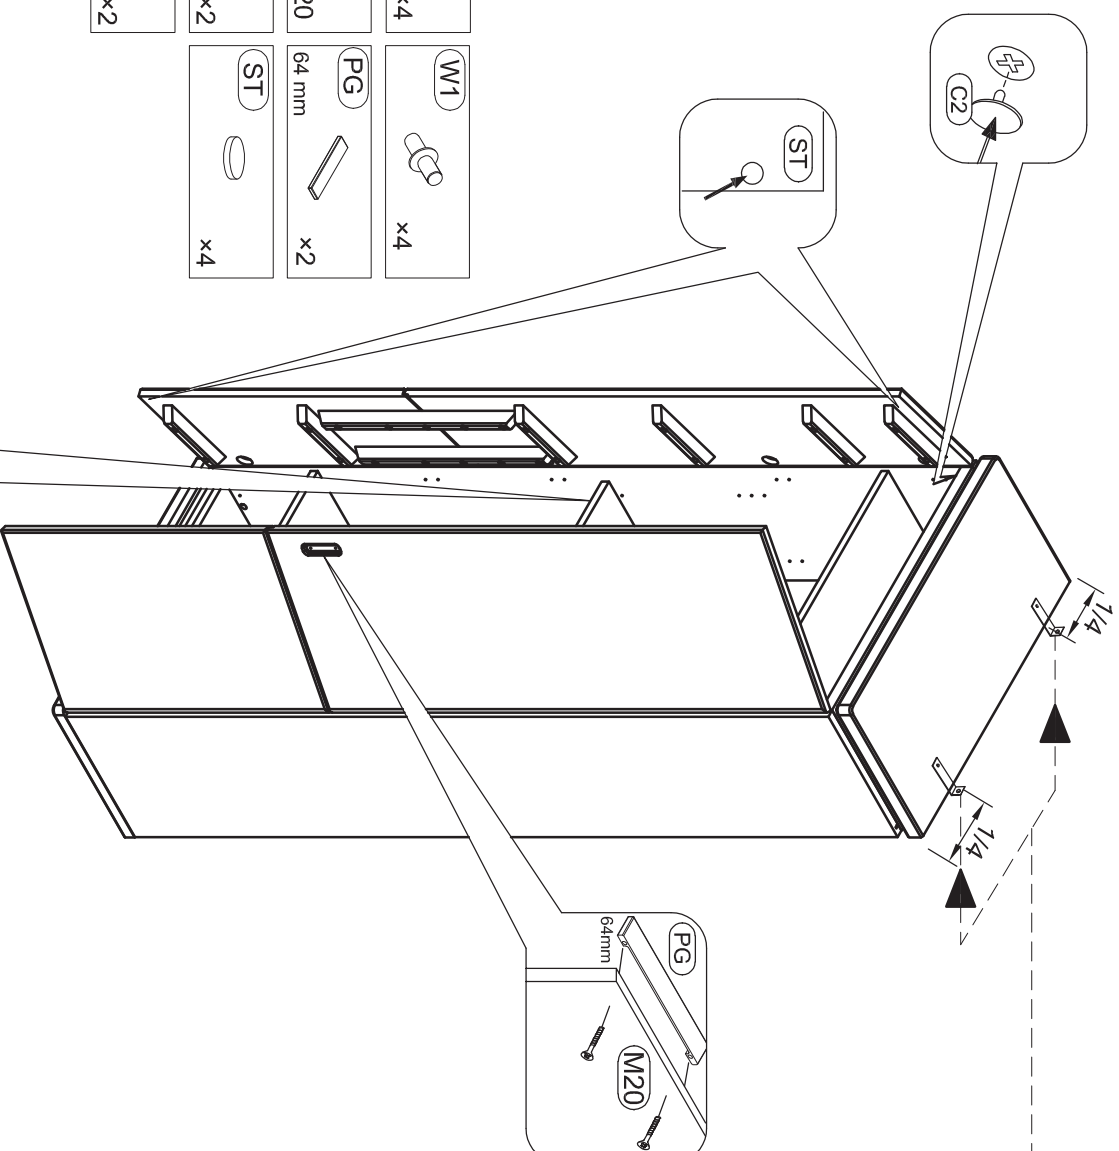

1. Marking the top rail position with a pencil.
2. Drilling a hole in the top rail.
3. Inserting the top rail into the wardrobe frame.
4. Securing the top rail with a screw (A2).
5. Attaching the side panel with a screw (S2-16L).

Achtung:

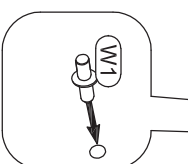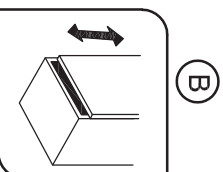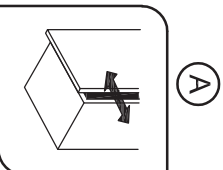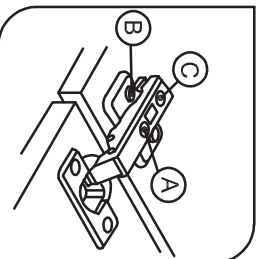

Service




28.04.2020.

Name


BARCELONA

Typ

T 80 - BANK

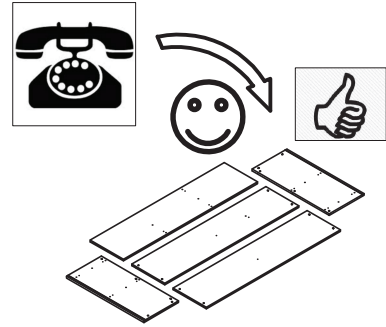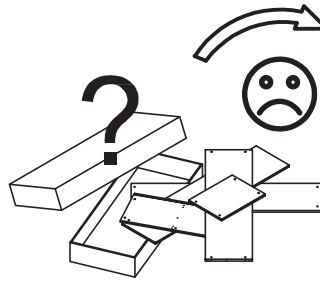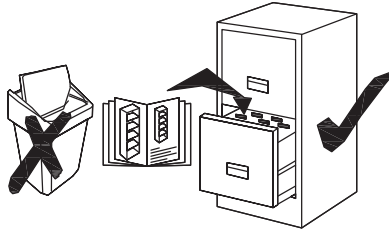

- ① 900x372x38
- ② 900x372x28
- ③ 386x352x19
- ④ 386x352x19
- ⑤ 386x331x18
- ⑥ 419x290x18
- ⑦ 896x380x20
- ⑧ 402x876x3
- ⑨ 60x60x15

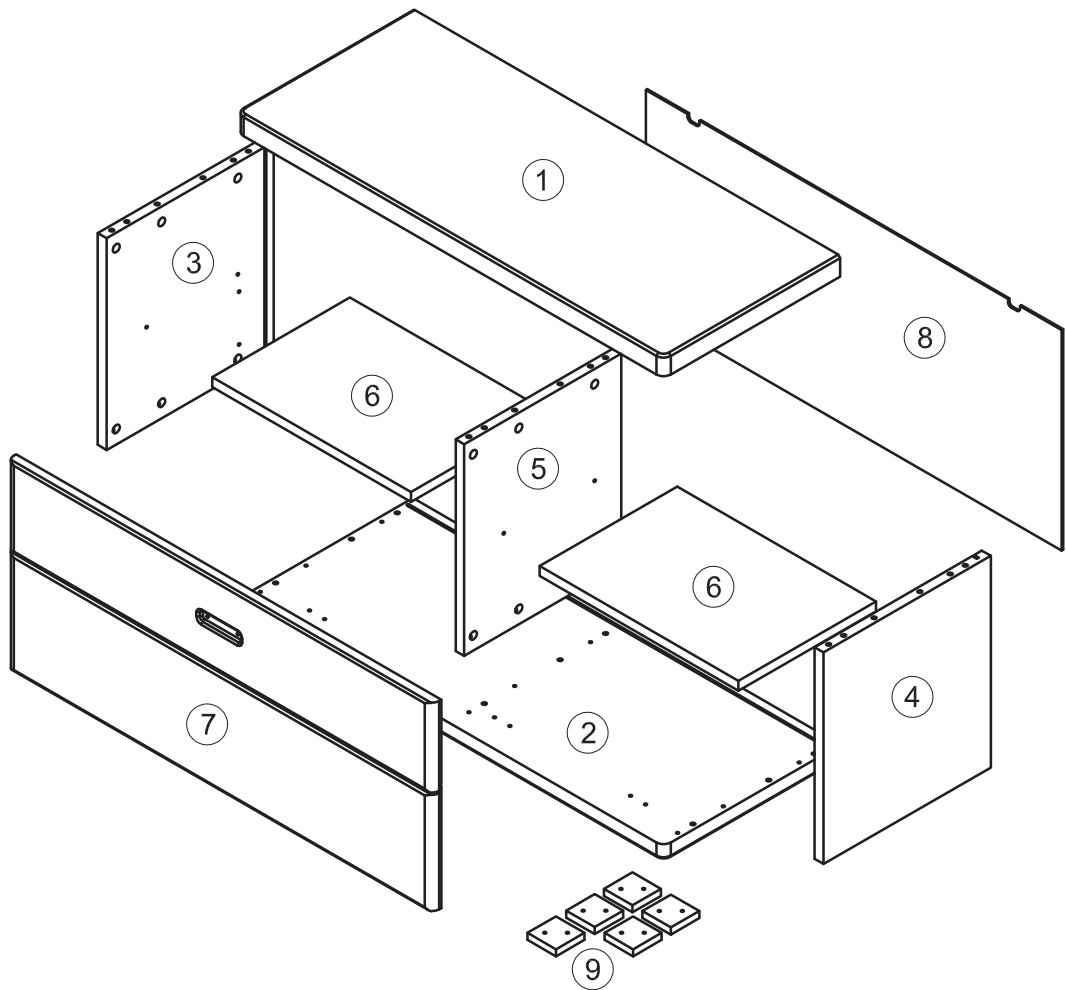

D1

Ø8x32 mm

S-16

3,5x16 mm

W1



EX

Ø15x12 mm

ES

6,3x13 mm


S2-16L

4x16 mm

A2

60x20x15 mm

GL



T1



B




S2-30

4x30 mm

AM


270mm



ST



H3



P2



PG

64 mm



C2



M20

M4x20 mm



Modellname: **BARCELONA**

MONTAGEANLEITUNG

TYPE T80 - BANK








28.04.2020.

1/1




1 Person


10
Min.

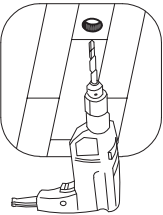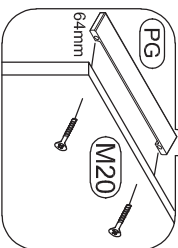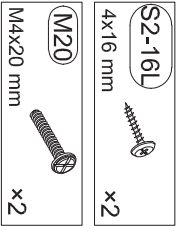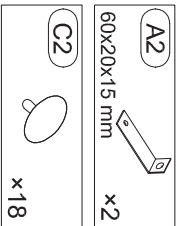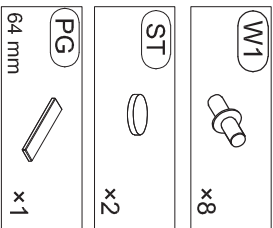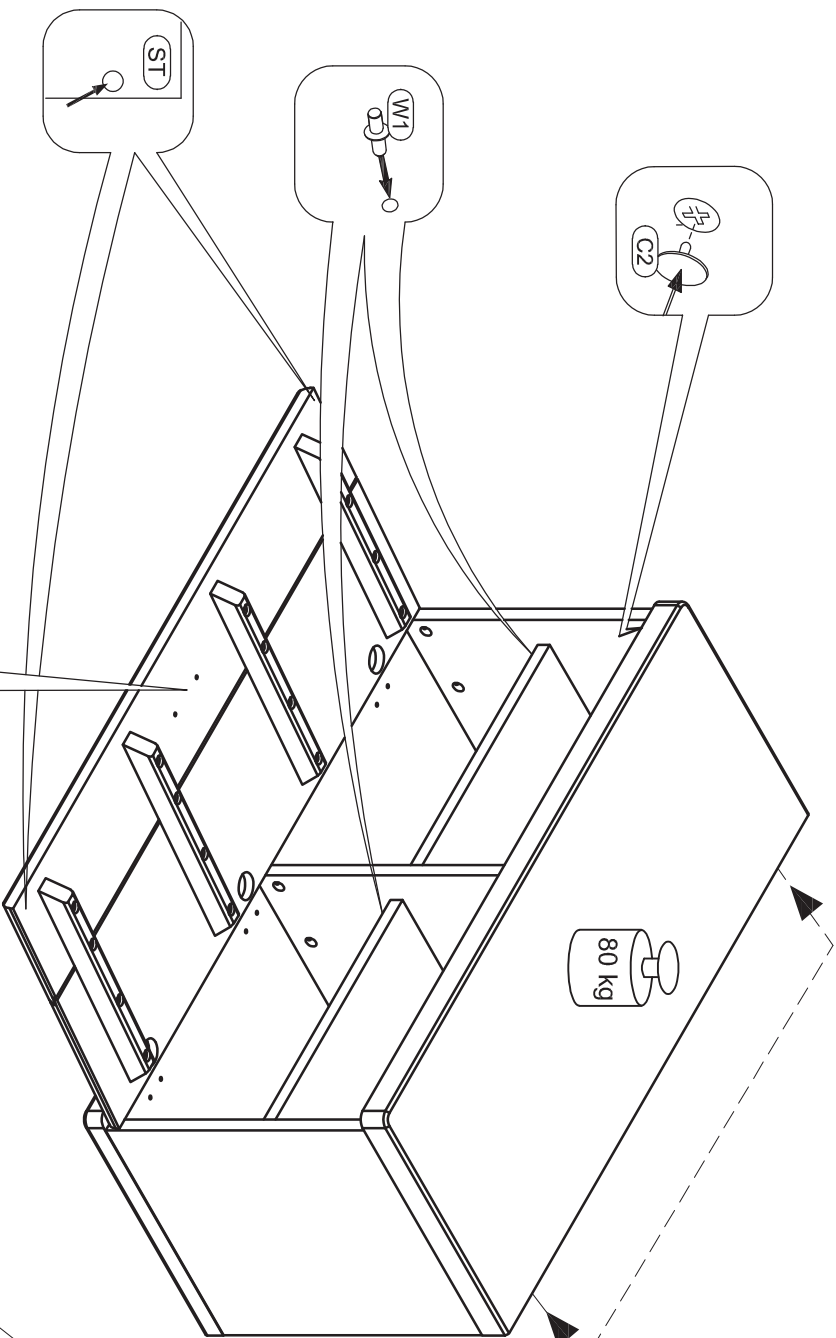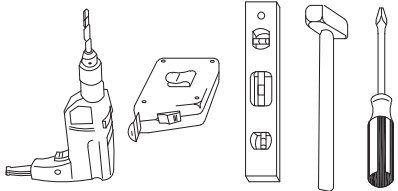


1.

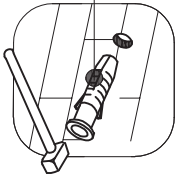


2.

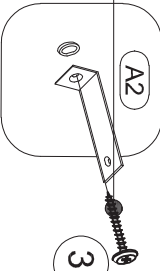

3.

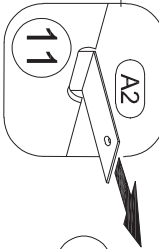

4.

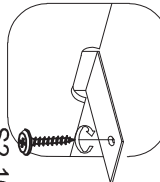



5.

Service

Name

BARCELONA


Typ

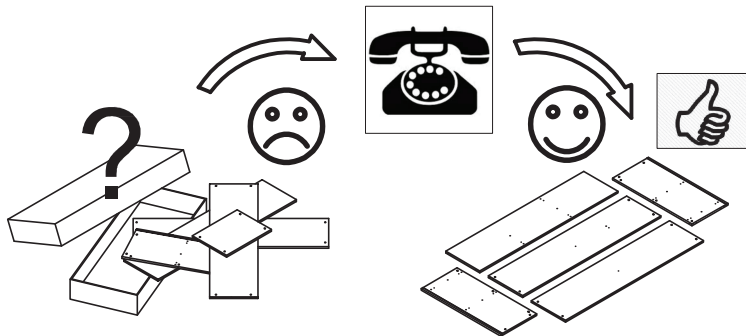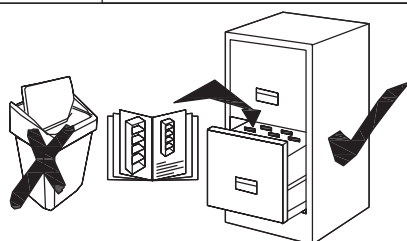T 90 - GARDEROBENPANEEL

① 948x33x38

② 887x940x19

③ 982x295x40

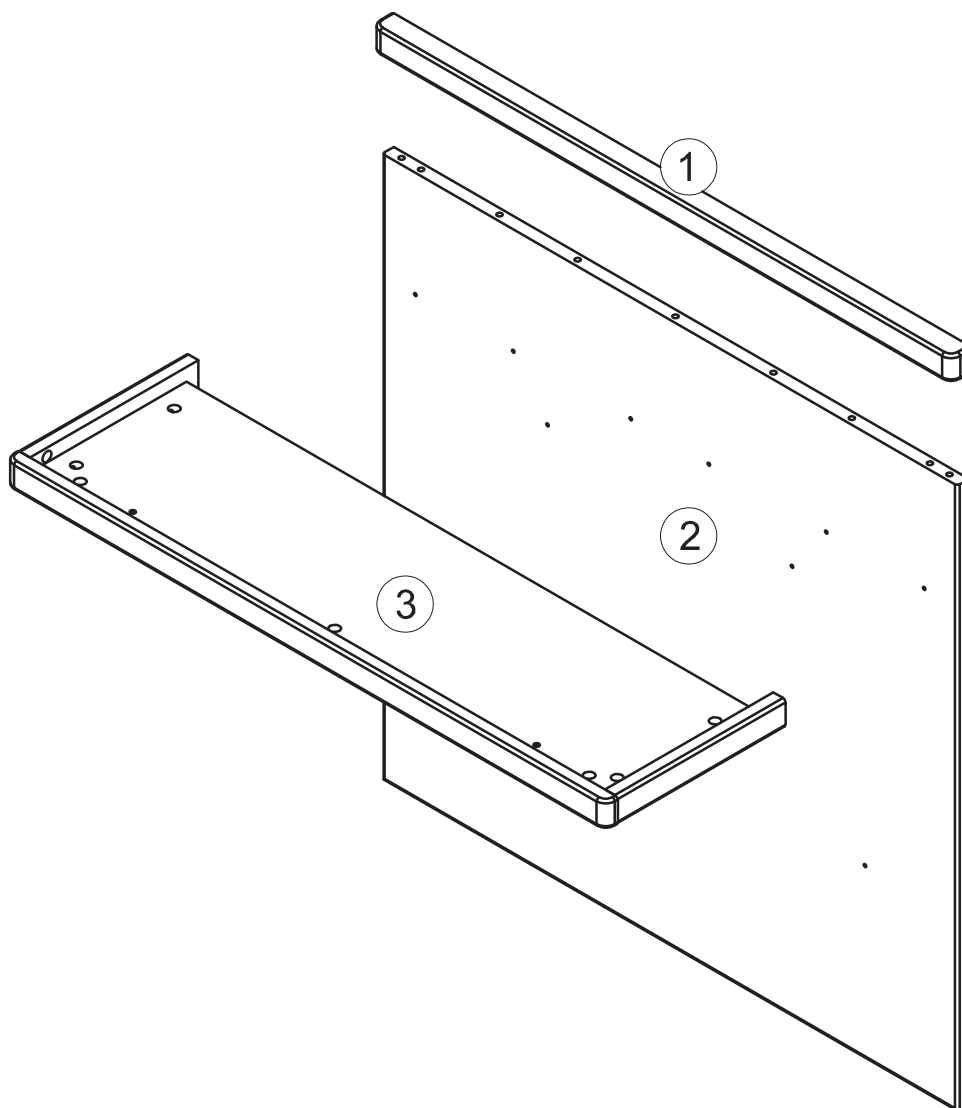


D1



Ø8x32 mm

FI



25x25x3mm

EX



Ø15x12 mm

S3-70



5x70 mm

S -16



3,5x16 mm

CR



VG



T1



N



O3



Ø5x60mm

C2



M25



M4x25 mm



Modellname: **BARCELONA**

MONTAGEANLEITUNG TYPE T90 - GARDEROBENPANEEL


1/1




1 Person

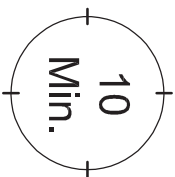





1.

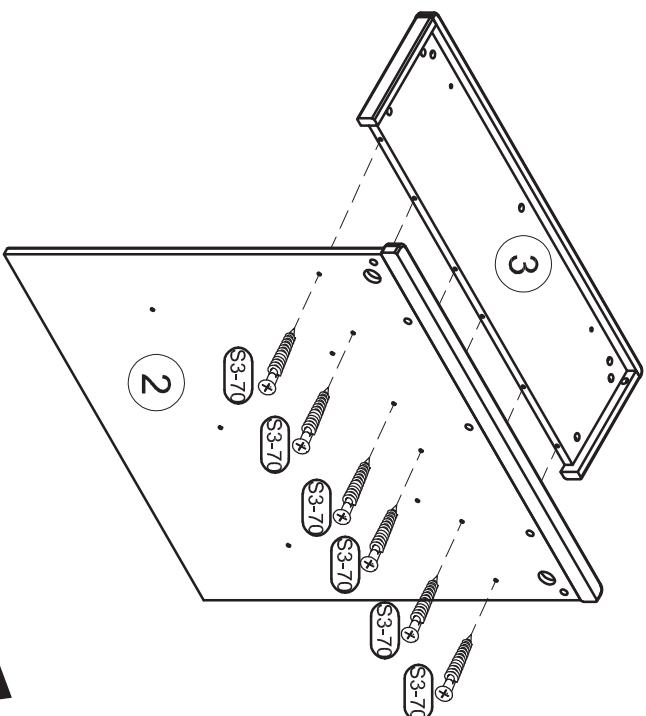




2.

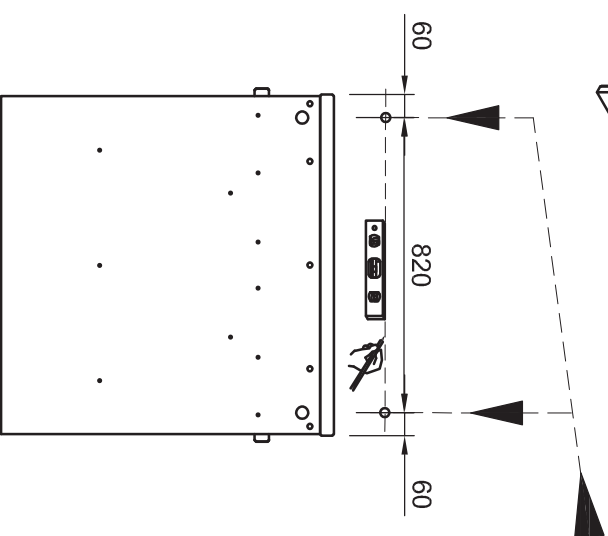

3.

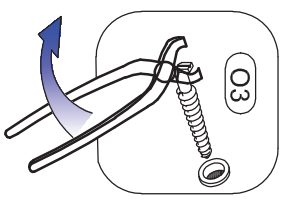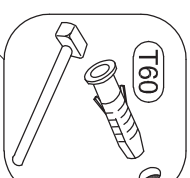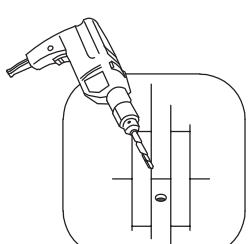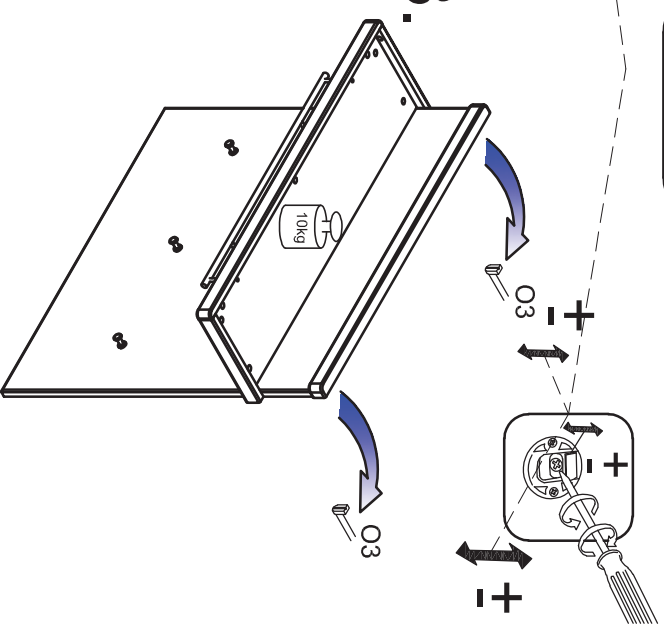

Achtung:
Geeignetes Wandbefestigungsmaterial gegen
kippen erhalten Sie im Fachhandel

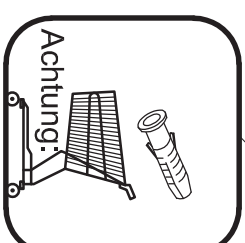



Service

Name
























BARCELONA

Typ

T 86- KOMMODE

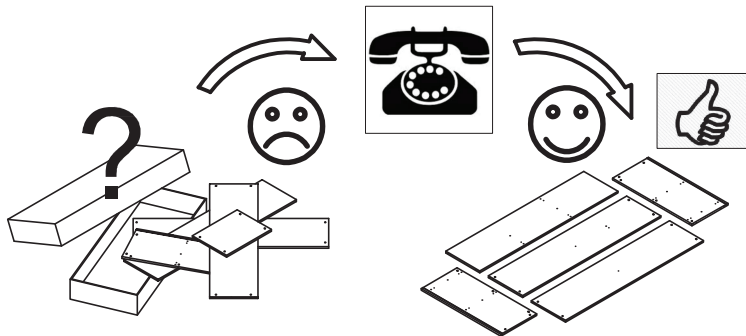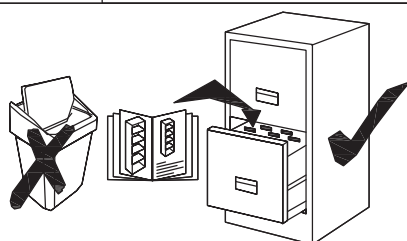

- ① 752x372x38
- ② 666x330x25
- ③ 712x352x19
- ④ 752x372x28
- ⑤ 1009x352x19
- ⑥ 1009x352x19
- ⑦ 990x331x18
- ⑧ 422x295x18
- ⑨ 272x295x18
- ⑩ 419x290x18
- ⑪ 270x290x18
- ⑫ 408x300x120
- ⑬ 446x164x20
- ⑭ 668x446x20
- ⑮ 1004x296x20
- ⑯ 1006x728x3
- ⑰ 60x60x15
- ⑱ 690x342x342 - **beleuchtung!!**

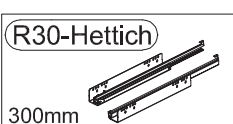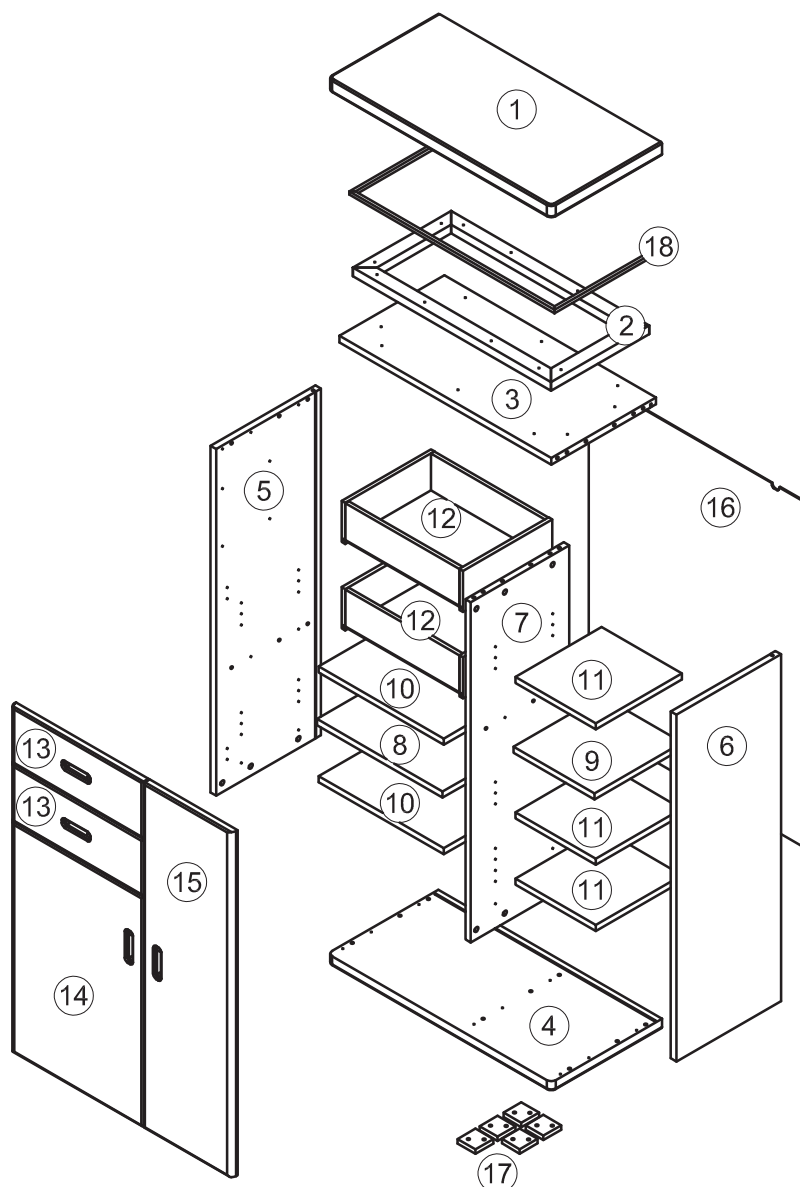

Modellname: **BARCELONA**

MONTAGEANLEITUNG
















TYPE T86 - KOMMODE

1/1








1 Person

10
Min.

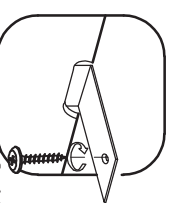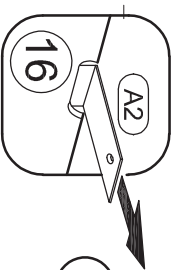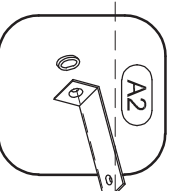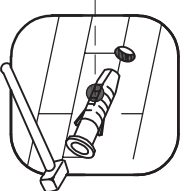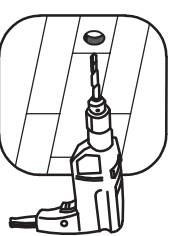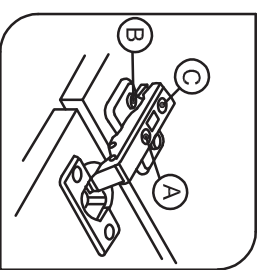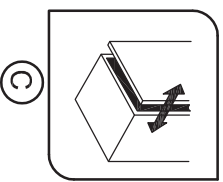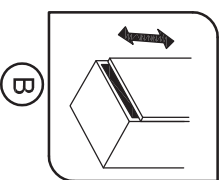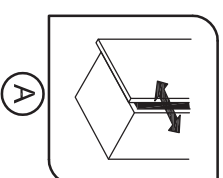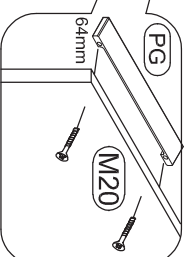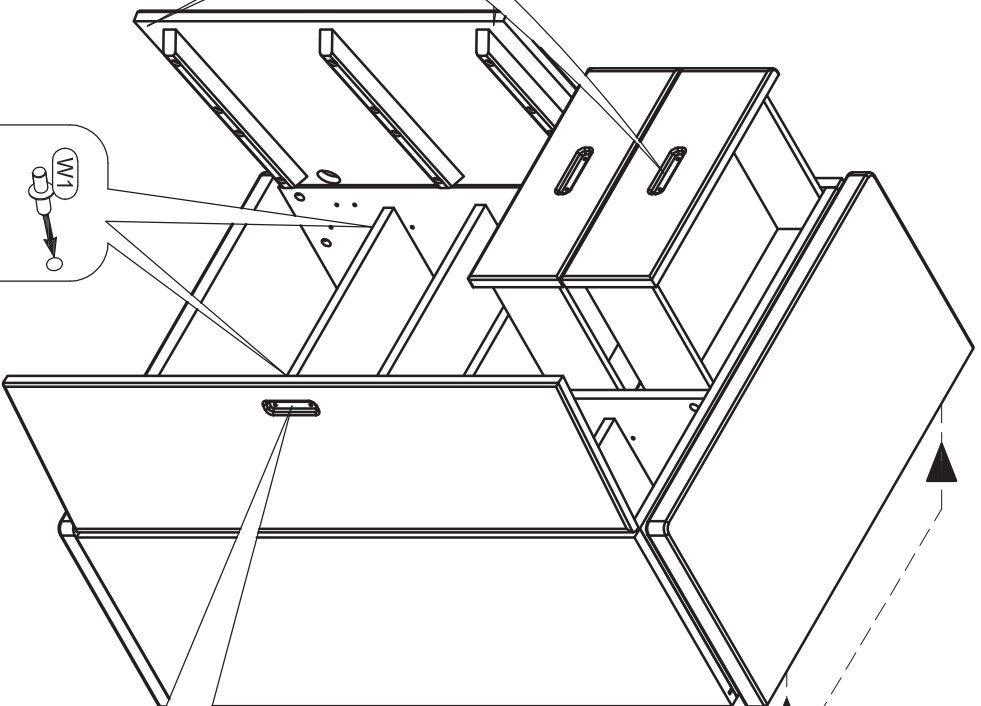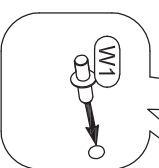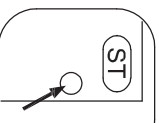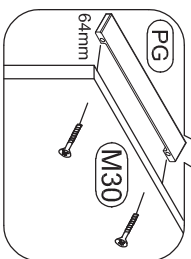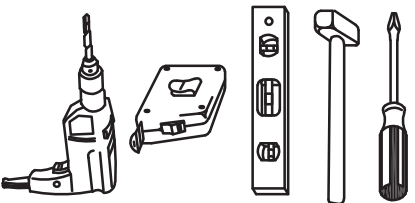

Schublade mit 3x20mm schrauben an die Unterführungsschleife befestigt

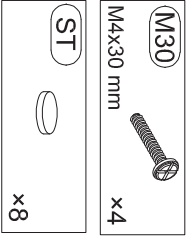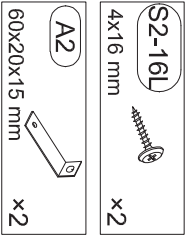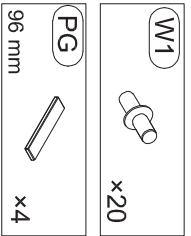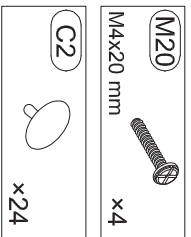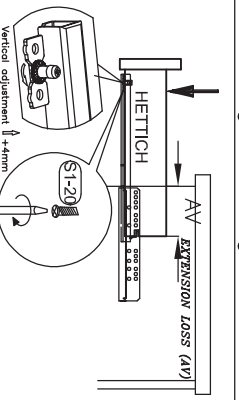

Achtung:






S2-16L

Service

Name


BARCELONA

Typ

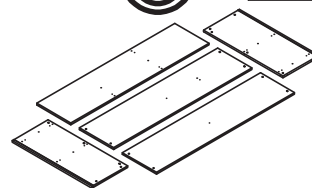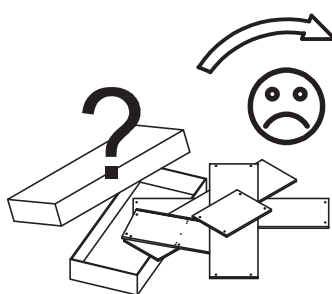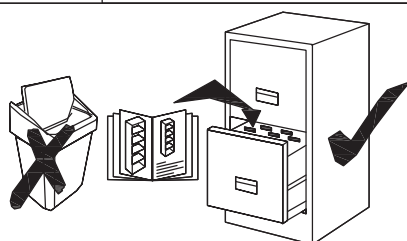T 93 - SPIEGEL

① 754x33x38

② 744x746x20

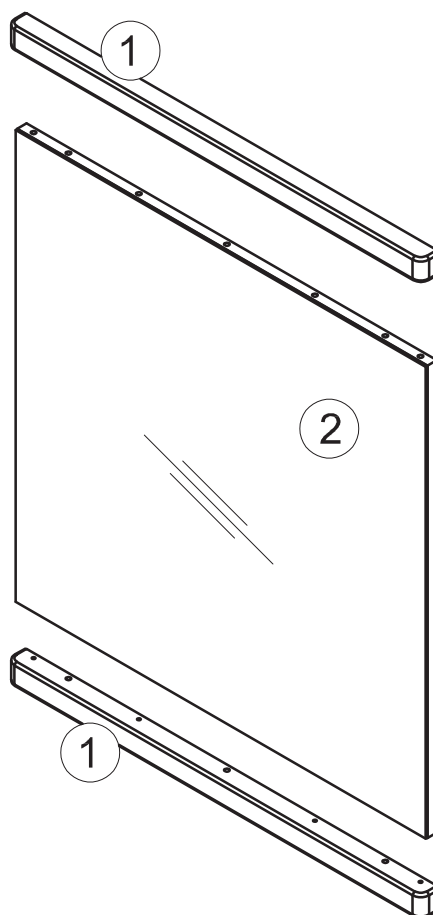


D1



Ø8x32 mm

FI



25x25x3mm

EX



Ø15x12 mm

C2



O3



Ø5x60mm

T1



S -16



3,5x16 mm

N







Modellname: **BARCELONA**

MONTAGEANLEITUNG TYPE T93 - SPIEGEL

1/1



1 Person

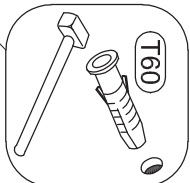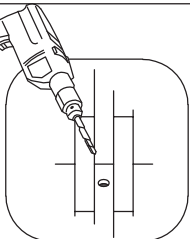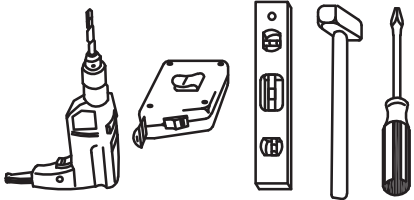
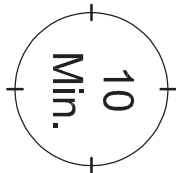


Achtung:
Geeignetes Wandbefestigungsmaterial gegen
kippen erhalten Sie im Fachhandel




Achtung:

1.

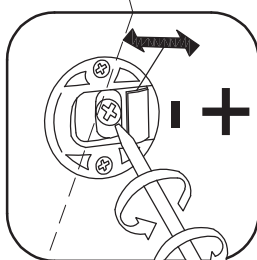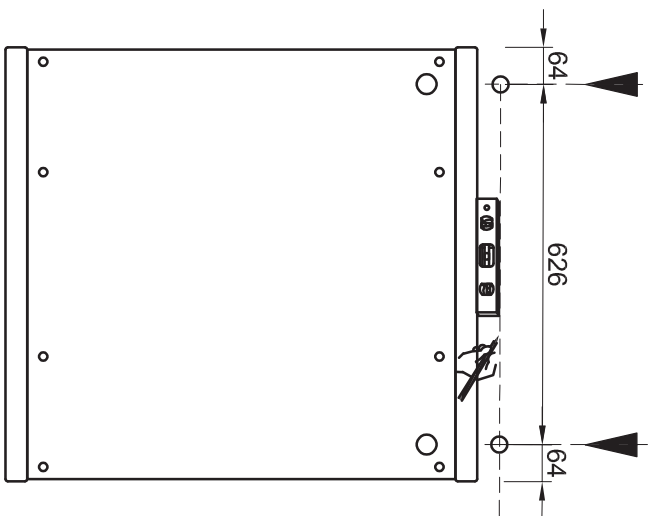

2.

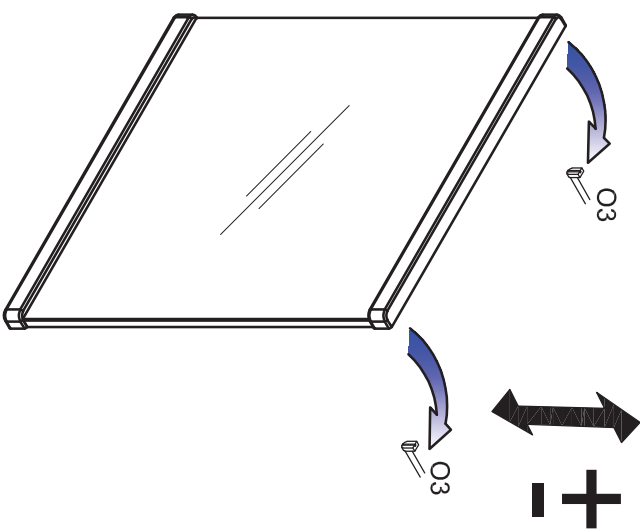

F1

25x25x3mm

x2

C2



x8

O3



x2

