
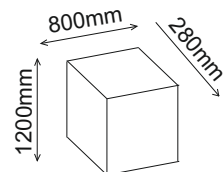
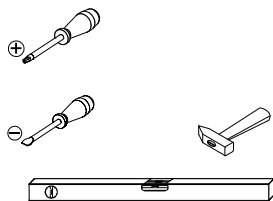
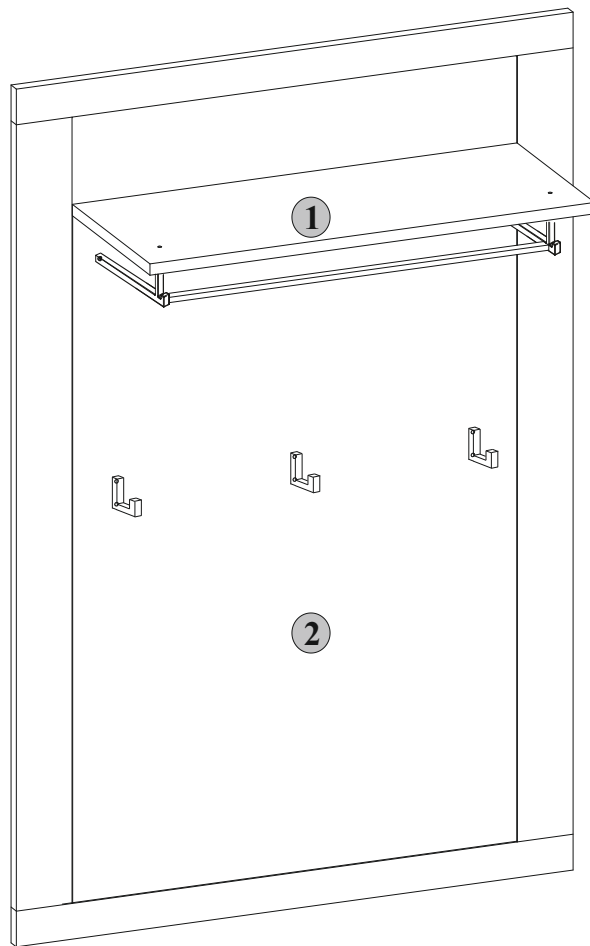


“3984”











versionsnummer: 05.12.2022

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.




B1		B2	
2x φ8x40 mm t14	1x z1	3x g31	
4x 5x10.5 e3	2x n3	1x g33L	1x g33R
3x φ7x70 mm e3	3x s1	1x 550 mm g34	10x φ4x25 mm j30

1

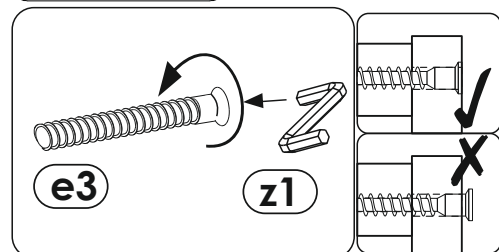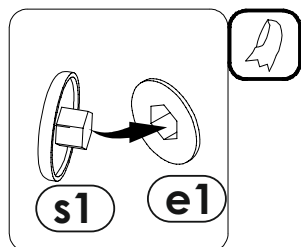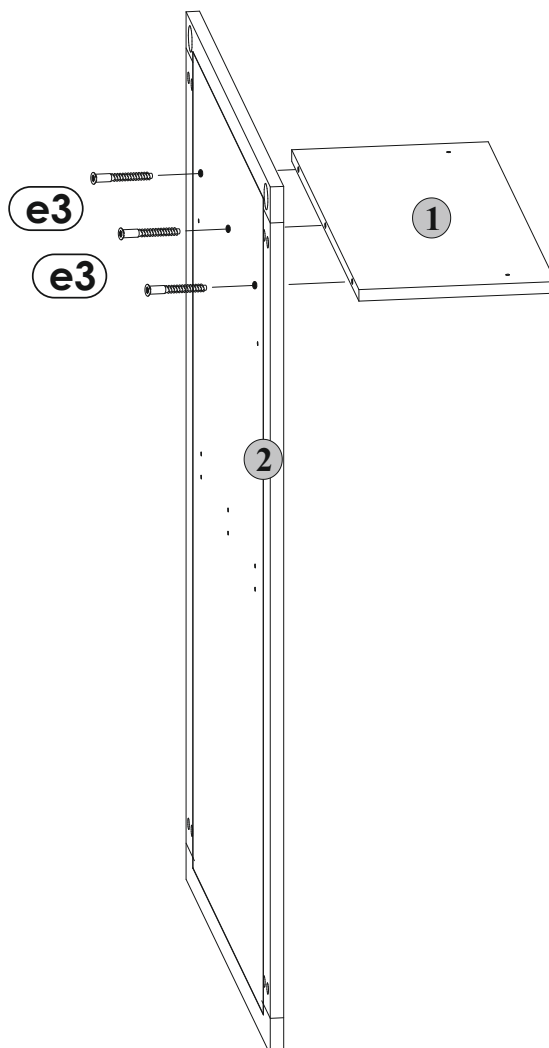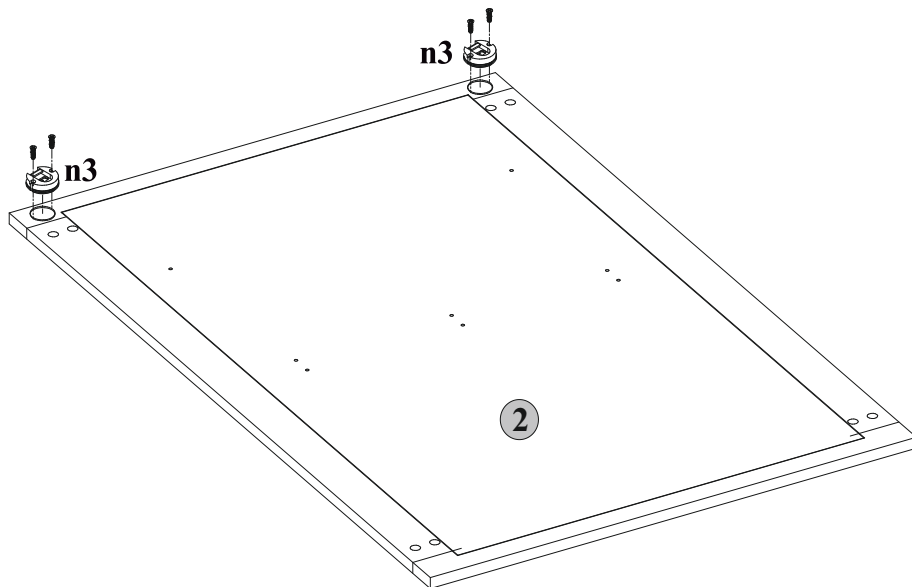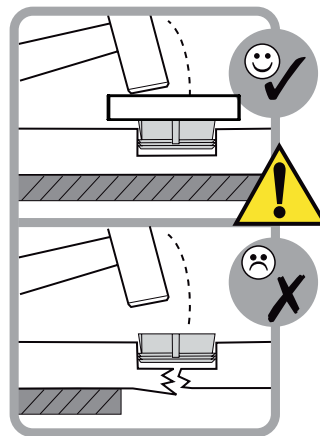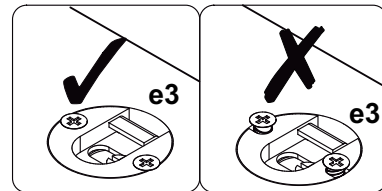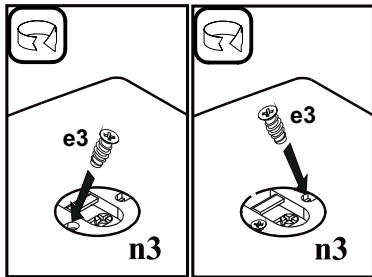

2


2

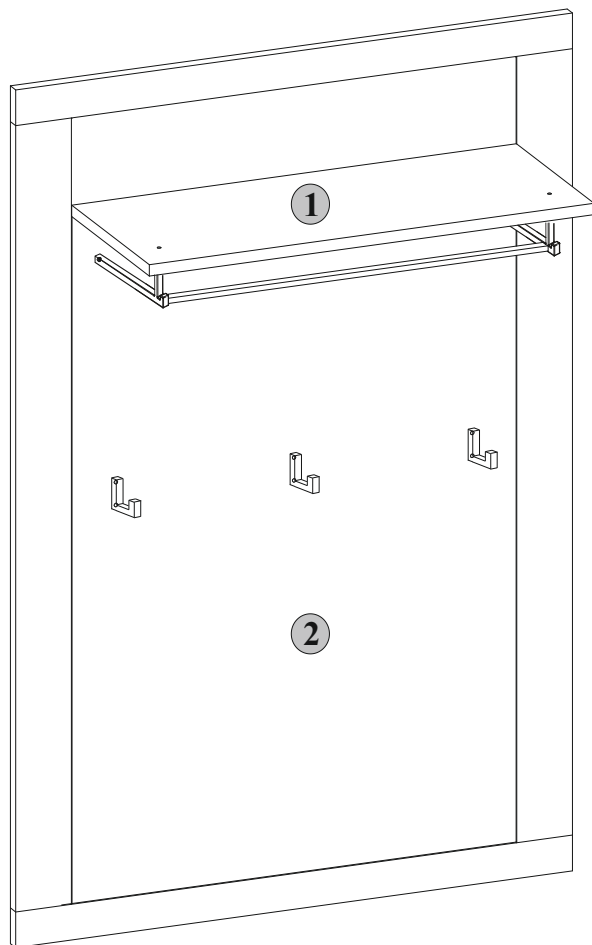




3x  g31

1x  g33L

1x  g33R

1x  550 mm g34


4x  $\phi 4 \times 25$ mm j30

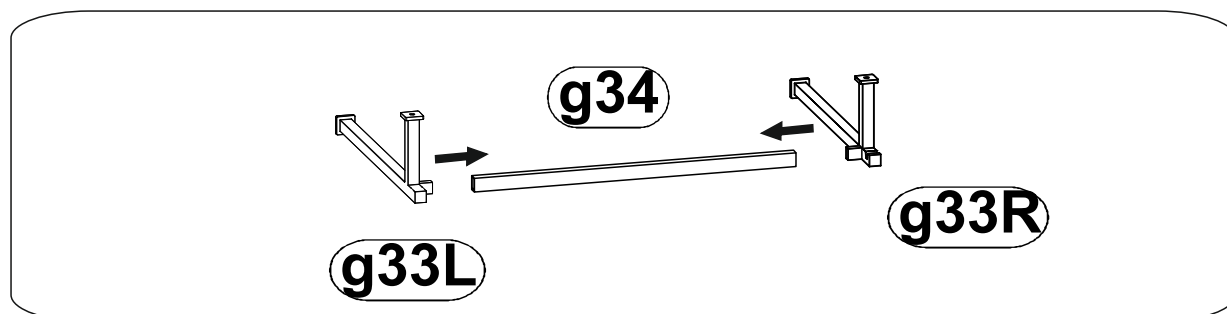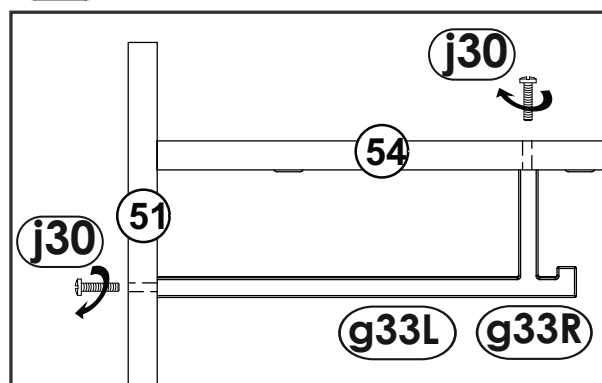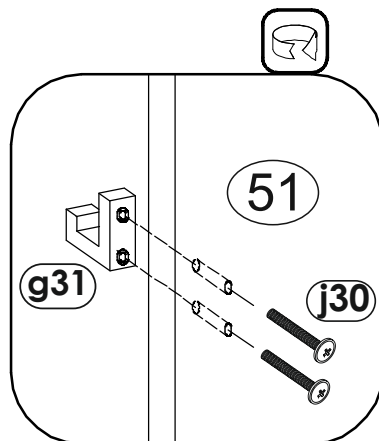

3






3

x2




φ8x40 mm



t14

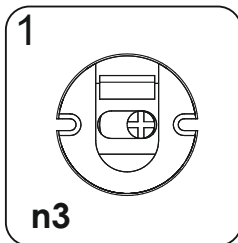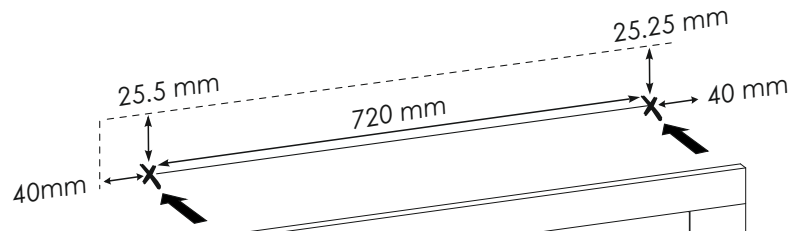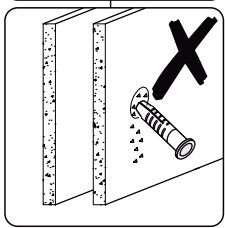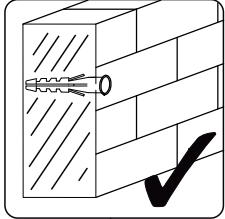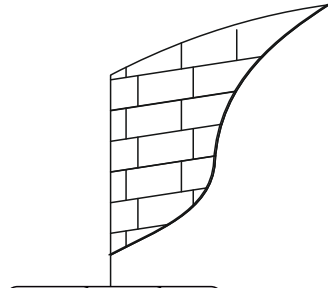

n3

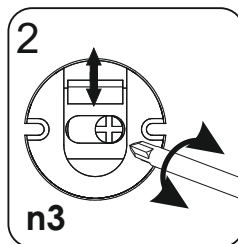


n3

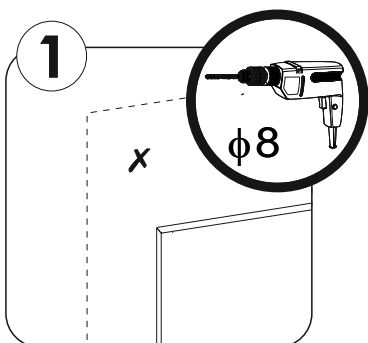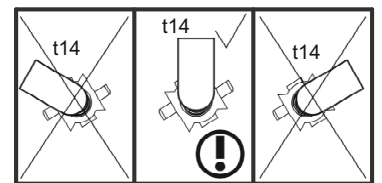

1

x


φ8

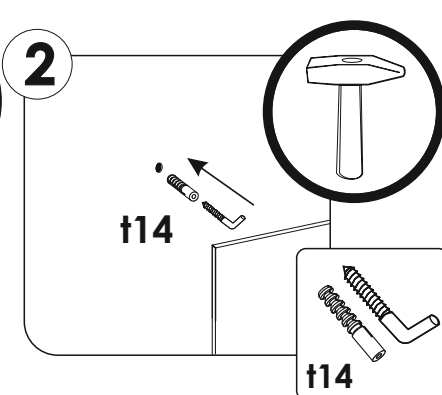

2

t14

t14

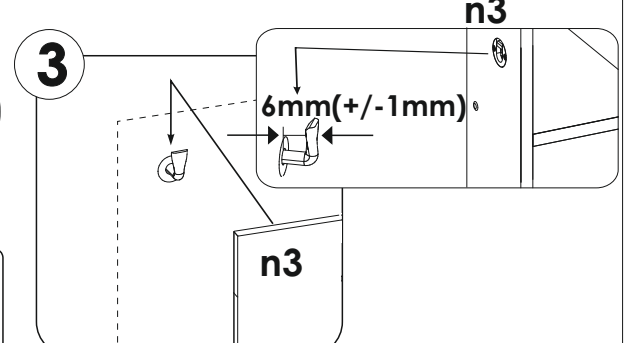

3

6mm(+/-1mm)

n3

4