
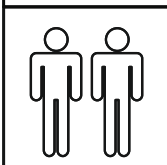
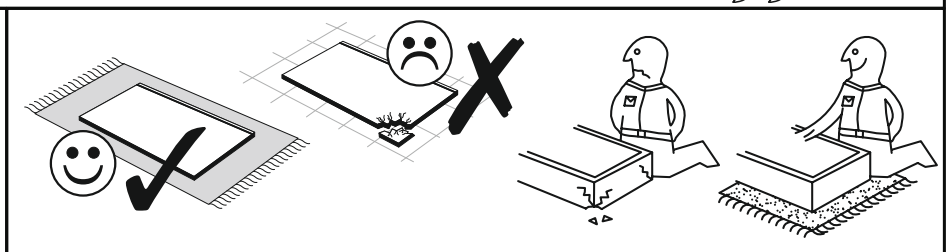
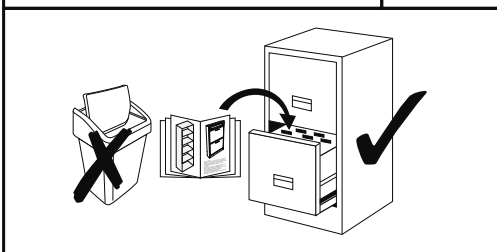


**Art.Nr. : 0772-KO\_121 GL**

**Kommode**

REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis  
Servis • Szerviz • Сервисная служба**

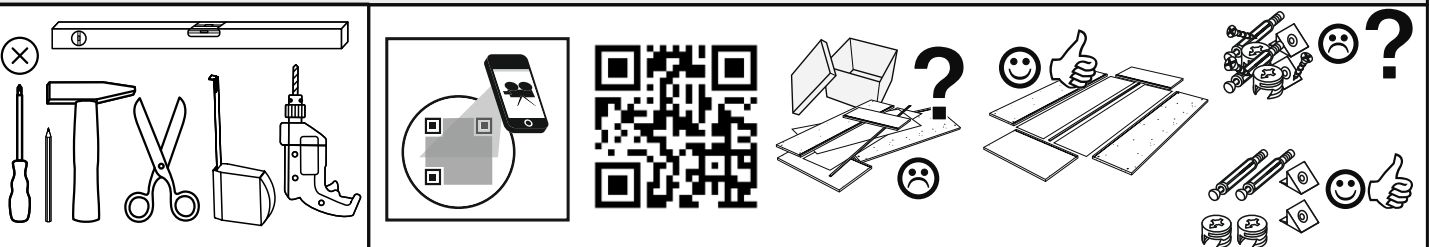

**Colli 1/4 :** (13) (14) (15) (16) (17) (18) (19) (20) (21) (22) (23) (24)

**Colli 2/4 :** (2) (3) (4) (9) (10) (11)

**Colli 3/4 :** (1) (5) (6) (7) (8) (12) Beutel 1/5, 2/5, 3/5, 4/5, 5/5

**Colli 4/4 :** (25)

# CHICAGO

## Beutel 1/5

1-10 2x		6,3x50 64x	1-30 3x16		1-70 4x		1-80 14x		1-90 4x		1-122 4x		4x13
1-200 18x		6,3x13 8x	2-08 h=10mm 20x		2-10 h=12mm 28x		2-20 8x		2-160 8x				

## Beutel 2/5

1-123 12x		4x15 6x	2-173 	3-07 2x		3-11 6x		3-42 6x		8er
--------------	--	------------	-----------	------------	--	------------	--	------------	--	-----

## Beutel 3/5



## Beutel 4/5

2-103 12x		8x30 6x	5-01 	5-130 2x	LEIM 4x	5-185 	5-260 1x		5-265 1x	set one by Musterring Pflegeanweisung	5-280 1x		6-425 4x	
--------------	--	------------	----------	-------------	------------	-----------	-------------	--	-------------	---	-------------	--	-------------	--


## Beutel 5/5

1-36 4x		4x40
------------	--	------


L = 20 mm

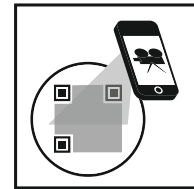


## Colli 1/4

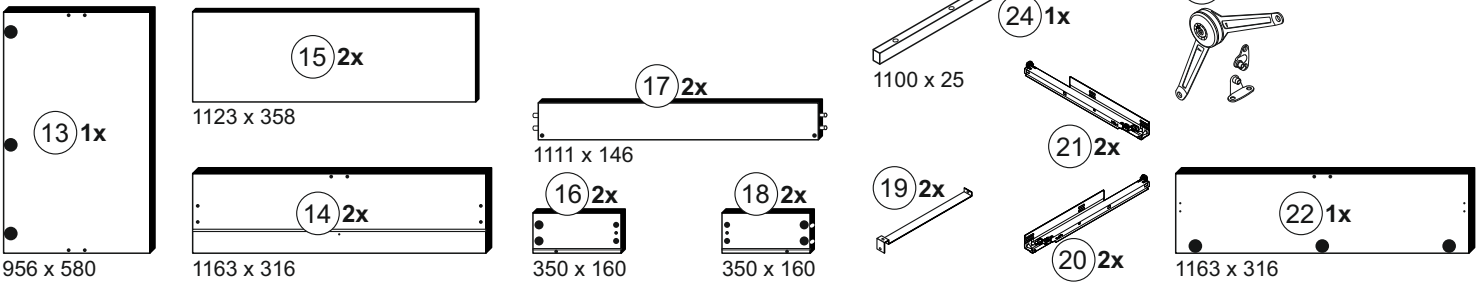


## Colli 2/4




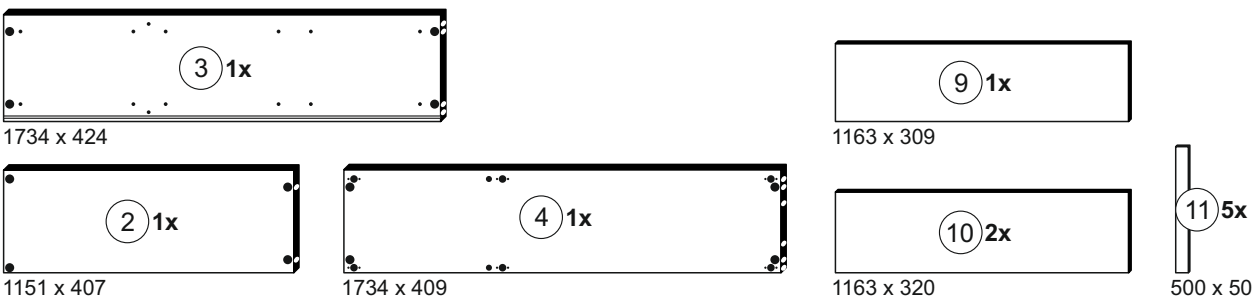


## Colli 3/4



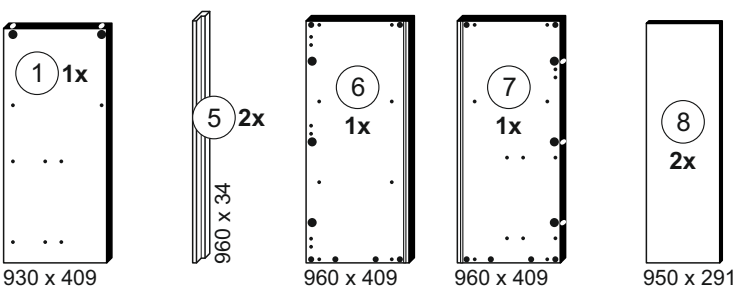


## Colli 4/4

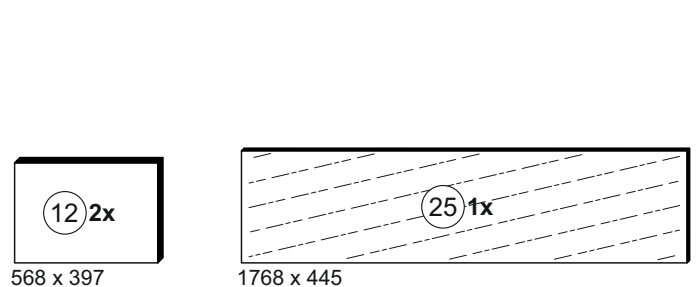

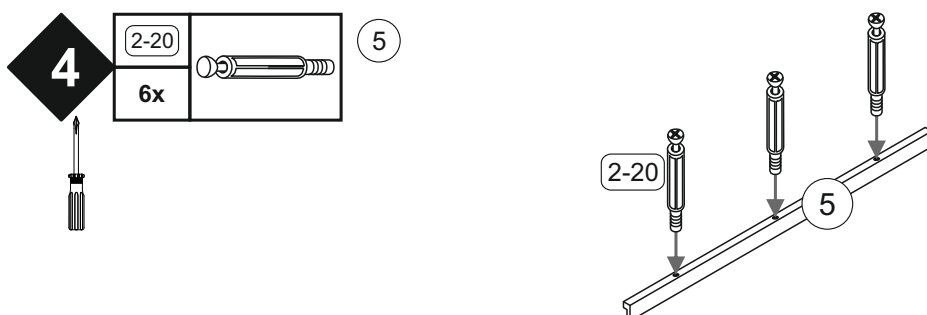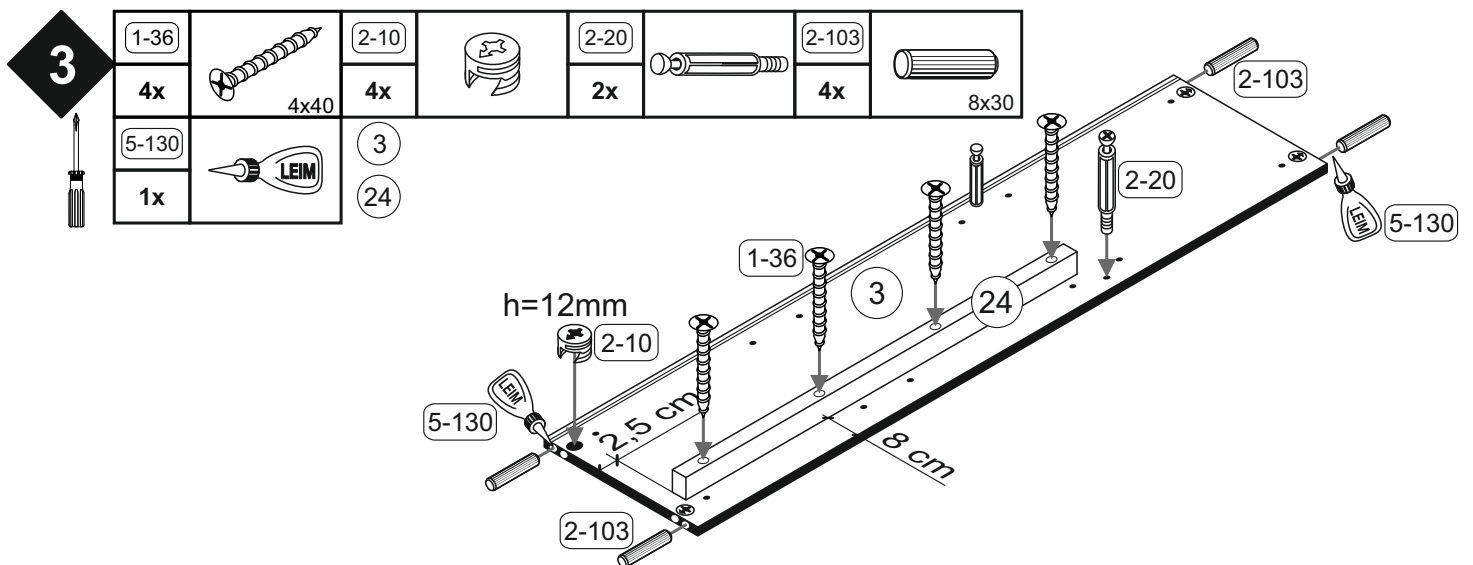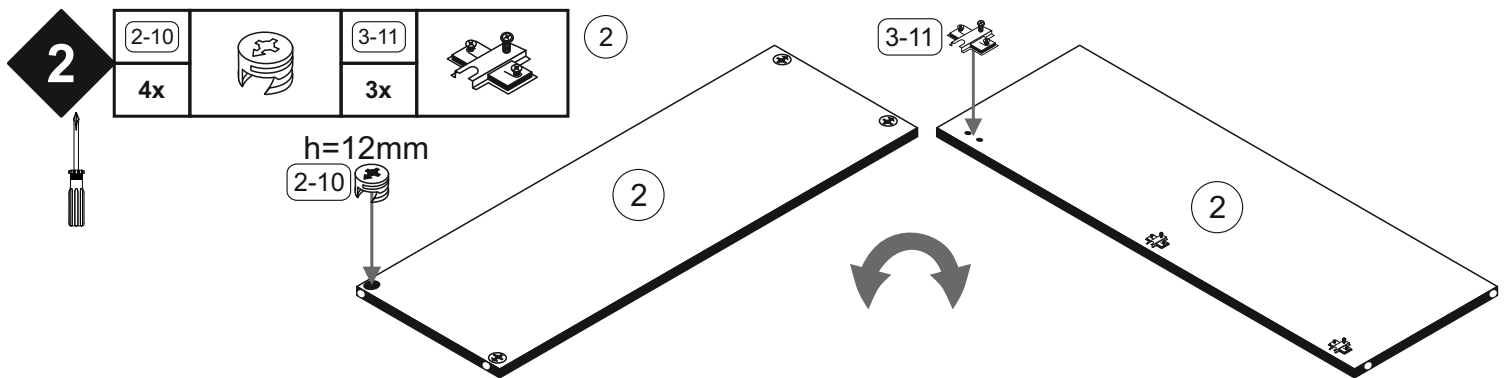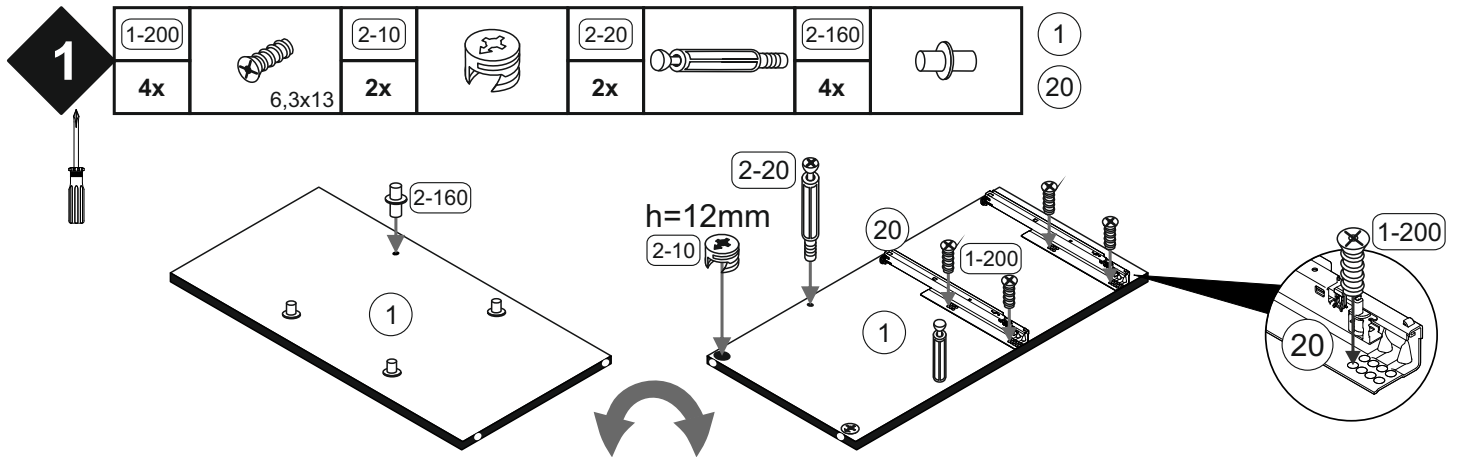

# CHICAGO

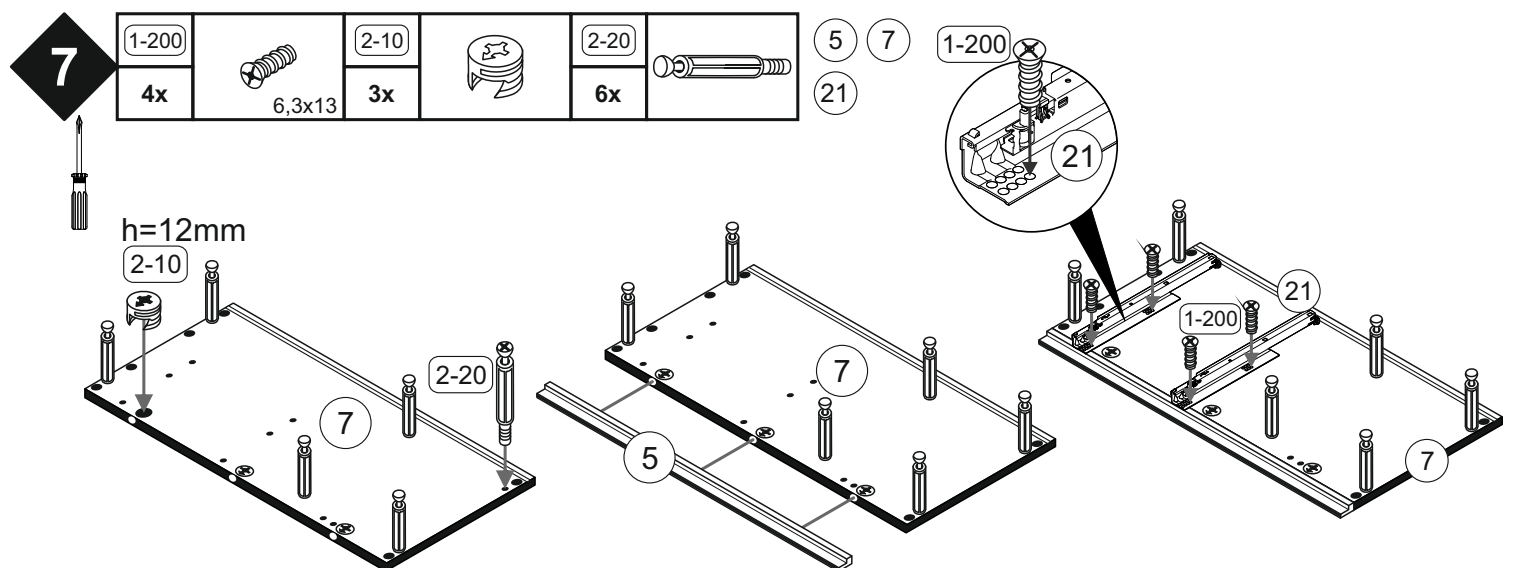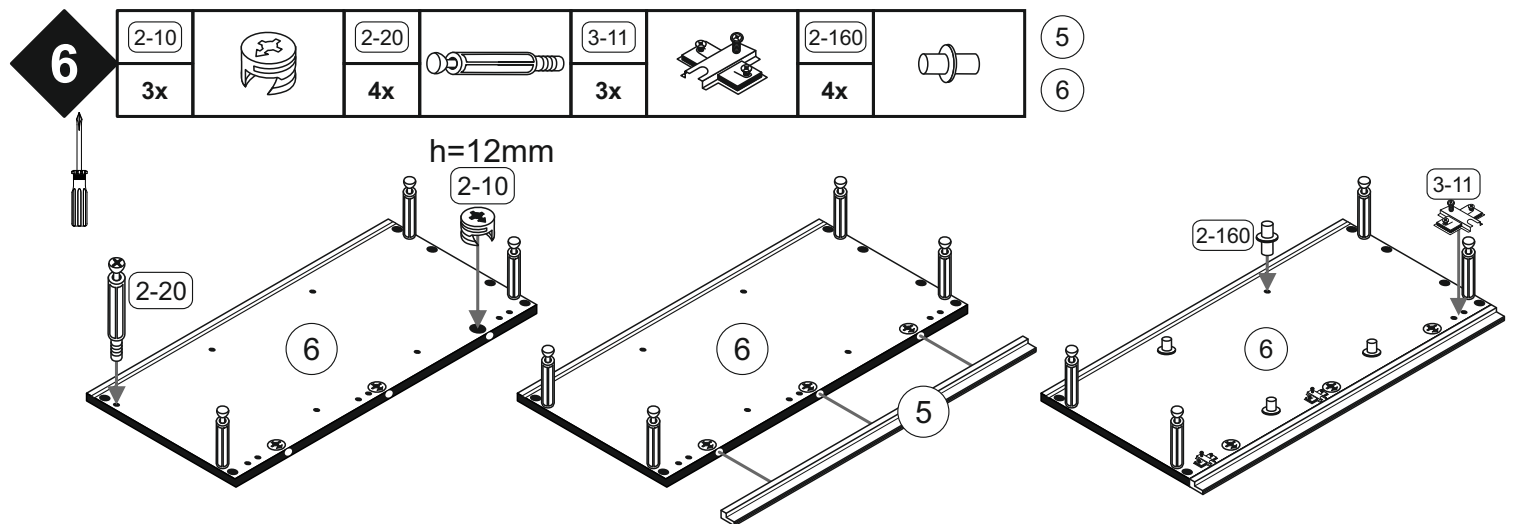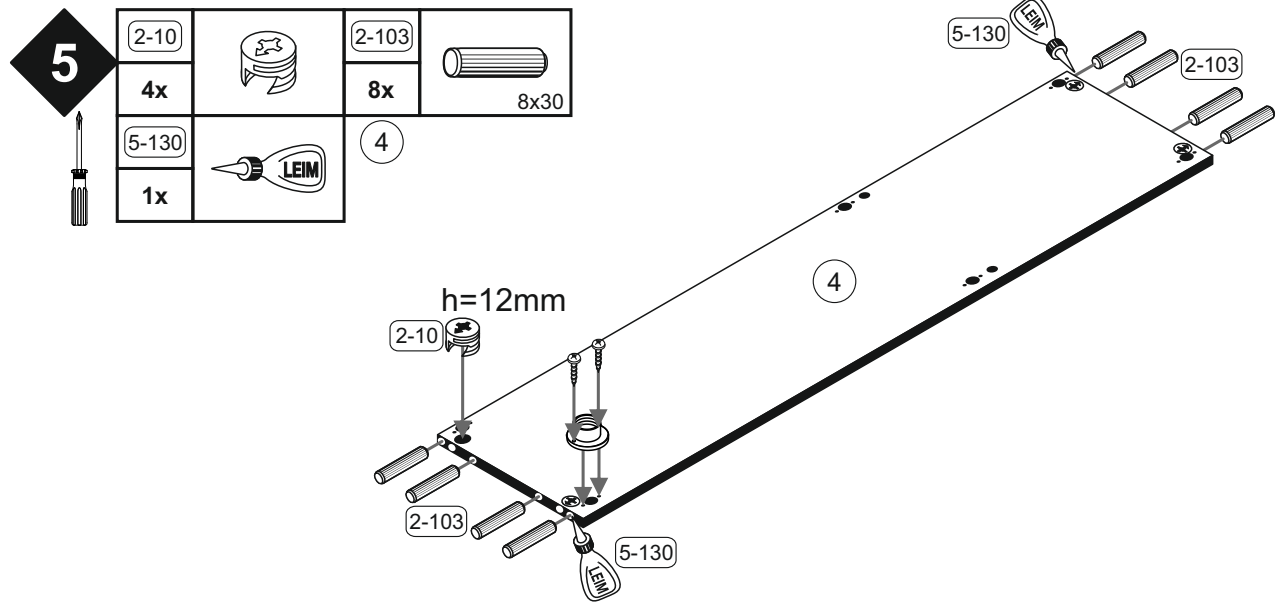


# CHICAGO

**8**



1-80		3-42	
6x	3,5x13	3x	8er

13

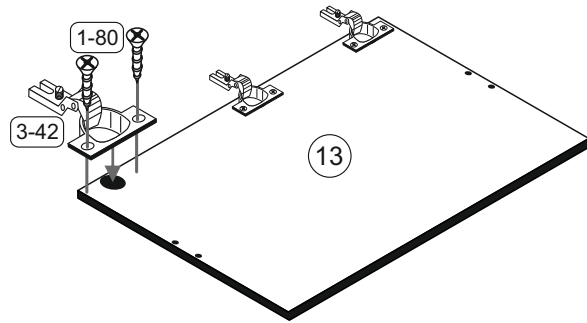






**9**

1-200		2-08		2-20		6-425		14	16
4x	6,3x13	8x		8x		2x		18	

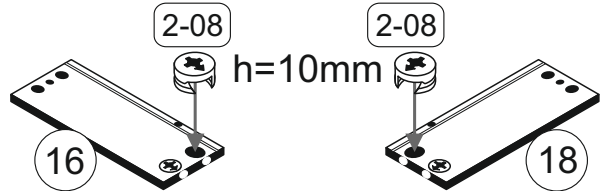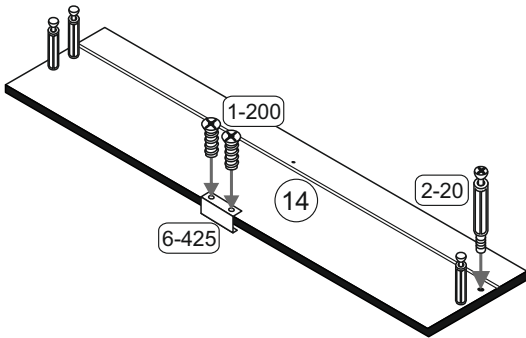


**10**

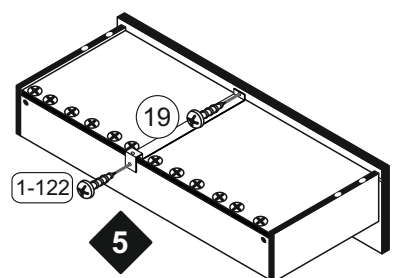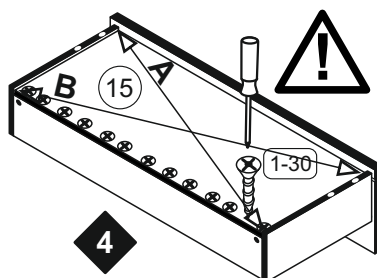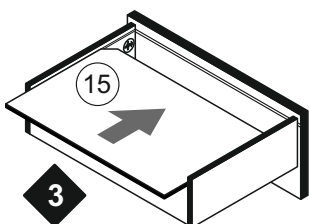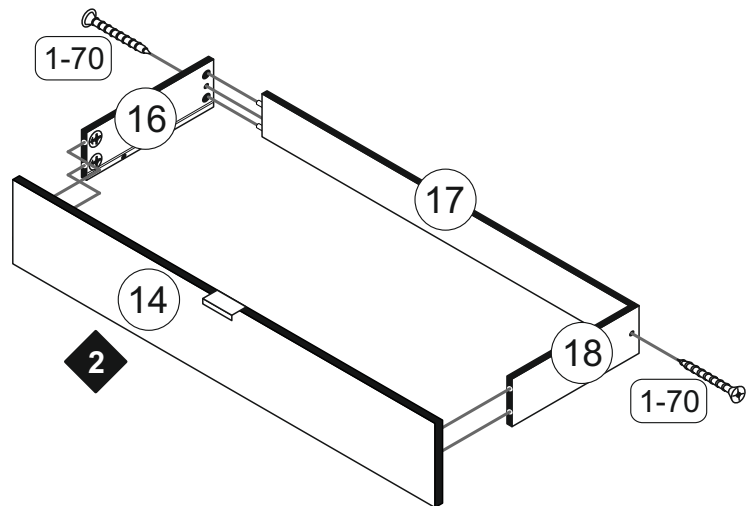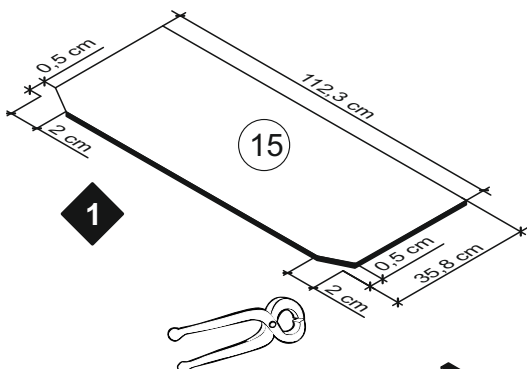




1-30		1-70		14	15	16
26x	3x16	4x	3x30	17	18	19
1-122						
4x	4x13					




# CHICAGO

**11**





1-80		1-200	
6x	3,5x13	2x	6,3x13
3-42		6-425	
3x	8er	1x	


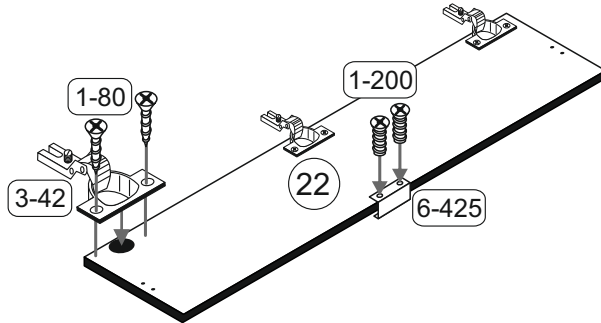
22



**12**






1-10		5-130	
2x	6,3x50	1x	LEIM

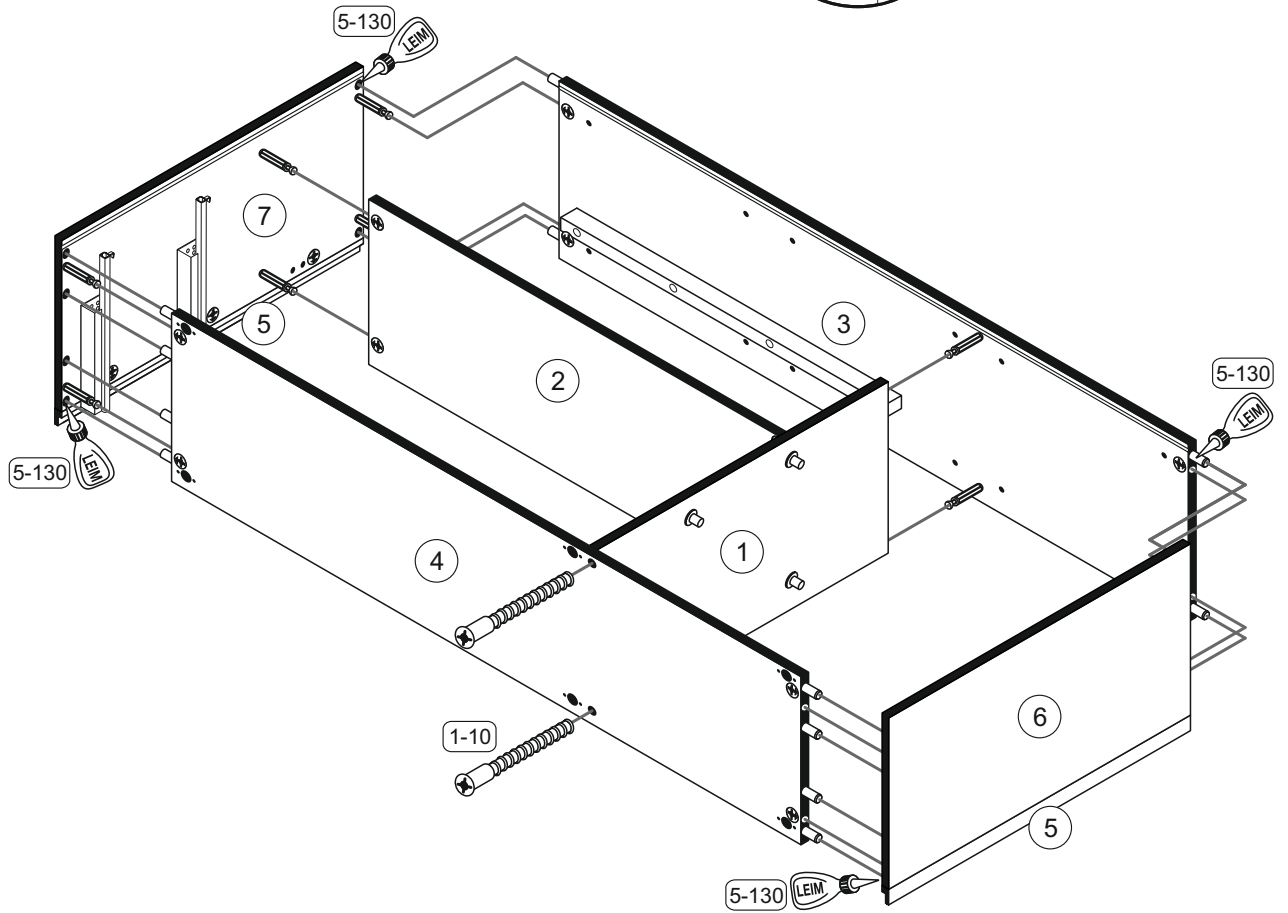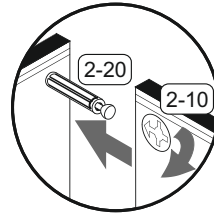

# CHICAGO




**13**

1-30		1-90	
38x	3x16	4x	3,5x20
1-123			
12x	4x15		
5-185			
4x			
2-173			
6x			

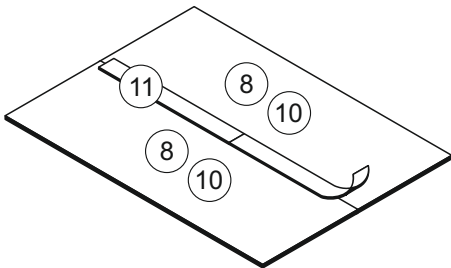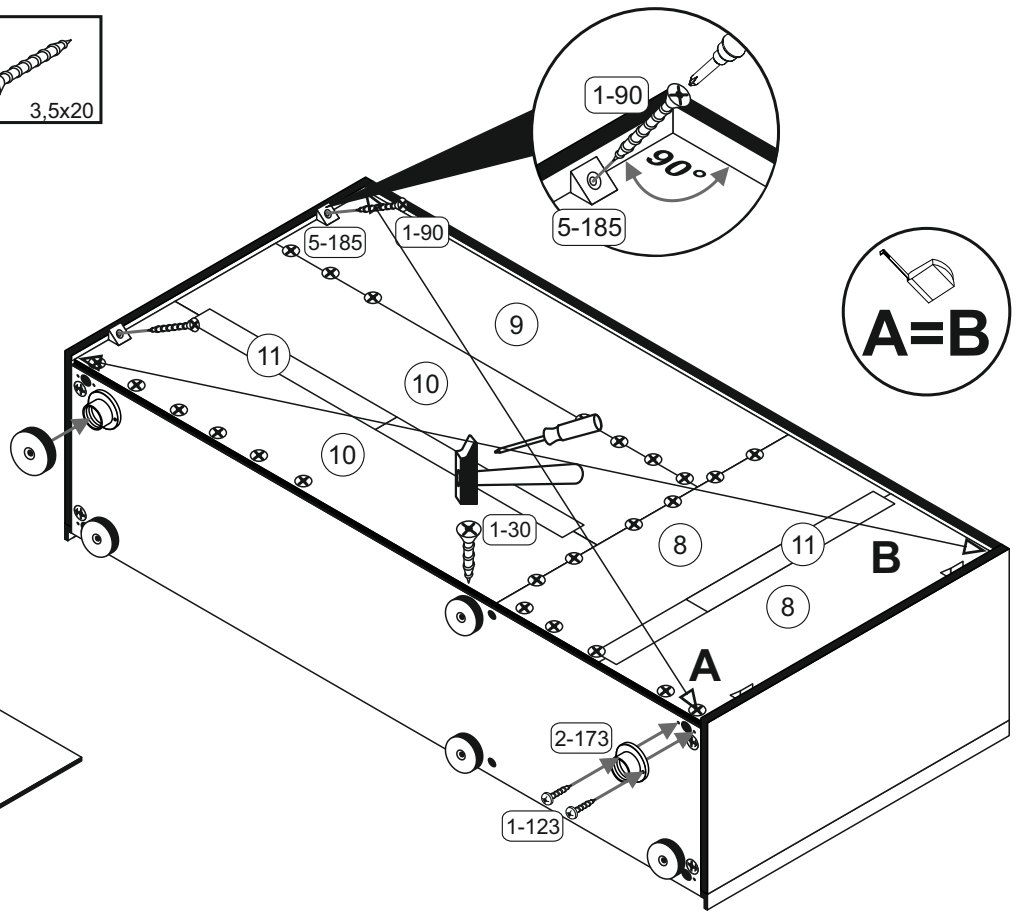

**14**

5-01		5-280	
6x		1x	

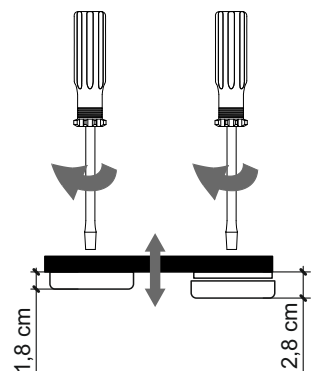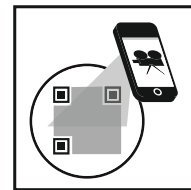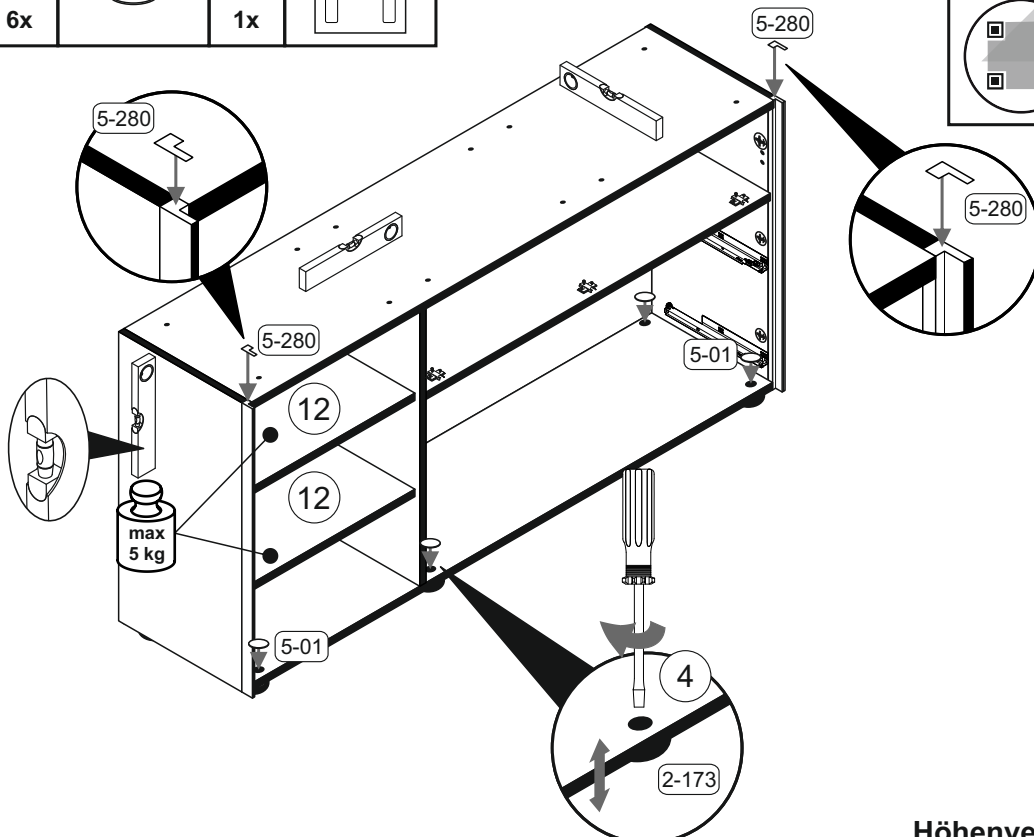


Höhenverstellung der Möbelfüße


# CHICAGO

15



## Einbau des Schubkastens

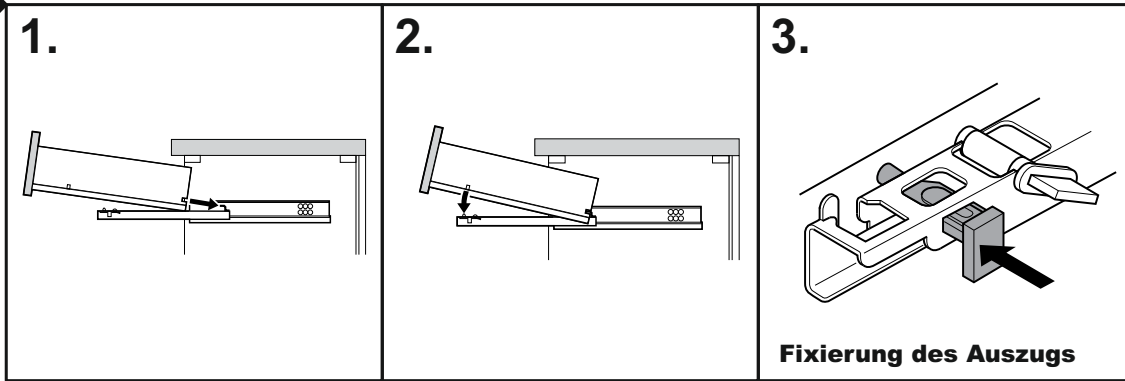

## Ausbau des Schubkastens

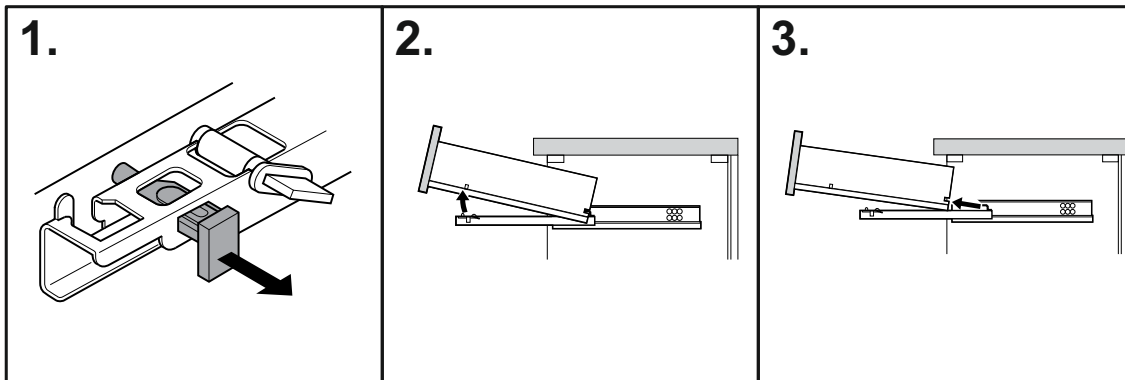


## Höhenverstellung des Schubkastens

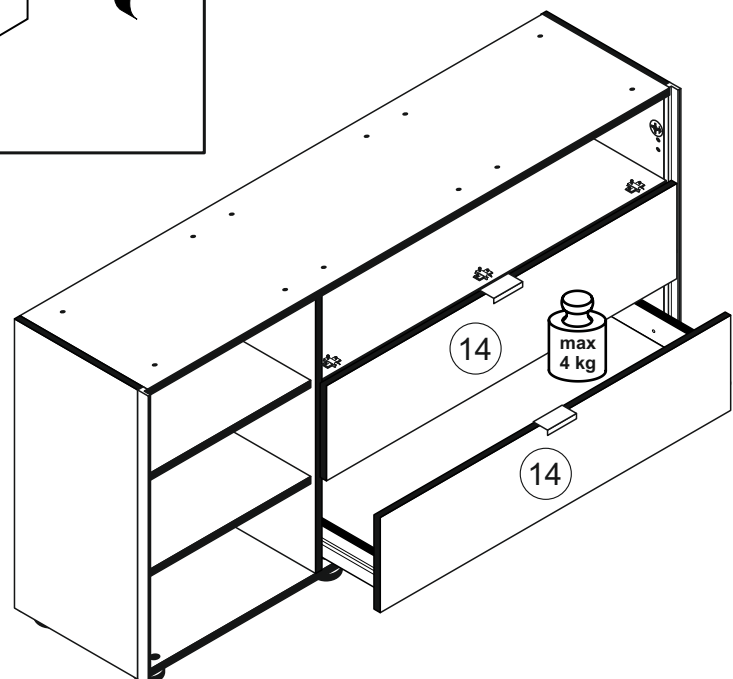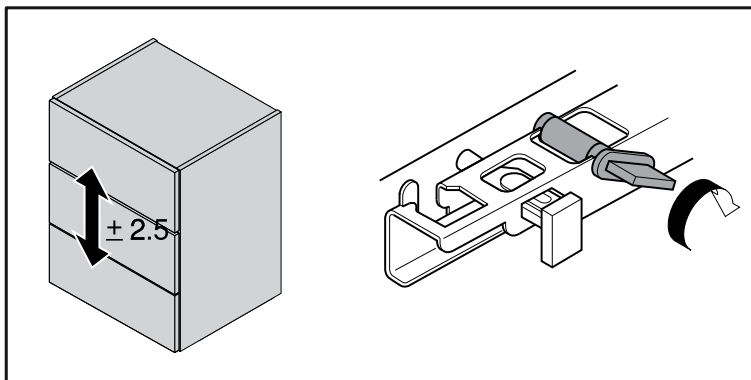




**16** 5-260  
1x **set one**  
by Musterring

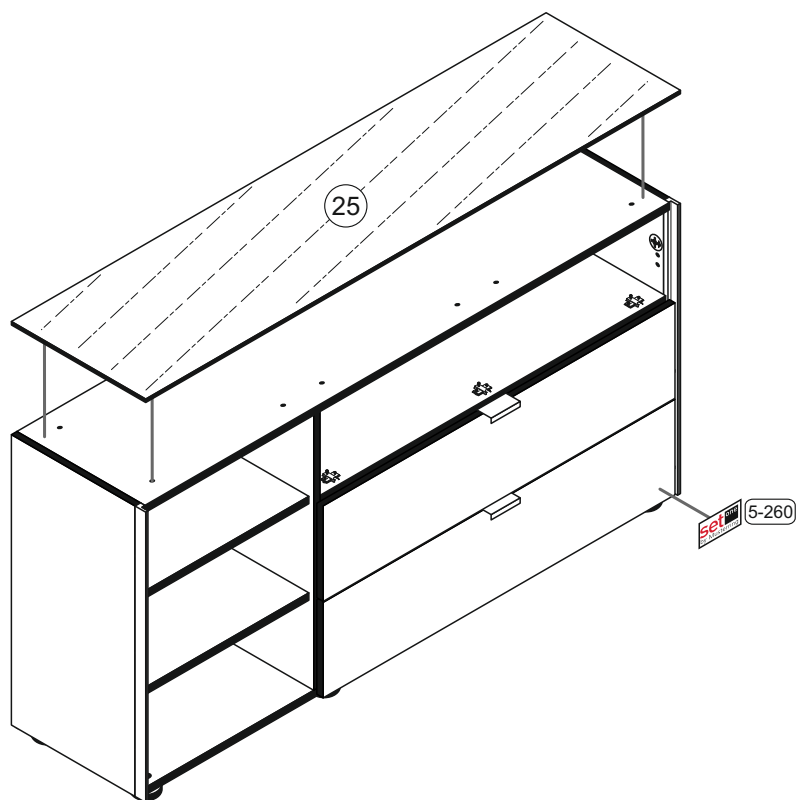


17



1-80	1-200	3-07	6-425
2x	4x	2x	1x
3,5x13	6,3x13		

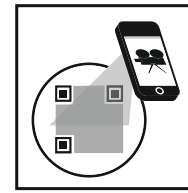

### Montage der Türdämpfung

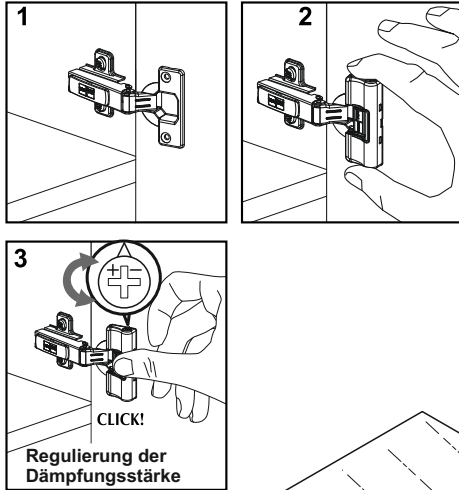

### Stütze unten 23 überdrehen

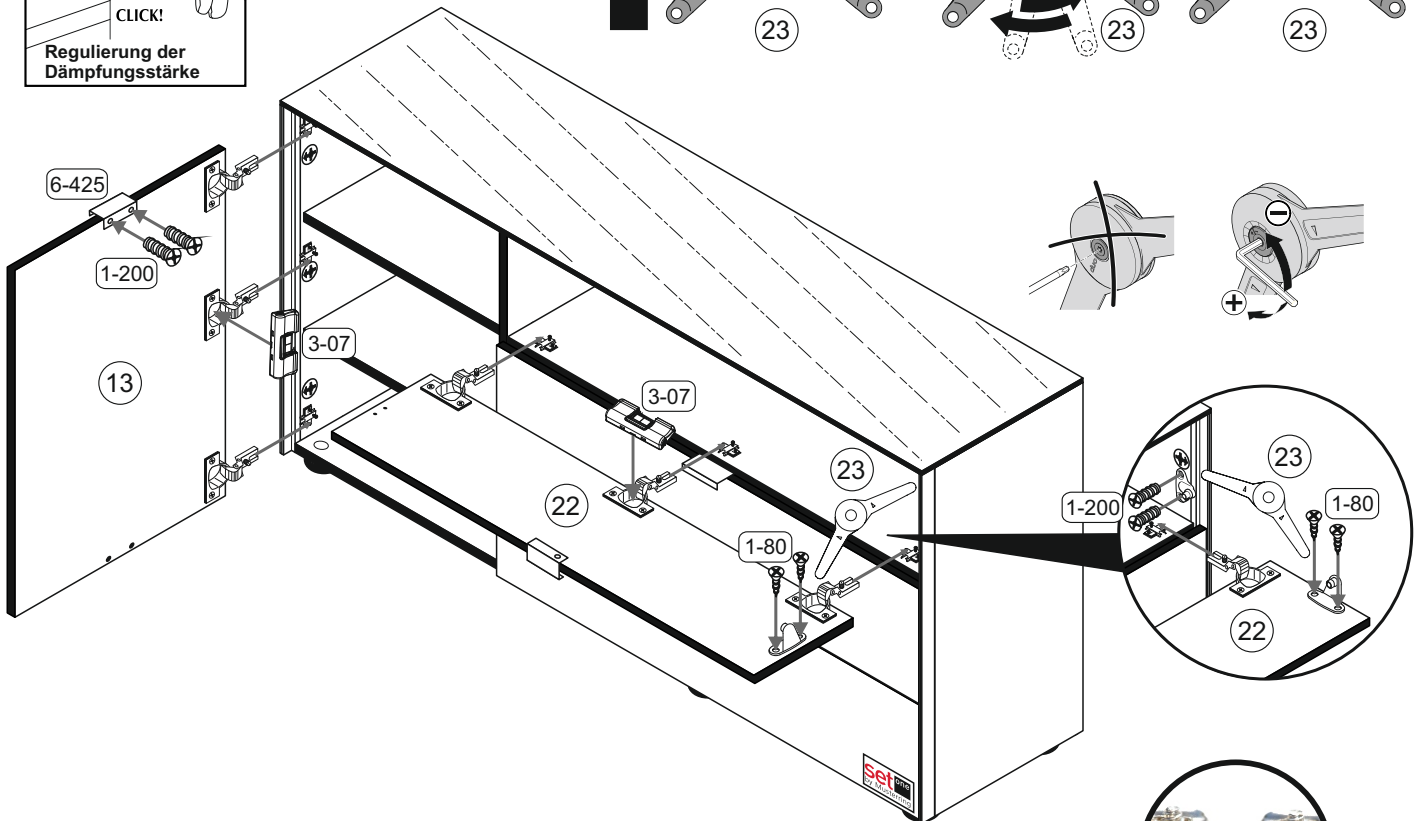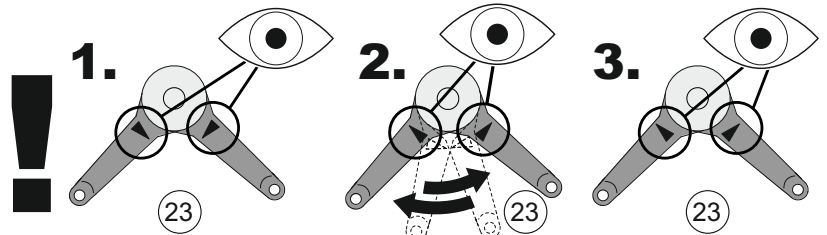

- Türen einstellen (Scharniere justieren)
- Adjusting the doors (adjusting the hinges)
- Régler les portes (ajuster les charnières)
- Sistemare le porte (regolare le cerniere)
- Deuren instellen (scharnieren afstellen)
- Nastawić drzwi (wyregulować zawiasy)
- Vyrovnejte dvířka (seřid'te závěsy)
- Nastavenie dverí (nastavenie závesov)
- Állítsa be az ajtókat (állítsa be a zsanérokot)
- Reglare usi (ajustare balamale)
- Kapıların ayarlanması (menteselerin seviye ayarı)
- Регулировка дверей (регулировка шарнира)

