
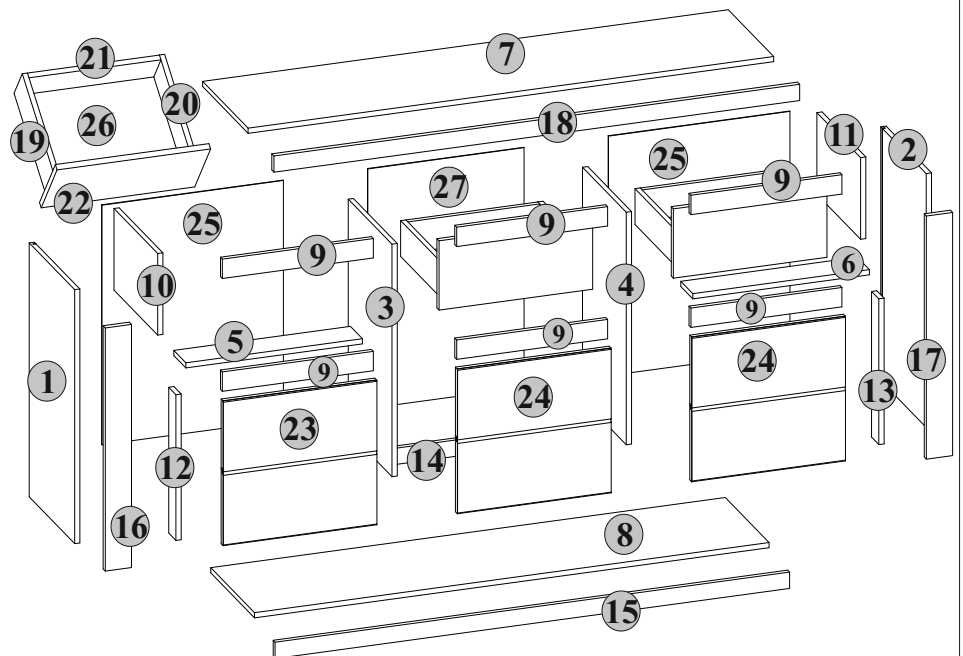
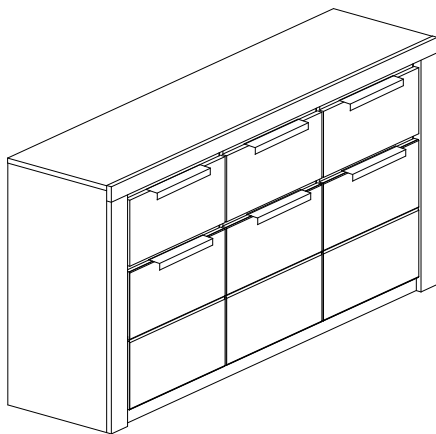





“2556”

versionsnummer: 18.02.2019


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



120 min

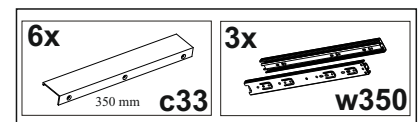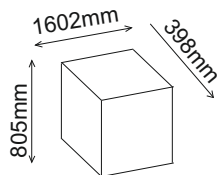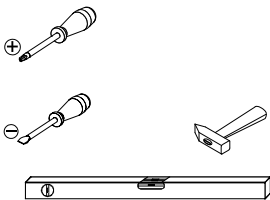










B1		B2		B3		B4
7x  l2	75x  φ15 #12.5 r1	10x  φ6.5x50 mm e1		4x  φ4.2x13 mm p38		
75x  s2	8x  k1	1x  y1	8x  s1	8x  l9	70x  φ3.5x13 mm p1	6x  b1
67x  r16	8x  r24	57x  φ8x30 mm f1	29x  1x16 l1	2x  φ4x30 mm p9	8x  φ2x20 mm p27	
		1x  z1	4x  φ8x50 mm f6	4x  n27	4x  φ6.3x13 mm e3	6x  a2

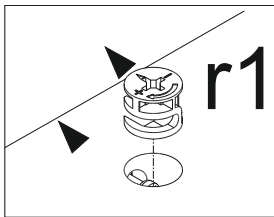

16x
 $\phi 8 \times 30$ mm
f1


28x
r16

23x
 $\phi 15 \# 12.5$
r1

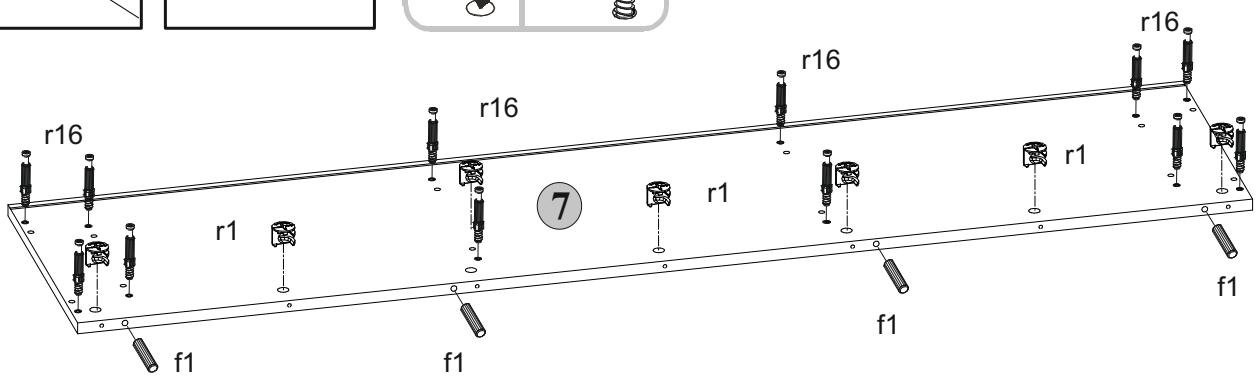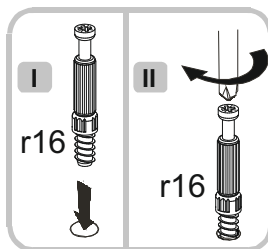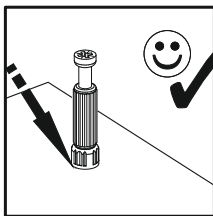
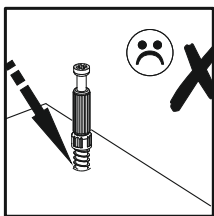
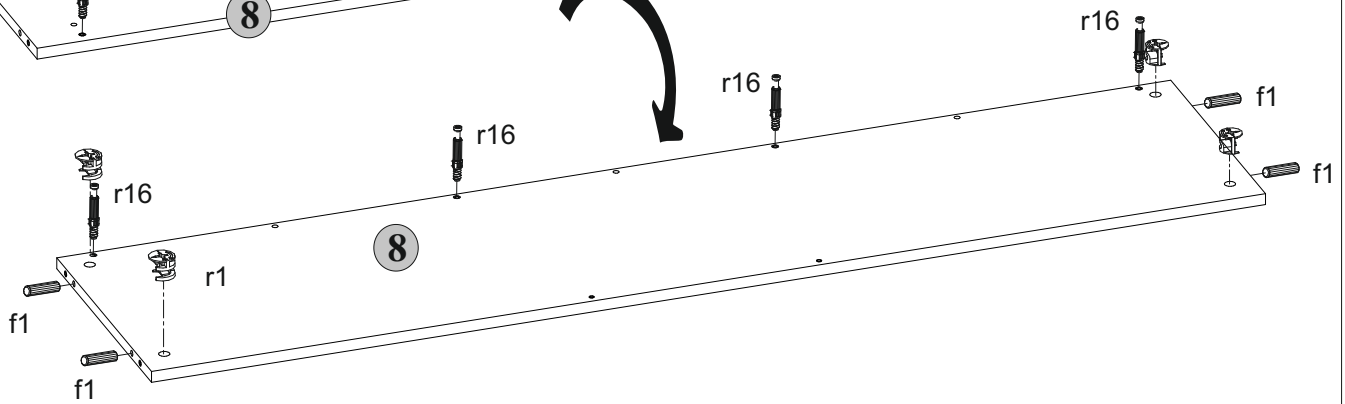
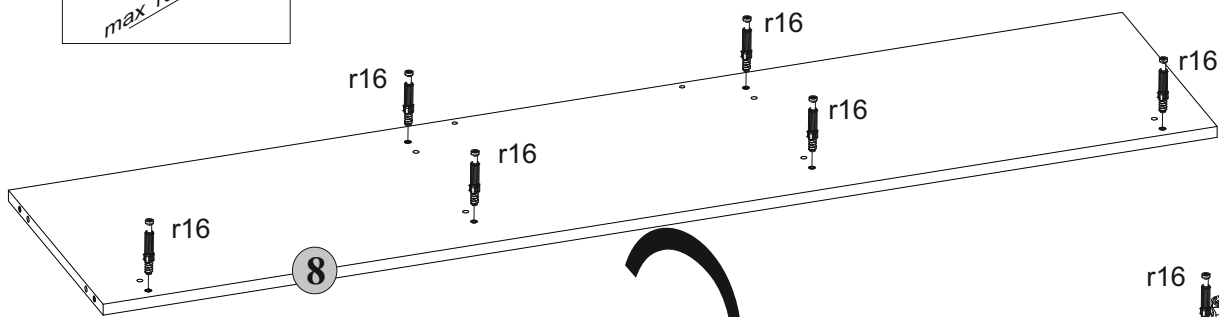
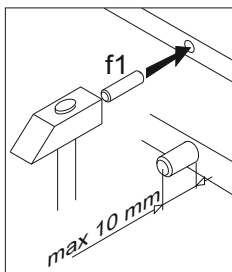
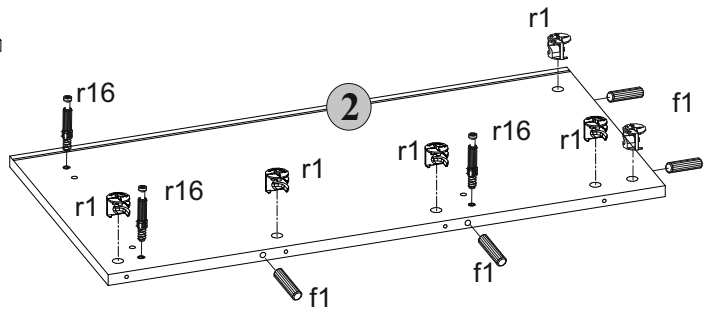
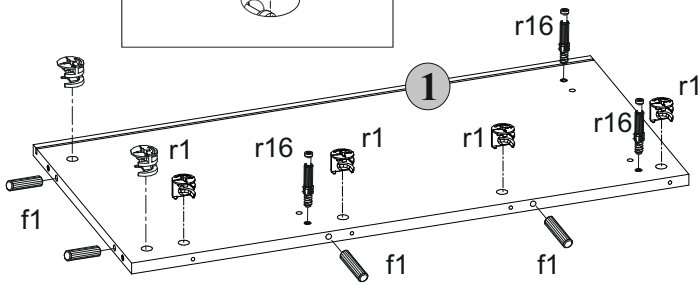


2

2

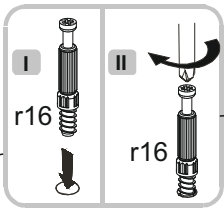


14x $\phi 8 \times 30$ mm f1	12x $\phi 15 \#12.5$ r1
18x $\phi 3.5 \times 13$ mm p1	8x r24
4x r16	3x w350
	2x b1

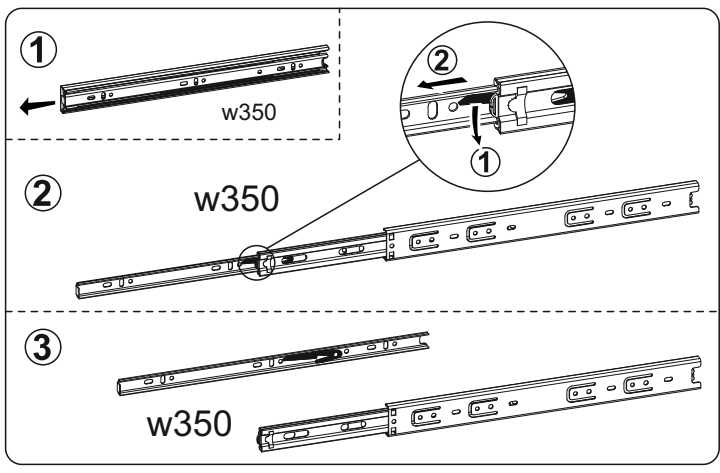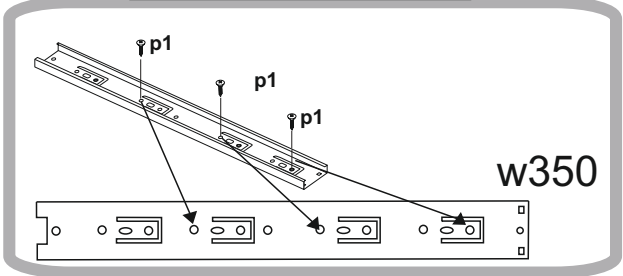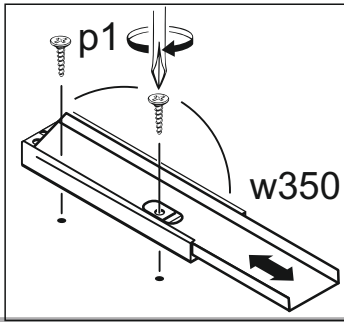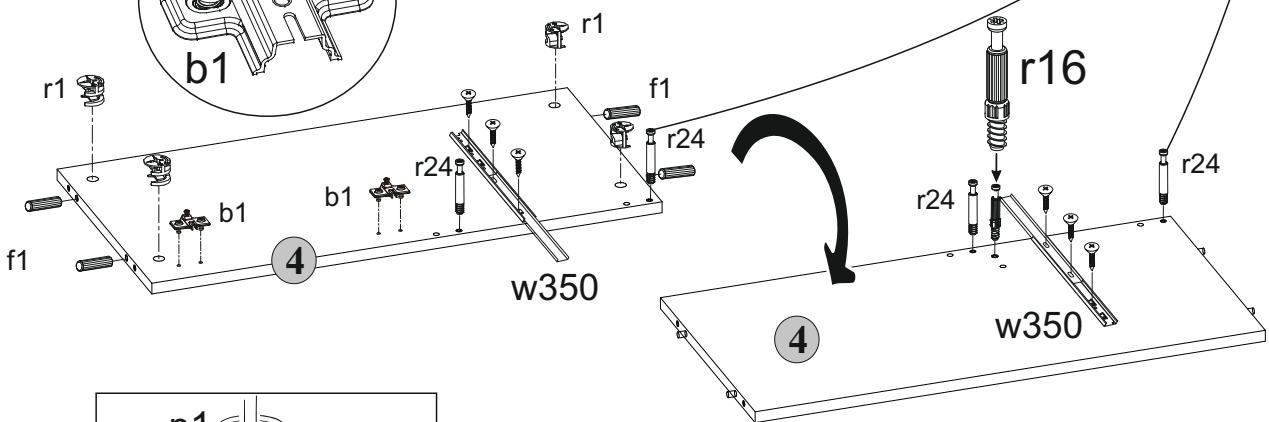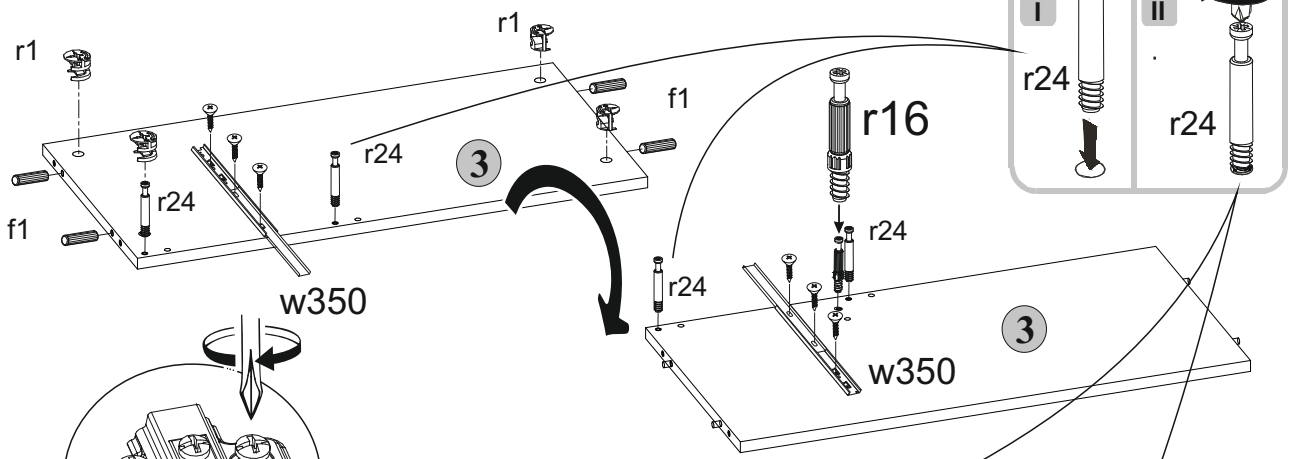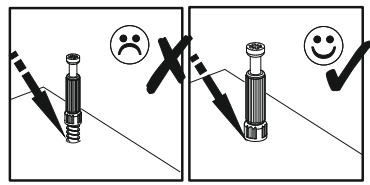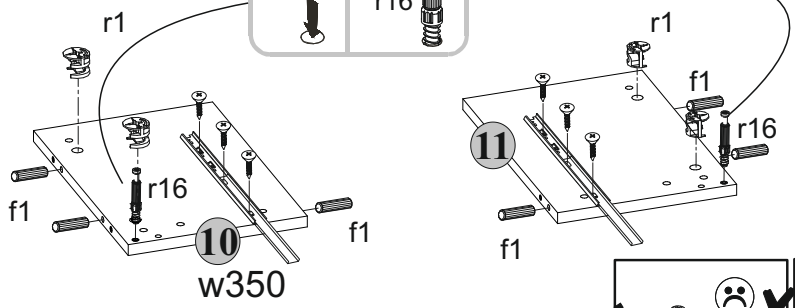

3













3

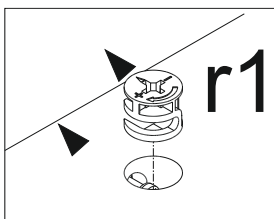

11x
 $\phi 8 \times 30 \text{ mm}$
 f1
















21x
 r16
 r16

24x
 $\phi 15 \text{ #12.5}$
 r1

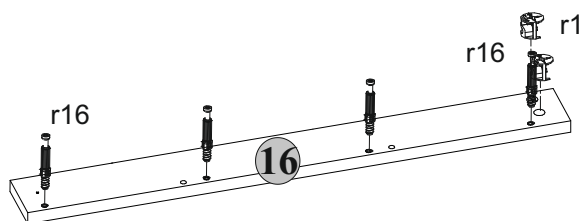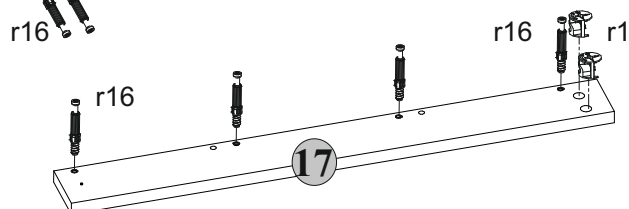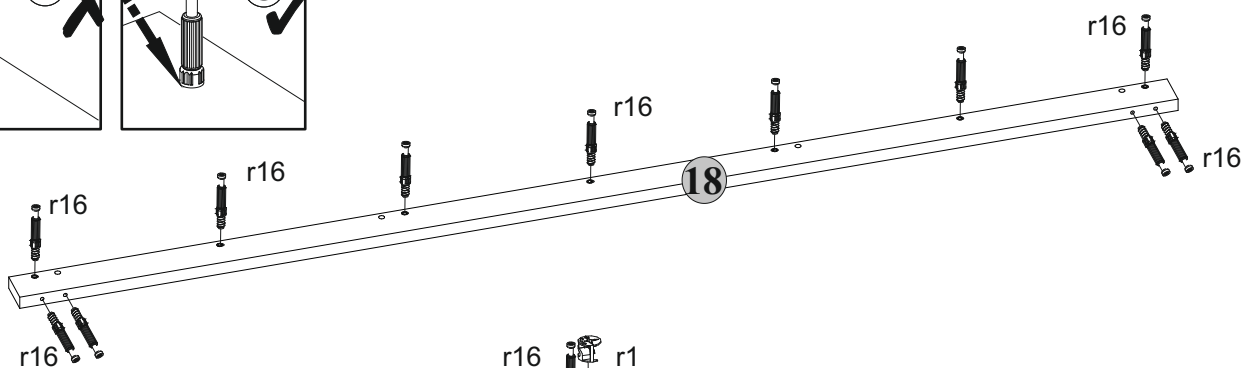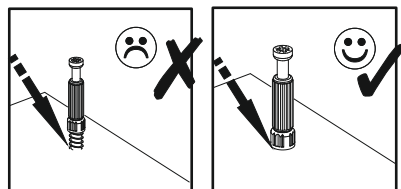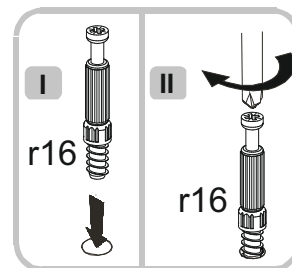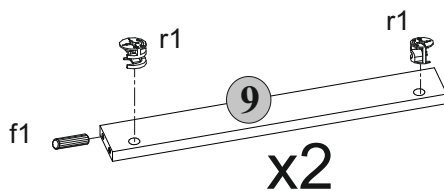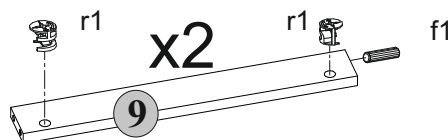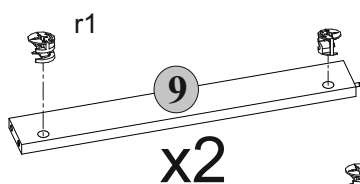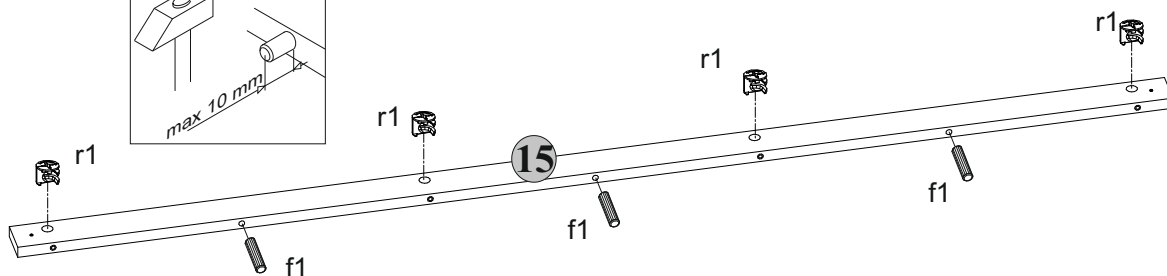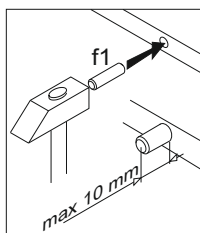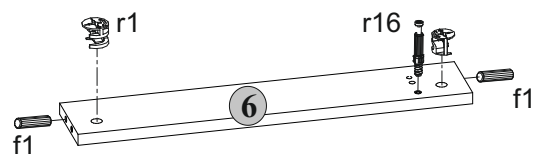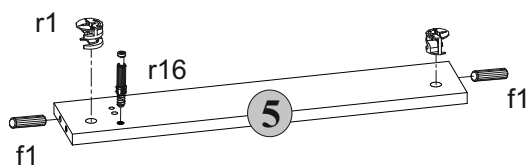

4

4

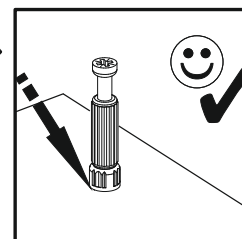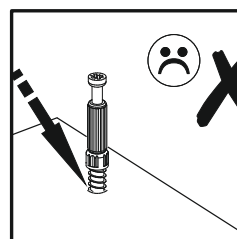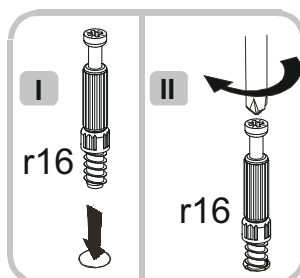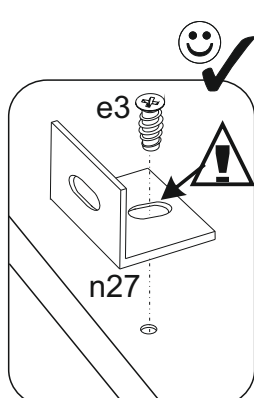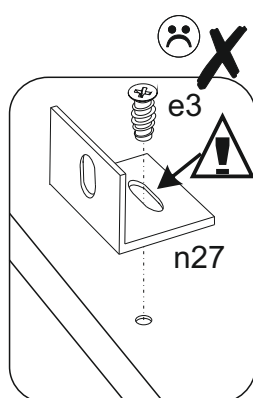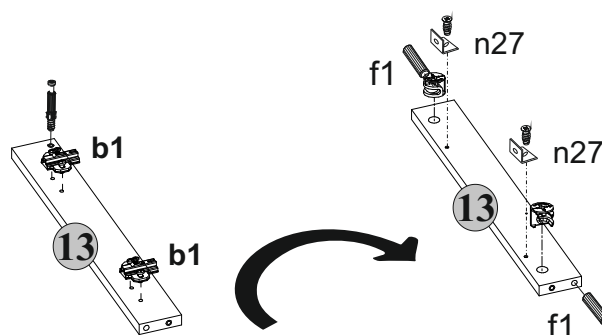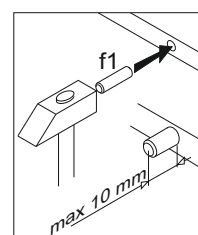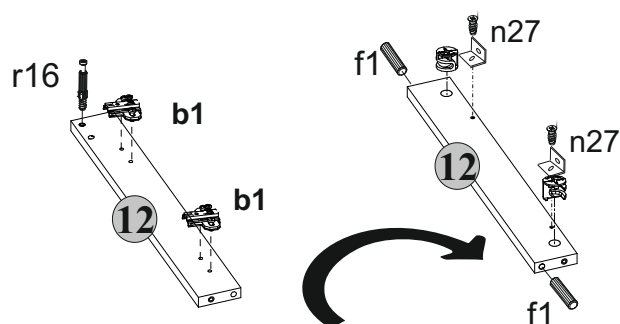

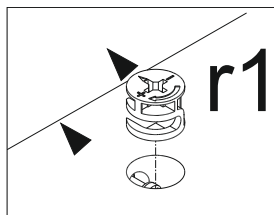
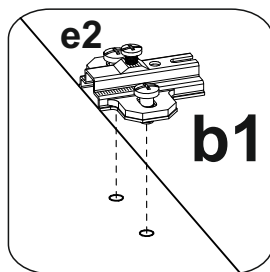


5


5

6x
a2

12x
p1
φ3.5x13 mm

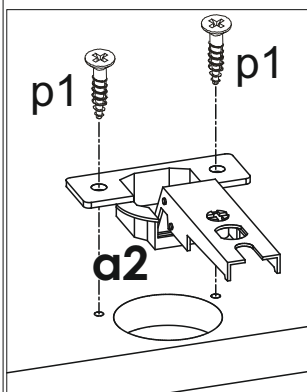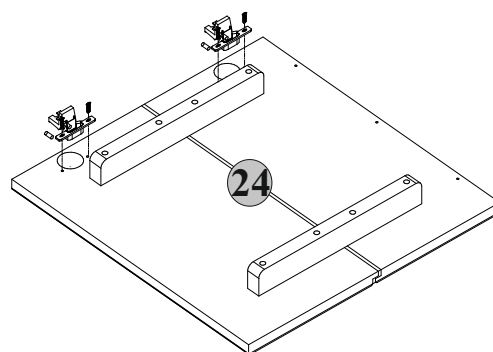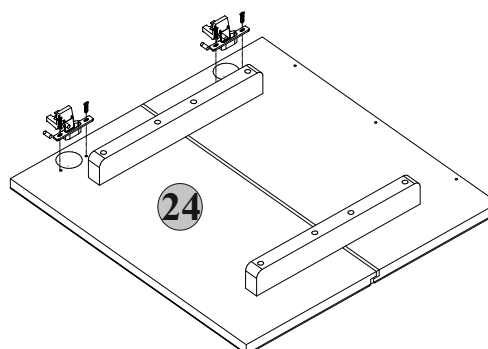
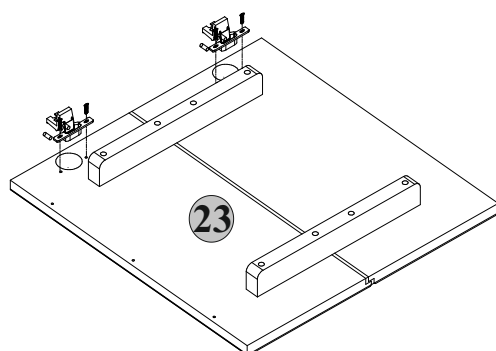


6






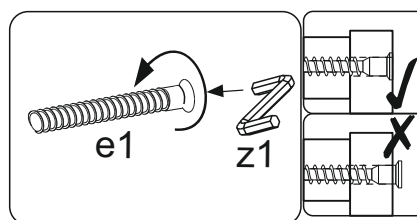


2x
e1
φ6.3x50 mm

2x
s1

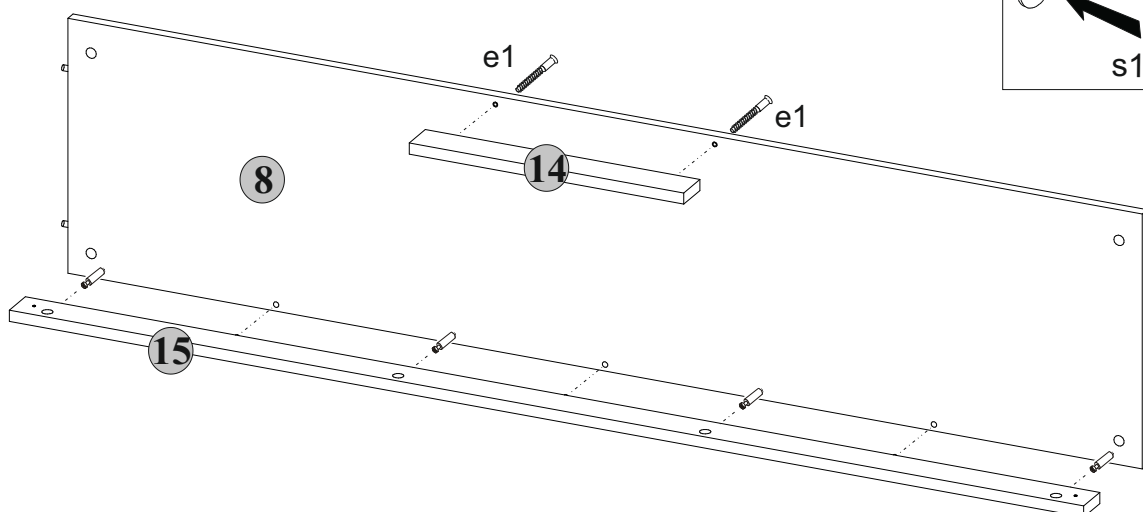
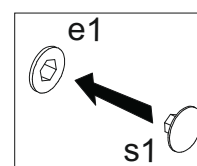


6

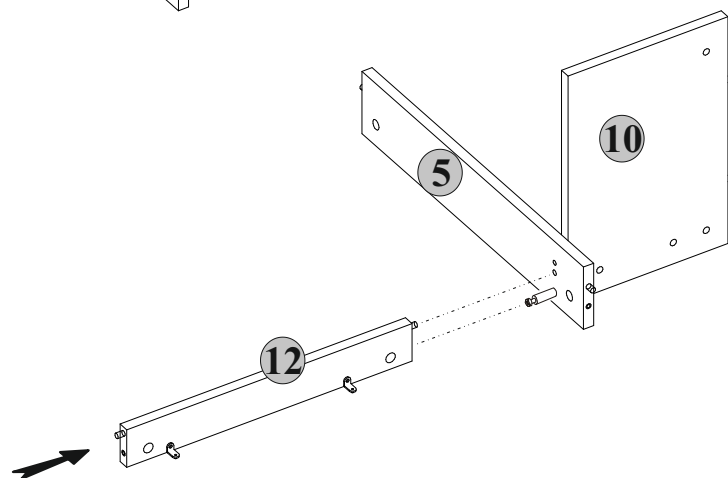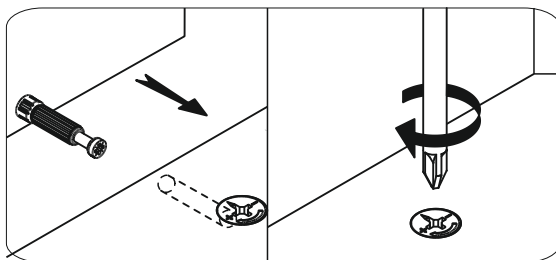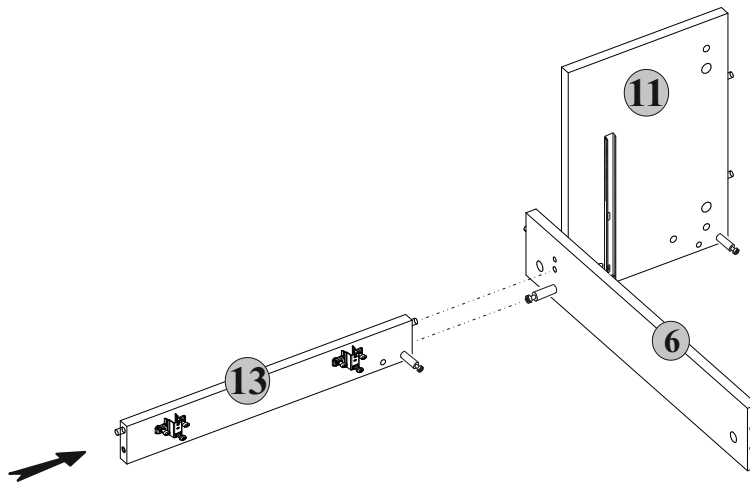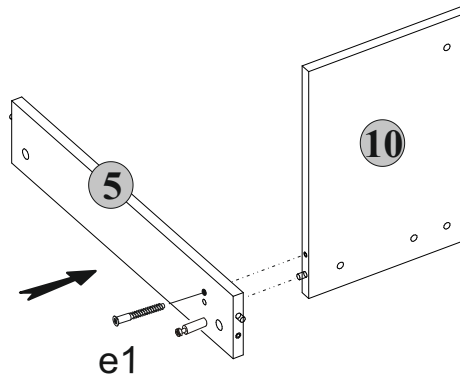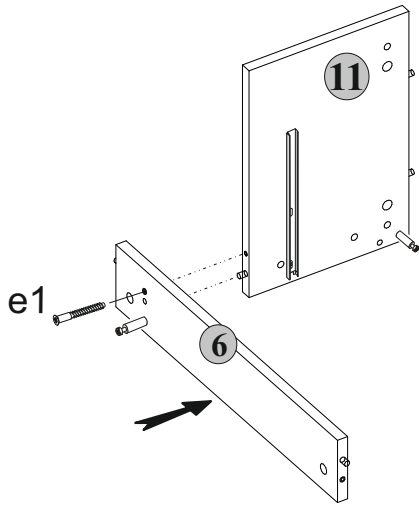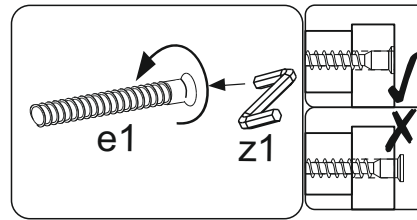




 $\phi 8 \times 50 \text{ mm}$ **f6**

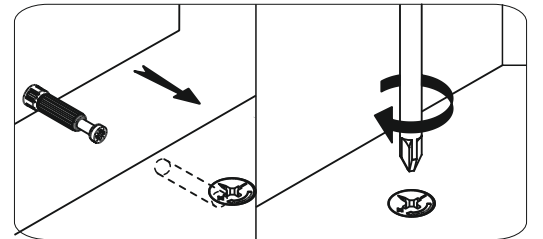
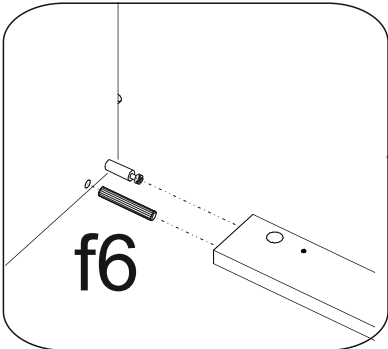


9


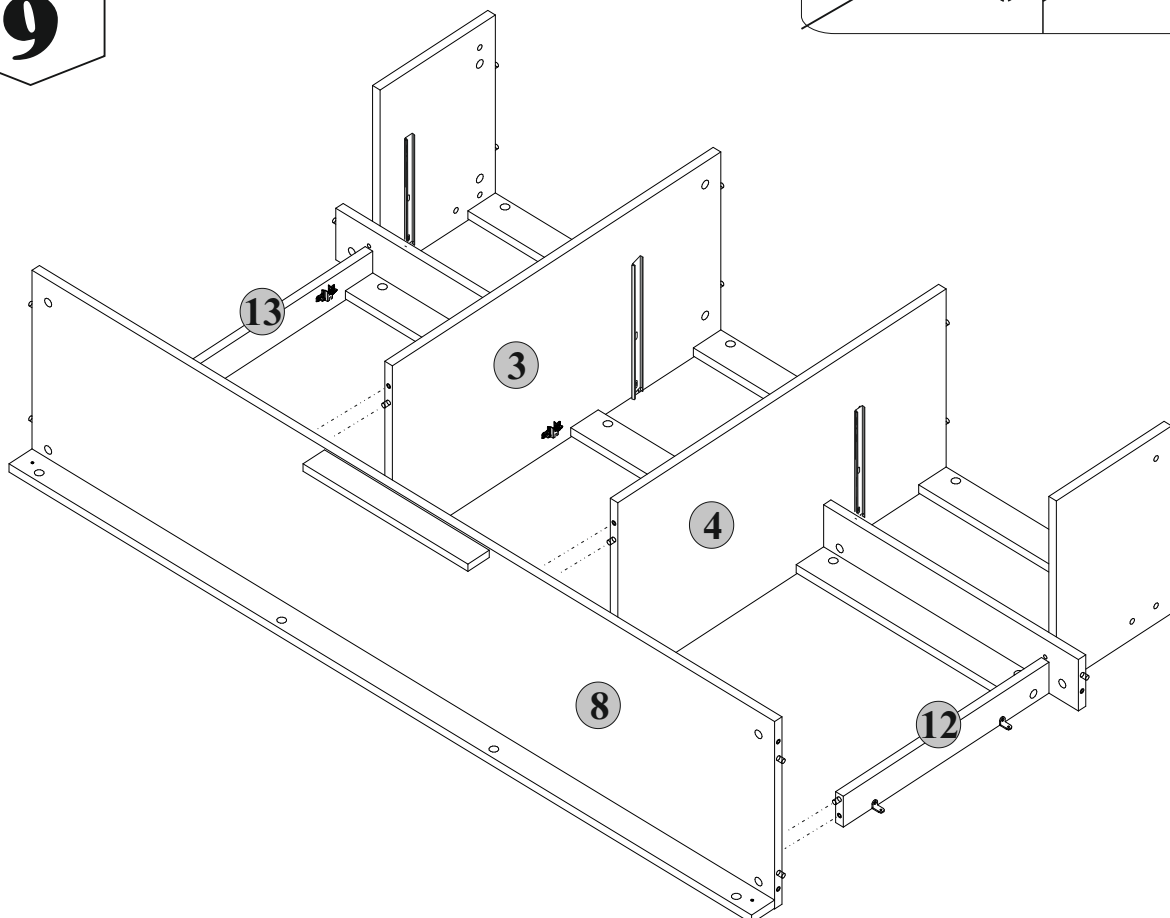


8





10

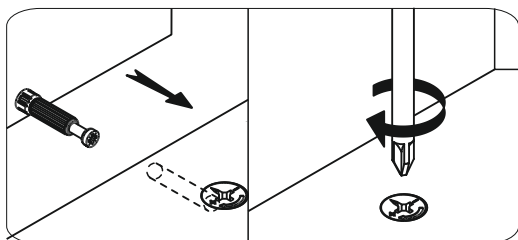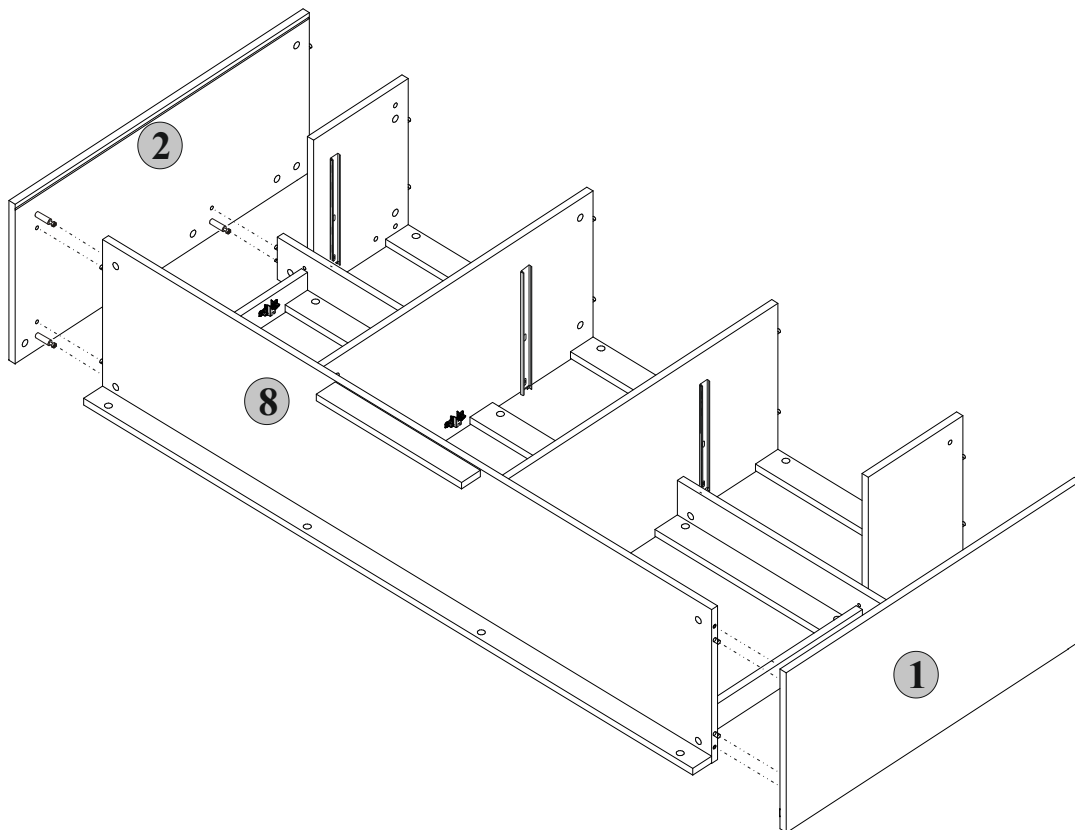

11

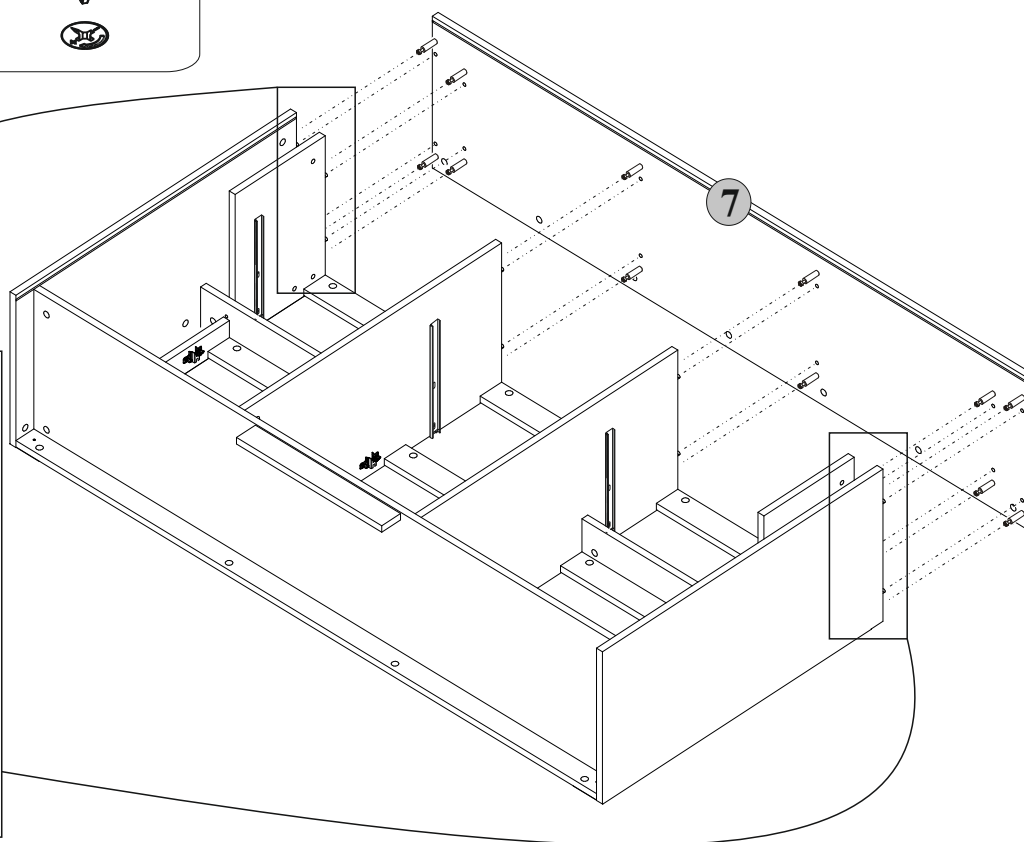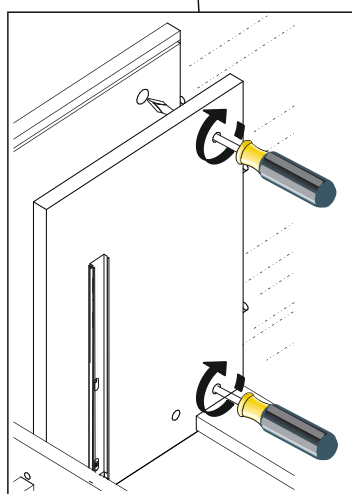

12


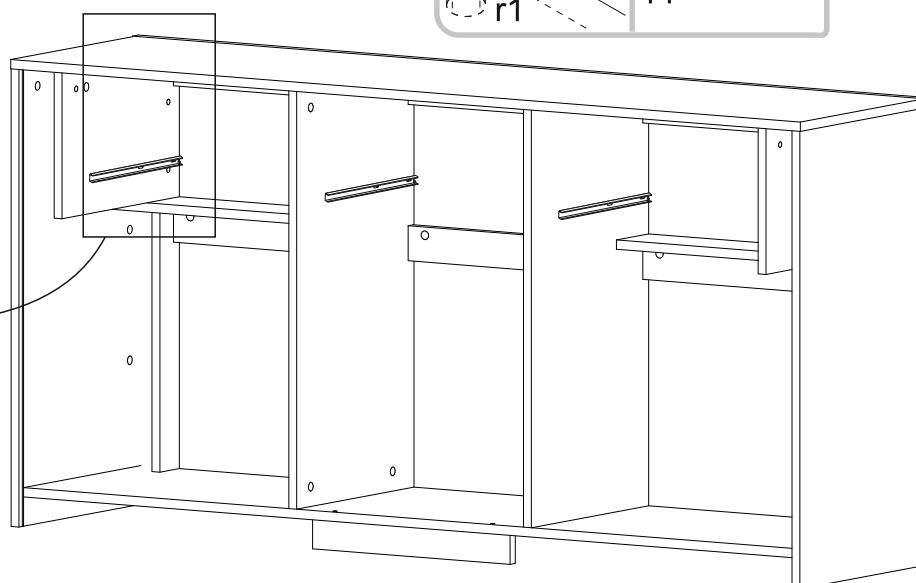
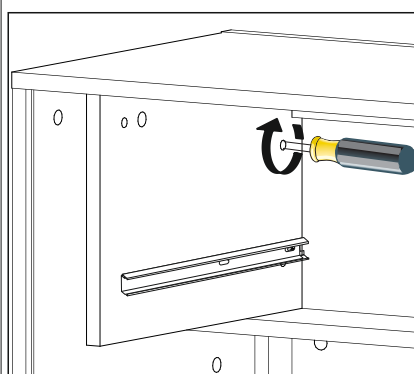
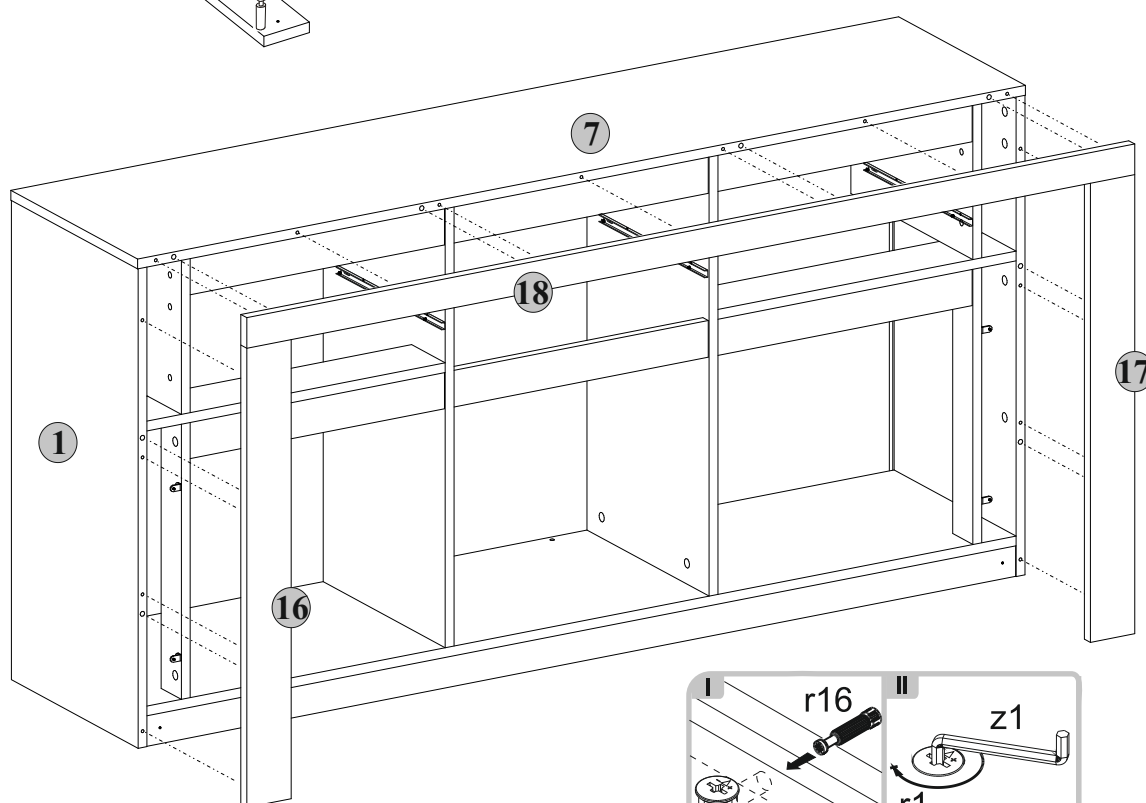
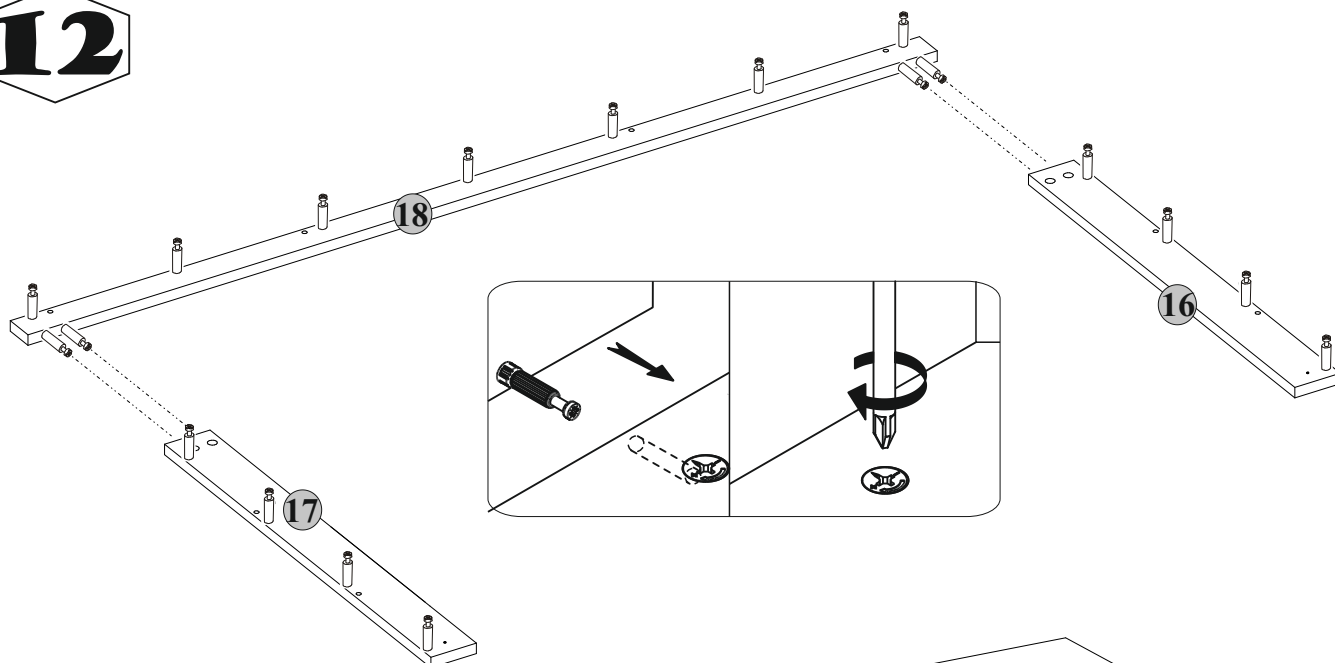


10








13

4x
φ4.2x13 mm p38

2x
φ4x30 mm p9

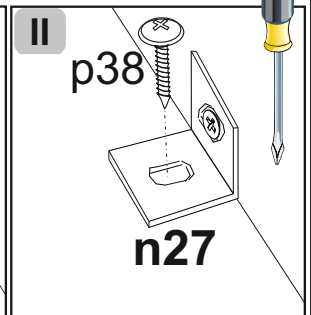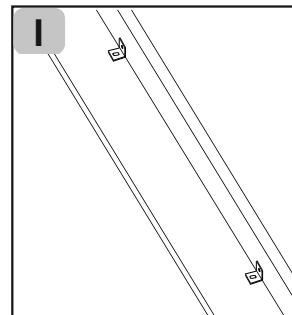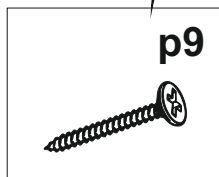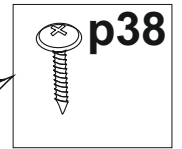
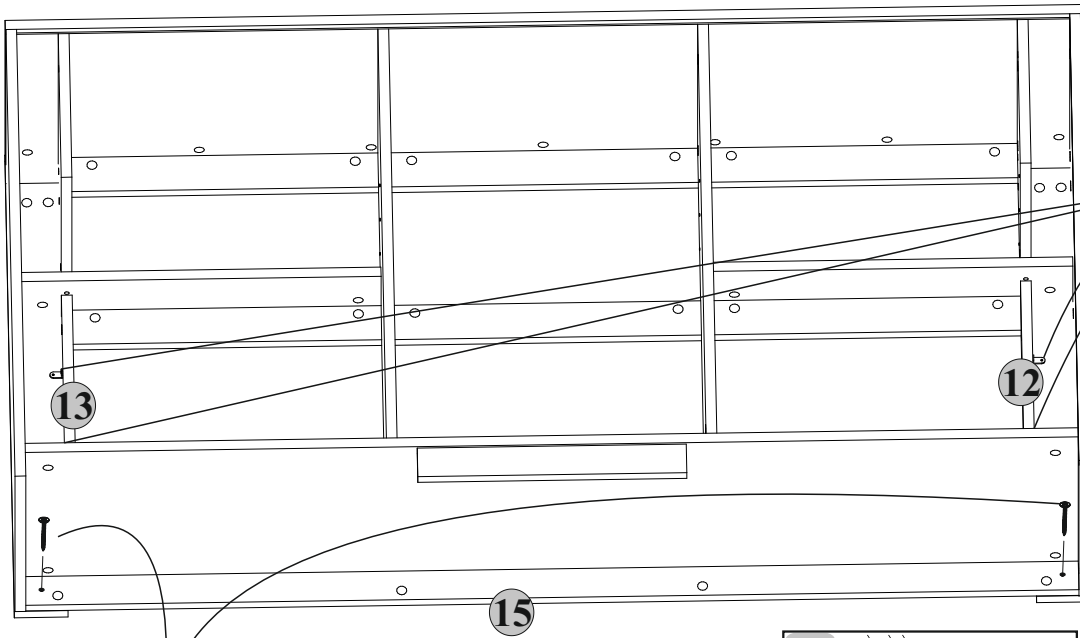


14

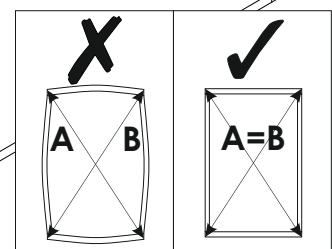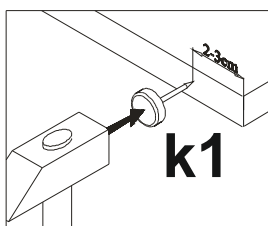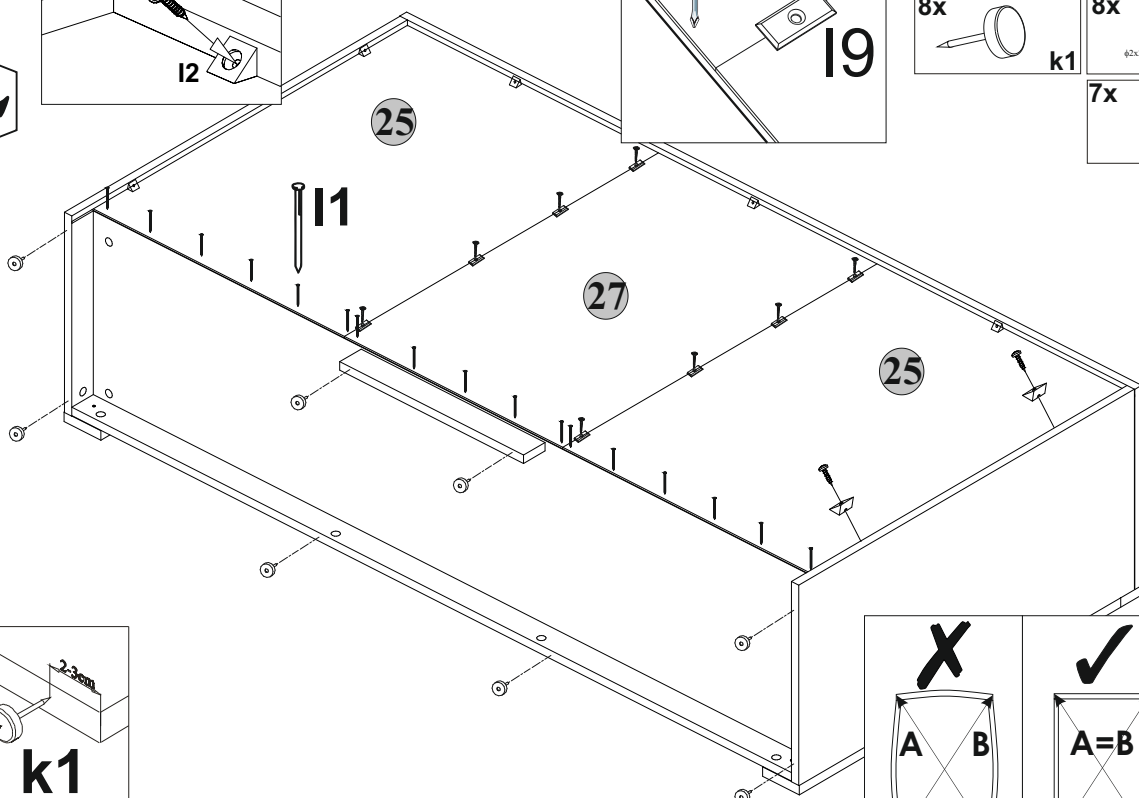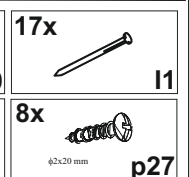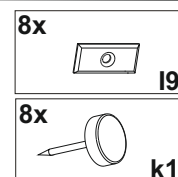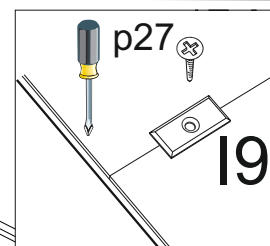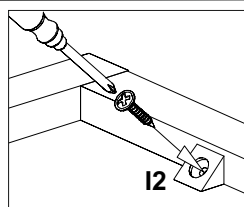

11

15x3

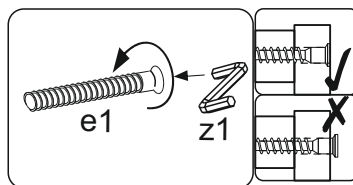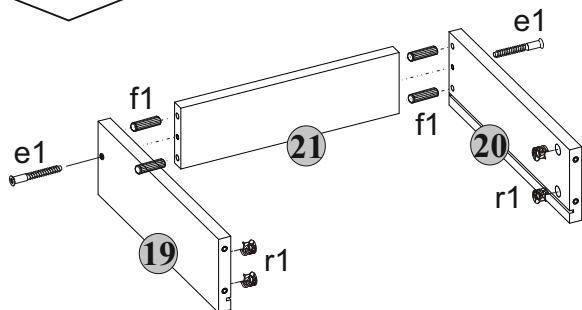

12x $\phi 8 \times 30$ mm f1

12x l1

27x $\phi 3.5 \times 13$ mm p1











12x r16

12x $\phi 15$ #12.5 r1







3x 350 mm c33

6x $\phi 6.3 \times 50$ mm e1



6x s1

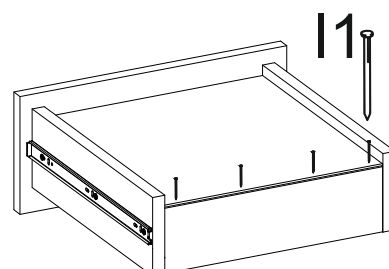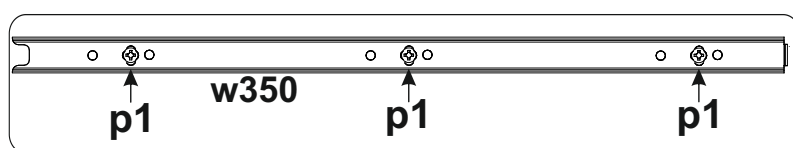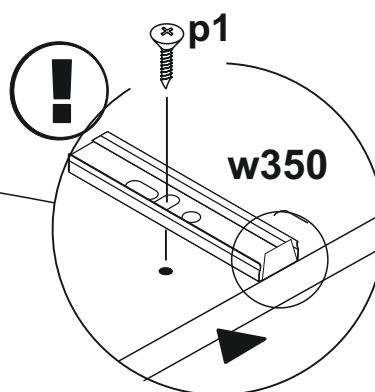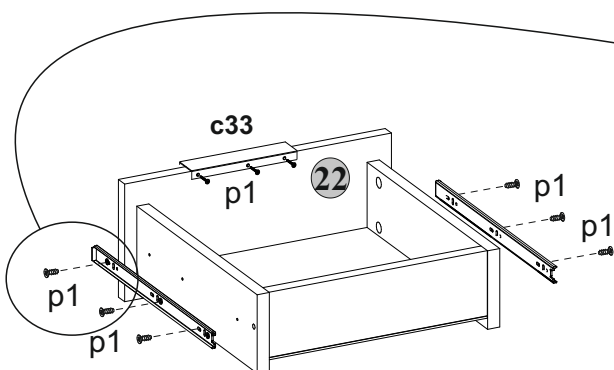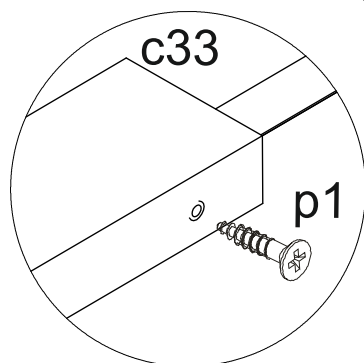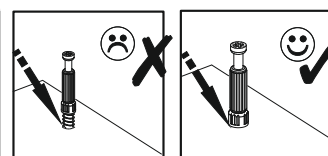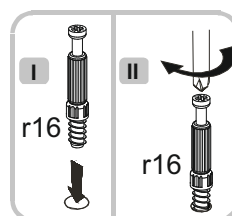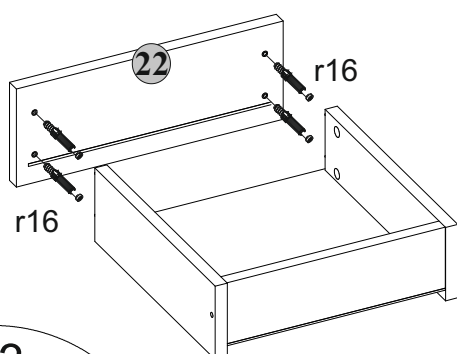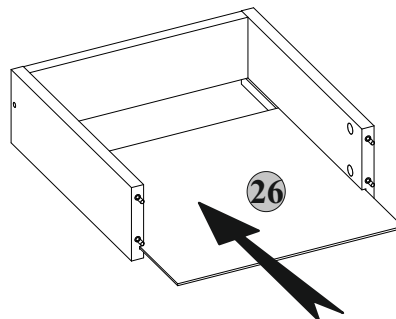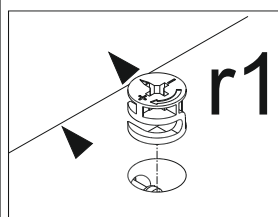

16

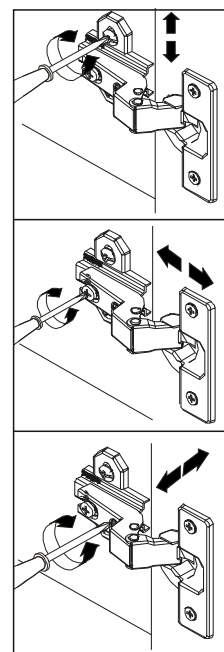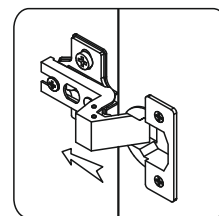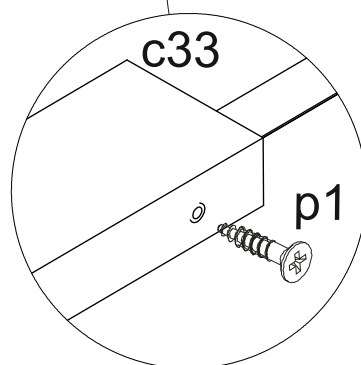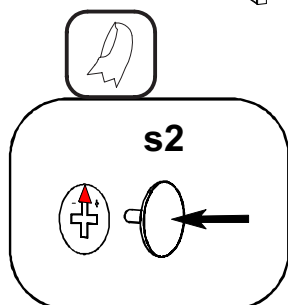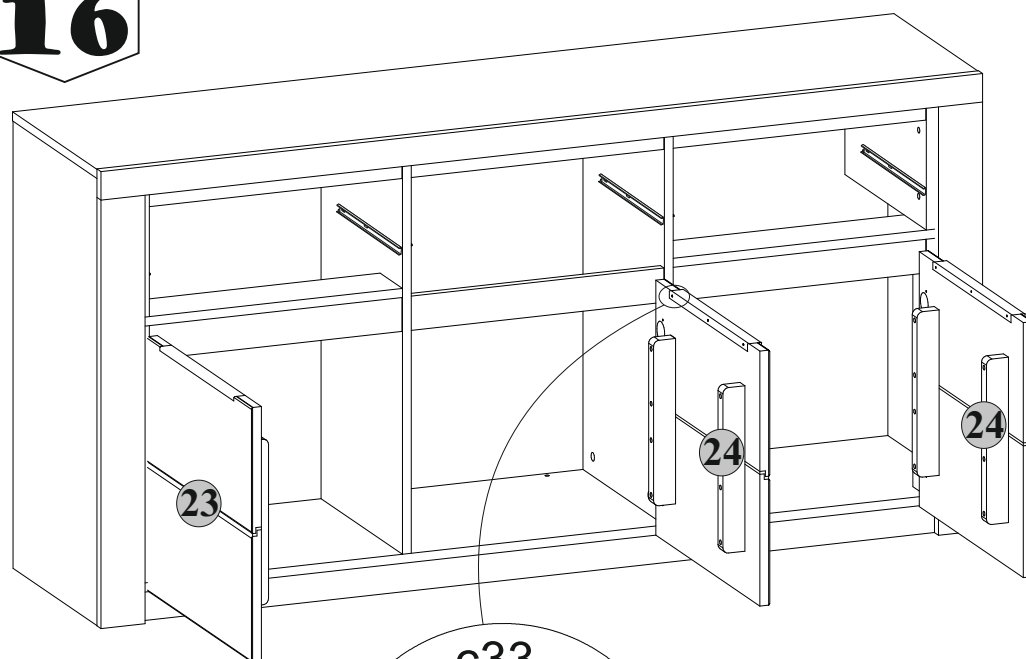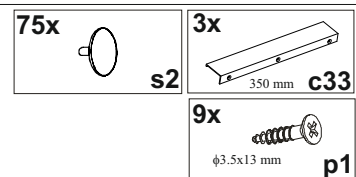

17

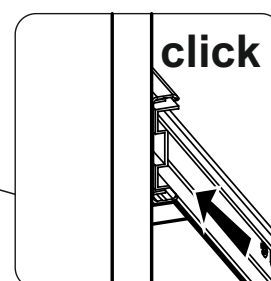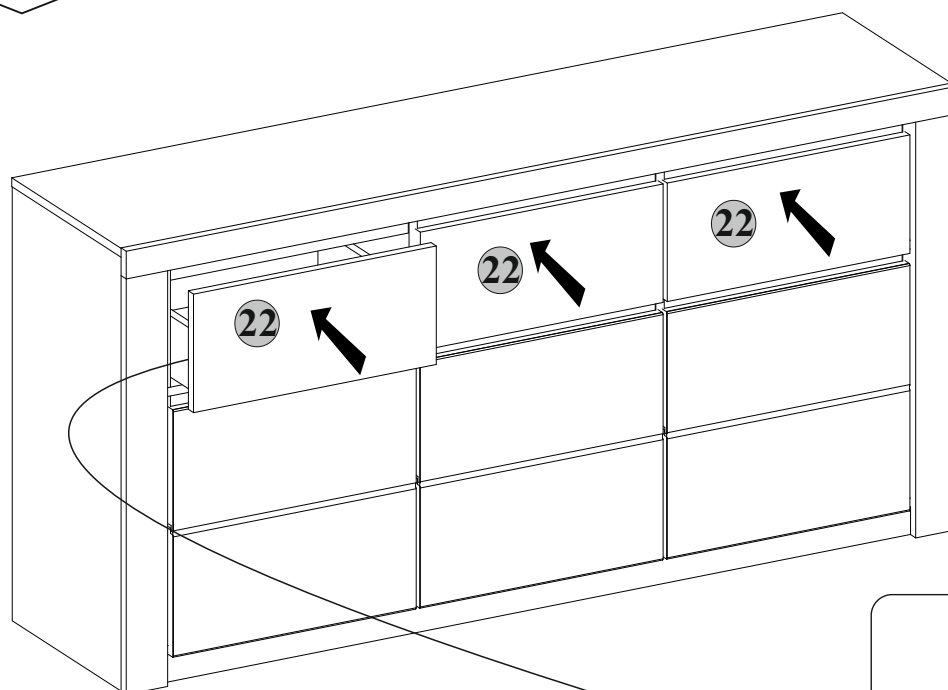

13