





**VOLOS**

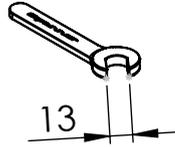



30 min.





Colly 1/3: I ; II ; Bx5 ; Cx5 ; Dx5 ; Ex5 ;

Colly 2/3: III ; IV






Colly 3/3: Vx3 ; Ax12 ; Bx12 ; Zx1

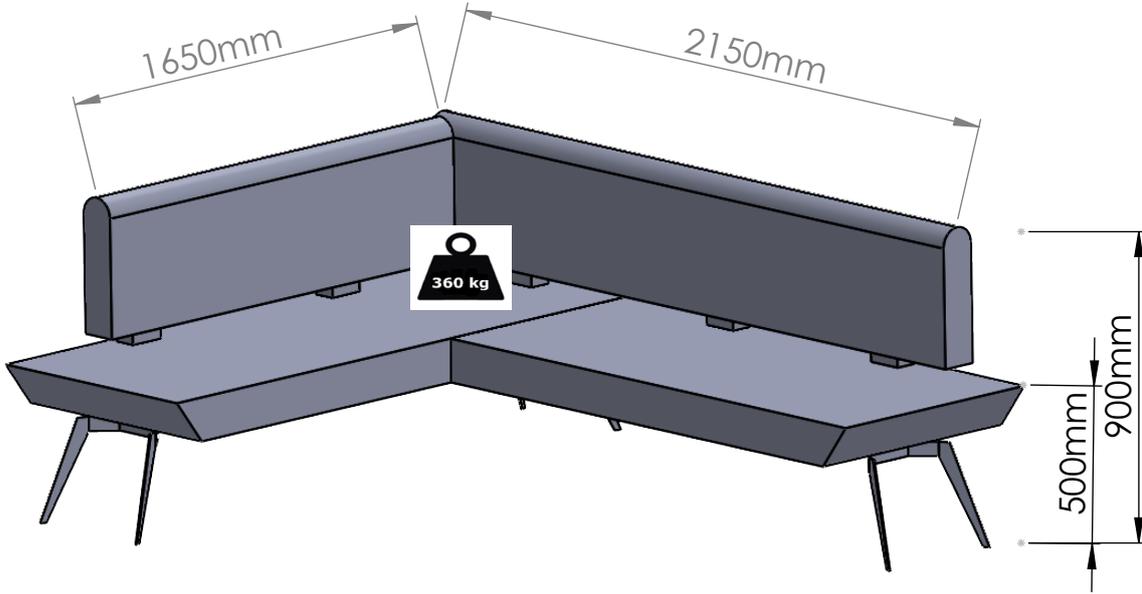





Ax12 M8x40	Bx17 M8
Cx5 180mm	Dx5 M8
Ex5	Zx1 6mm



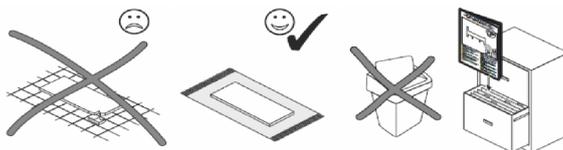
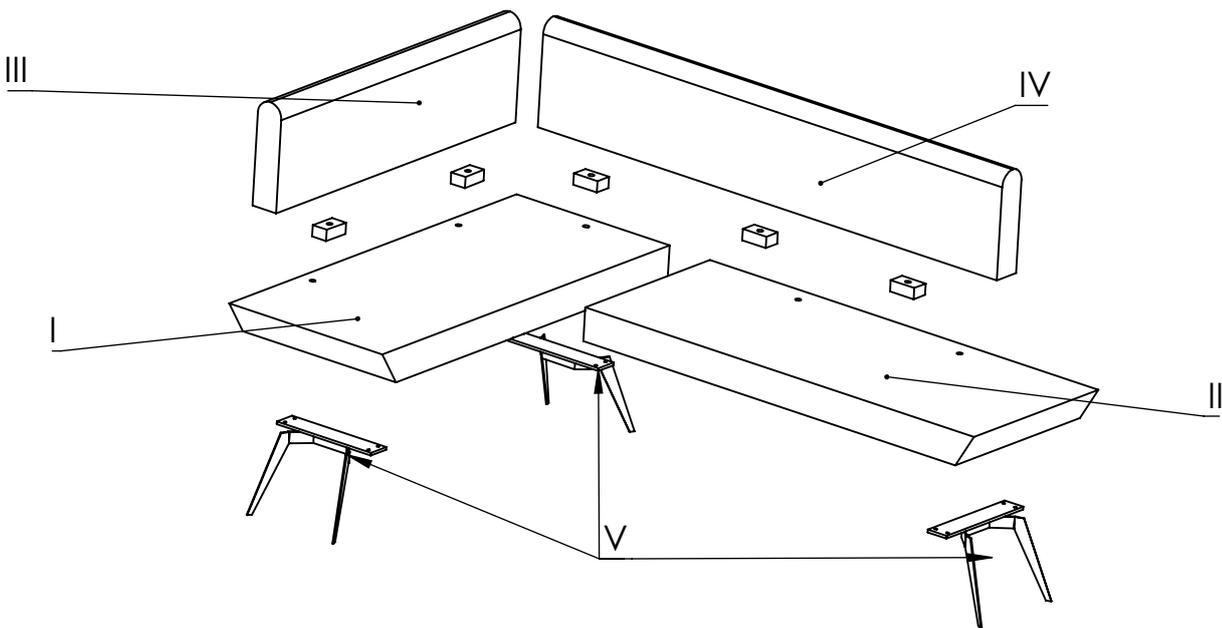


Ax8 M8X40	Bx8 M8	Zx1 6mm
--------------	-----------	------------

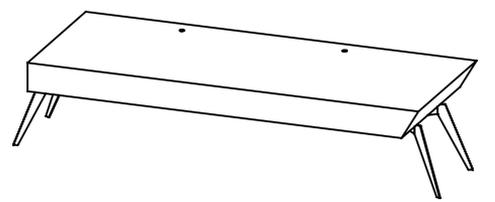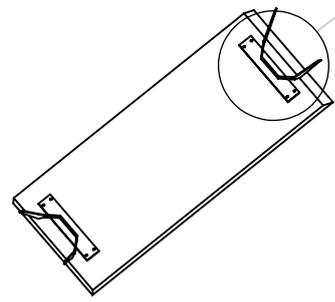
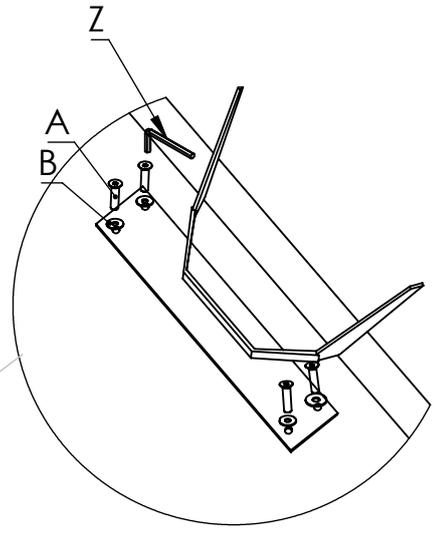
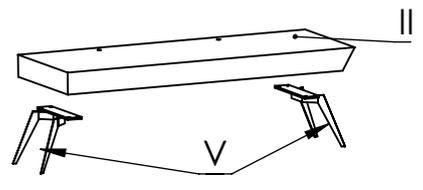





Ax4 M8X40	Bx4 M8	Zx1 6mm
--------------	-----------	------------

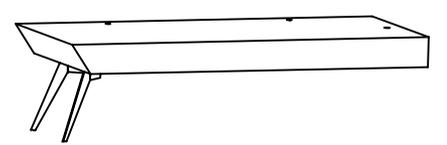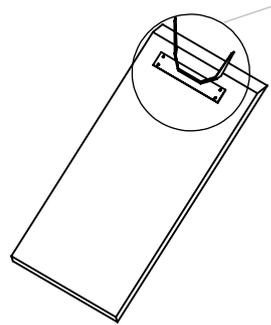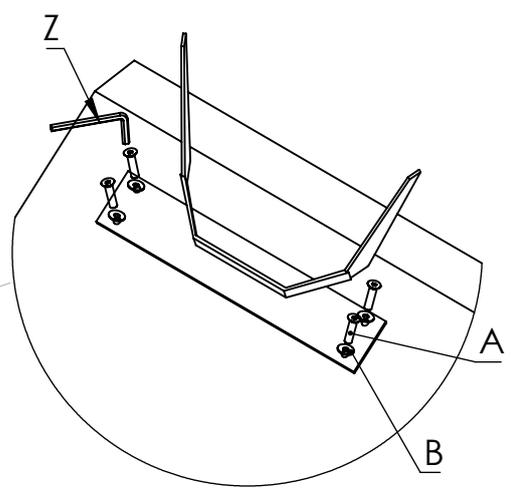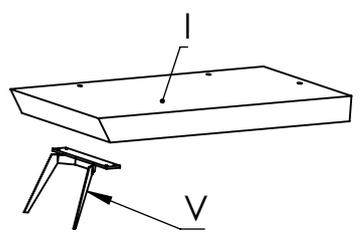

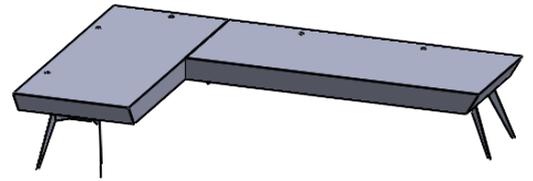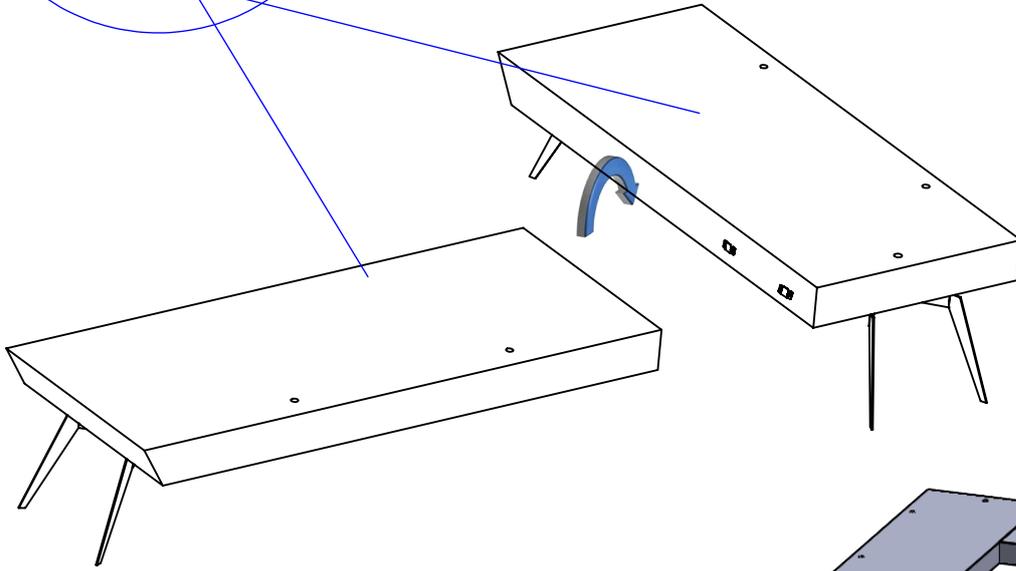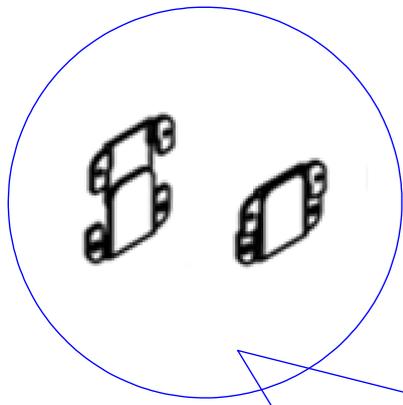

Cx5  
180mm

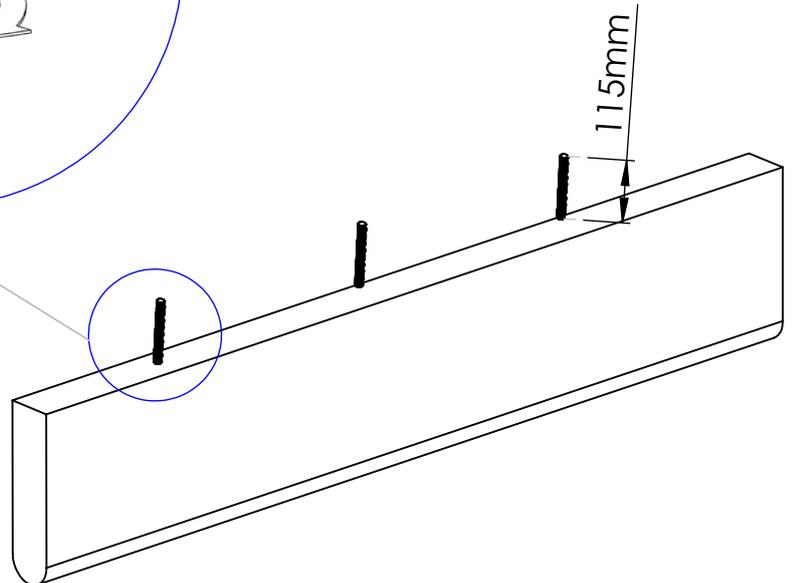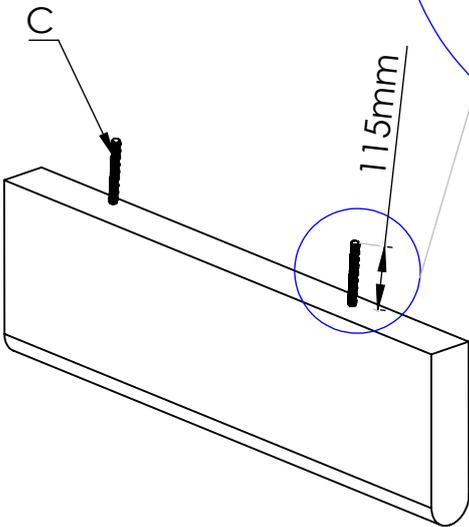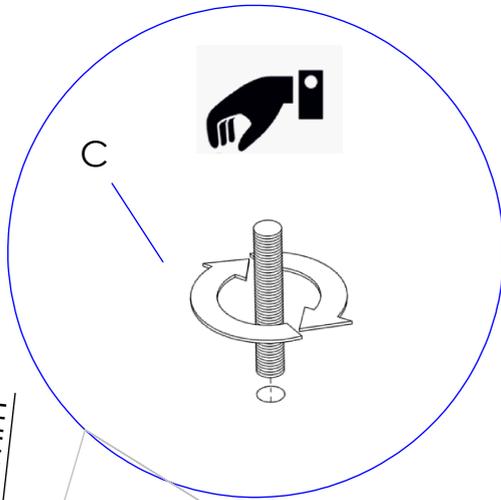

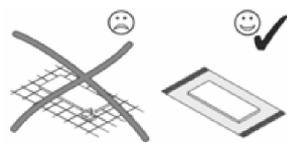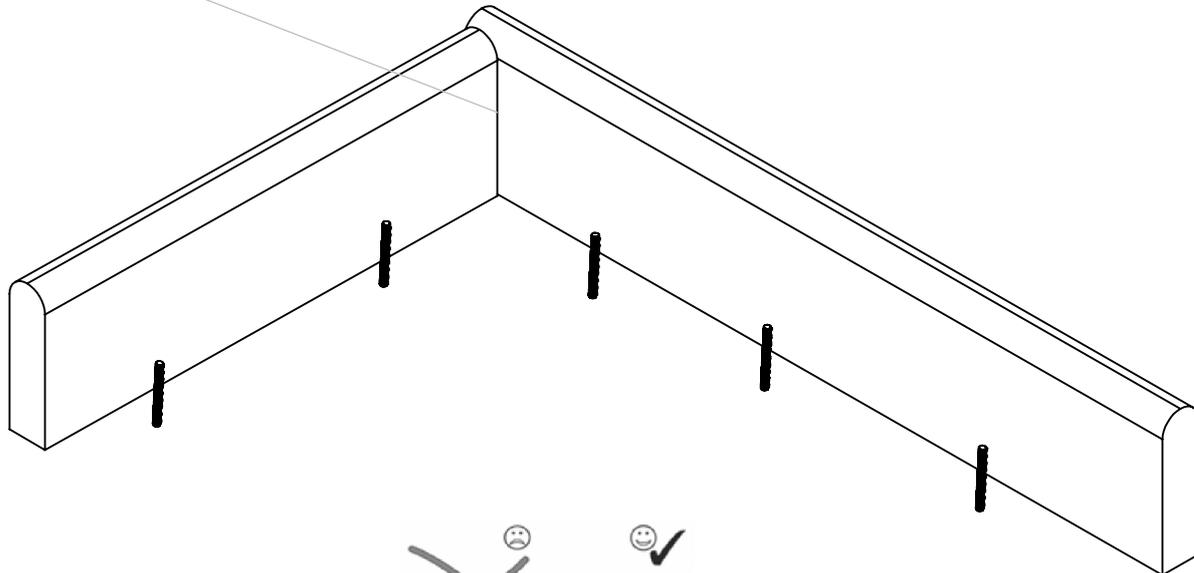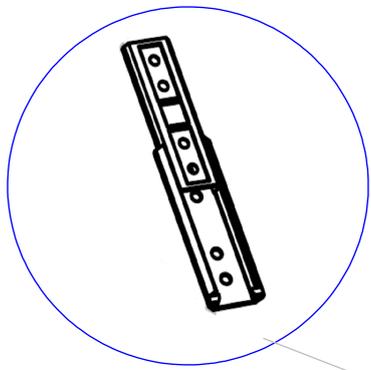Bx5 M8	Dx5 M8		Ex5
-----------	-----------	--	-----

