
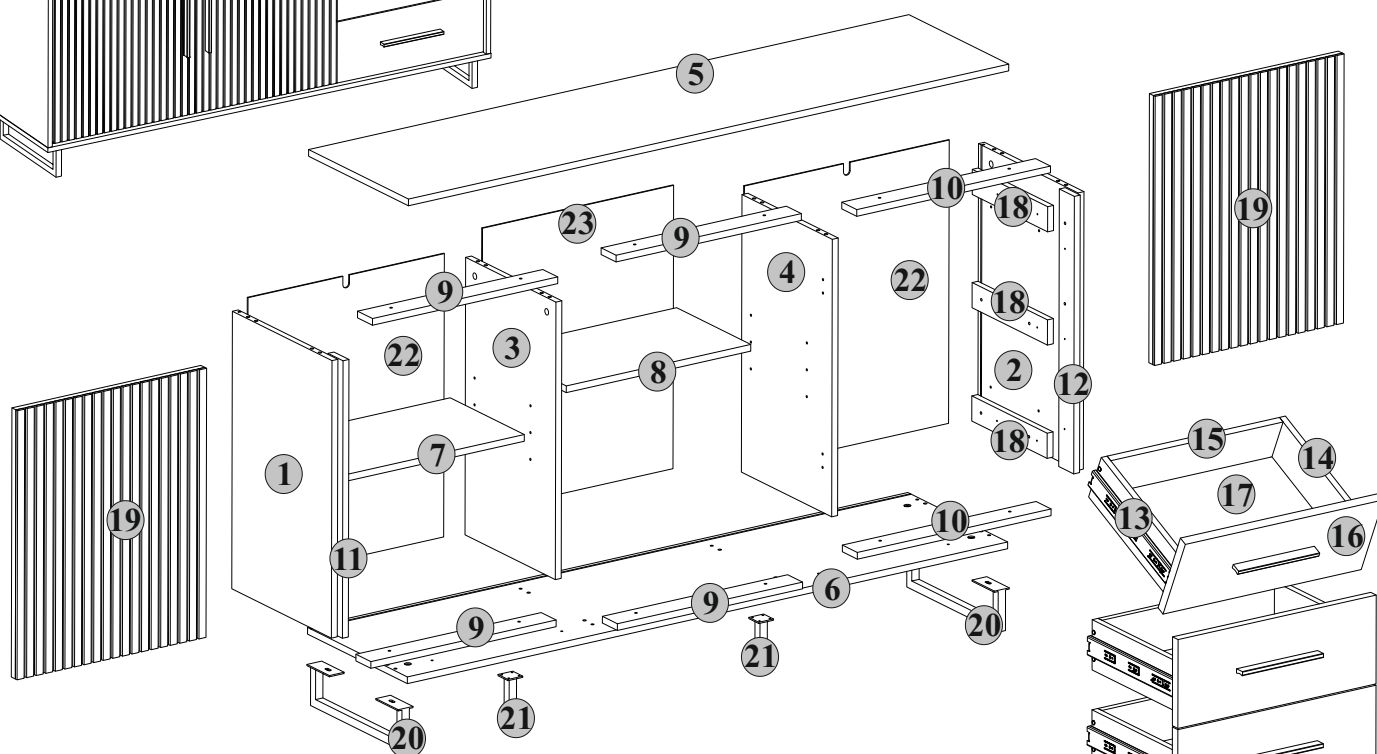
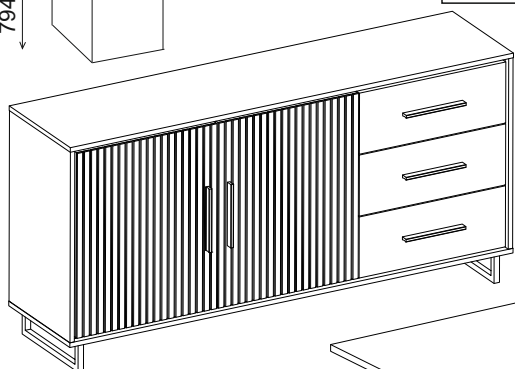





# 3511

versionsnummer: 16.12.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

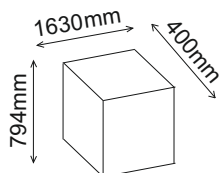


## B5

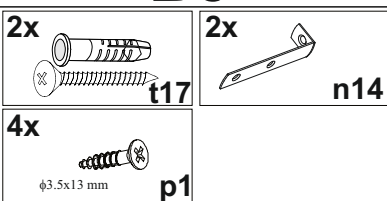


## B1

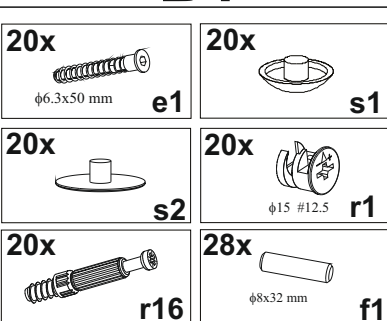


## B2

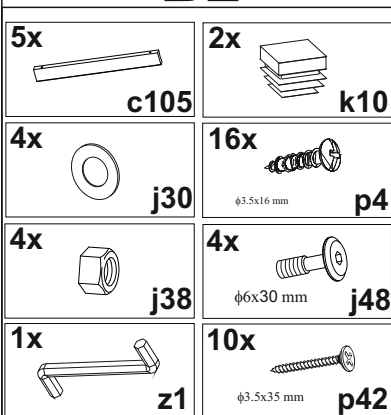














## B3

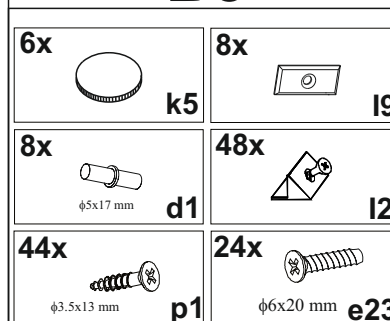

## B4



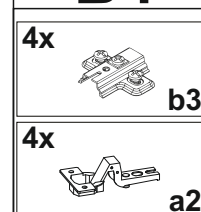


**1**

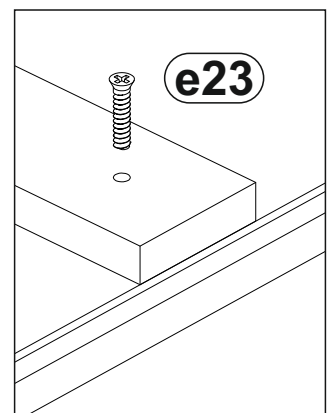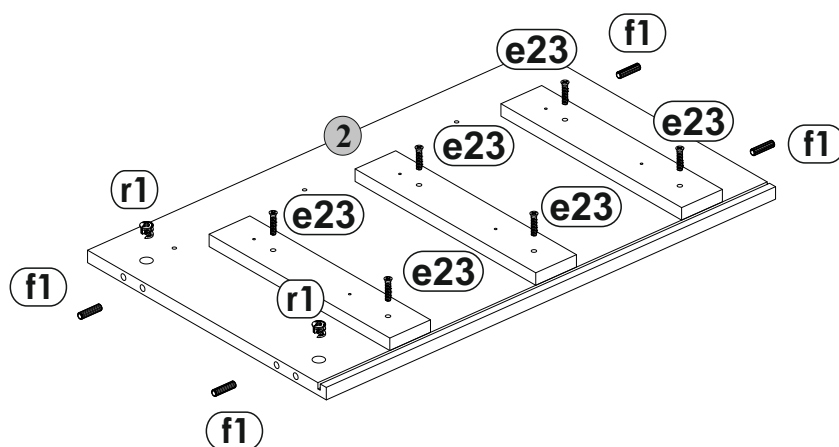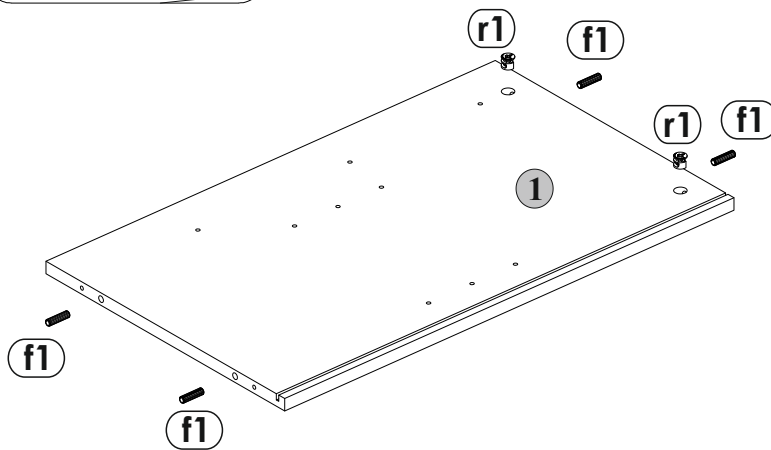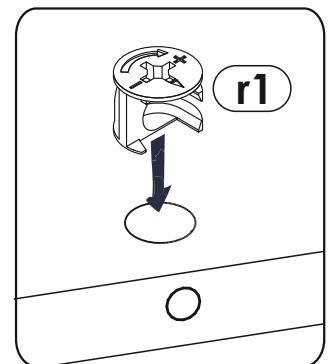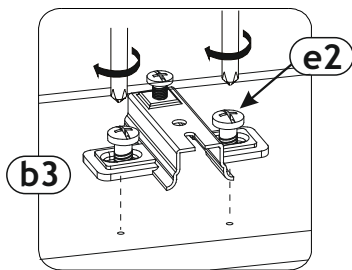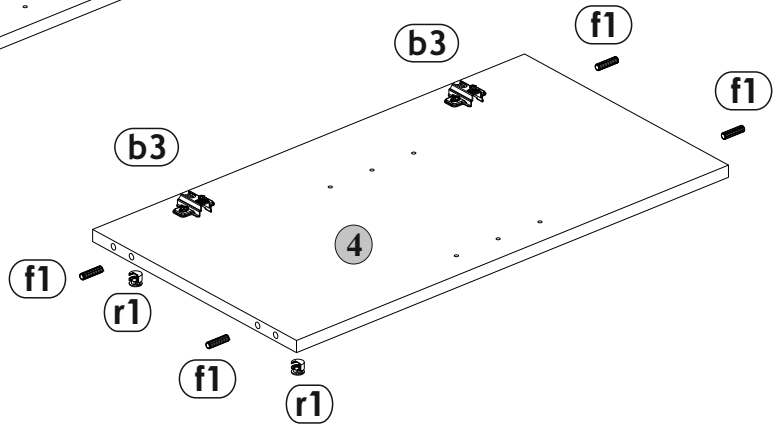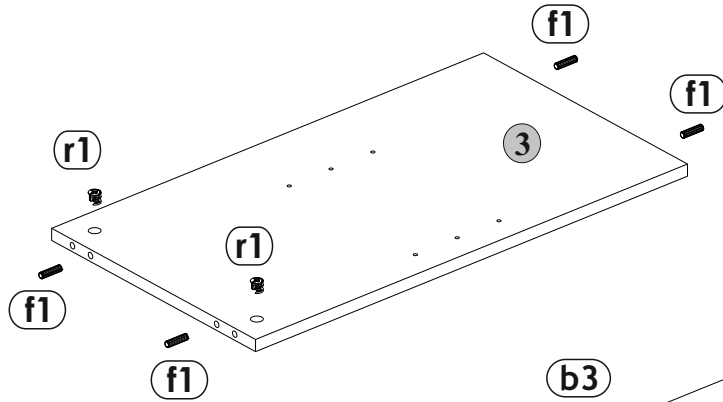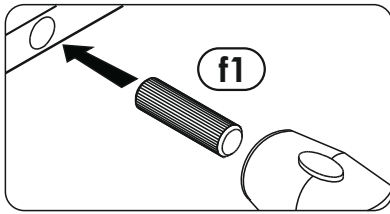


**2**


2

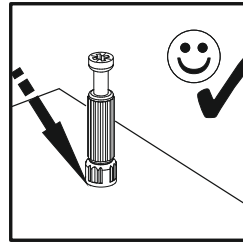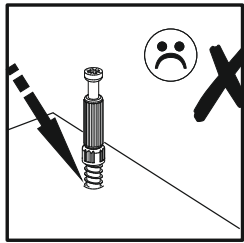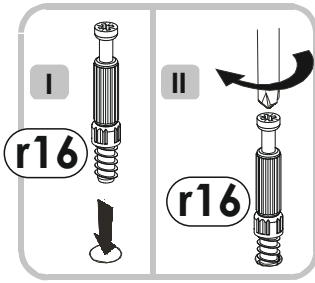

8x  
r16

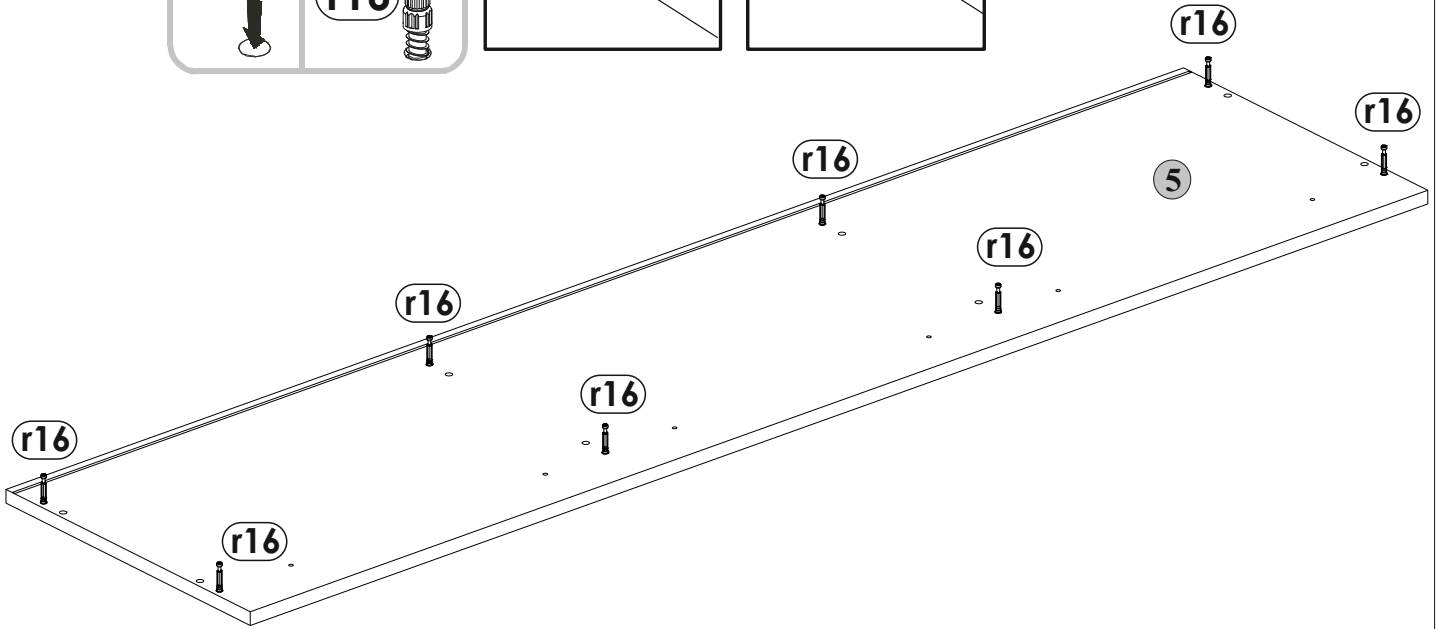

3

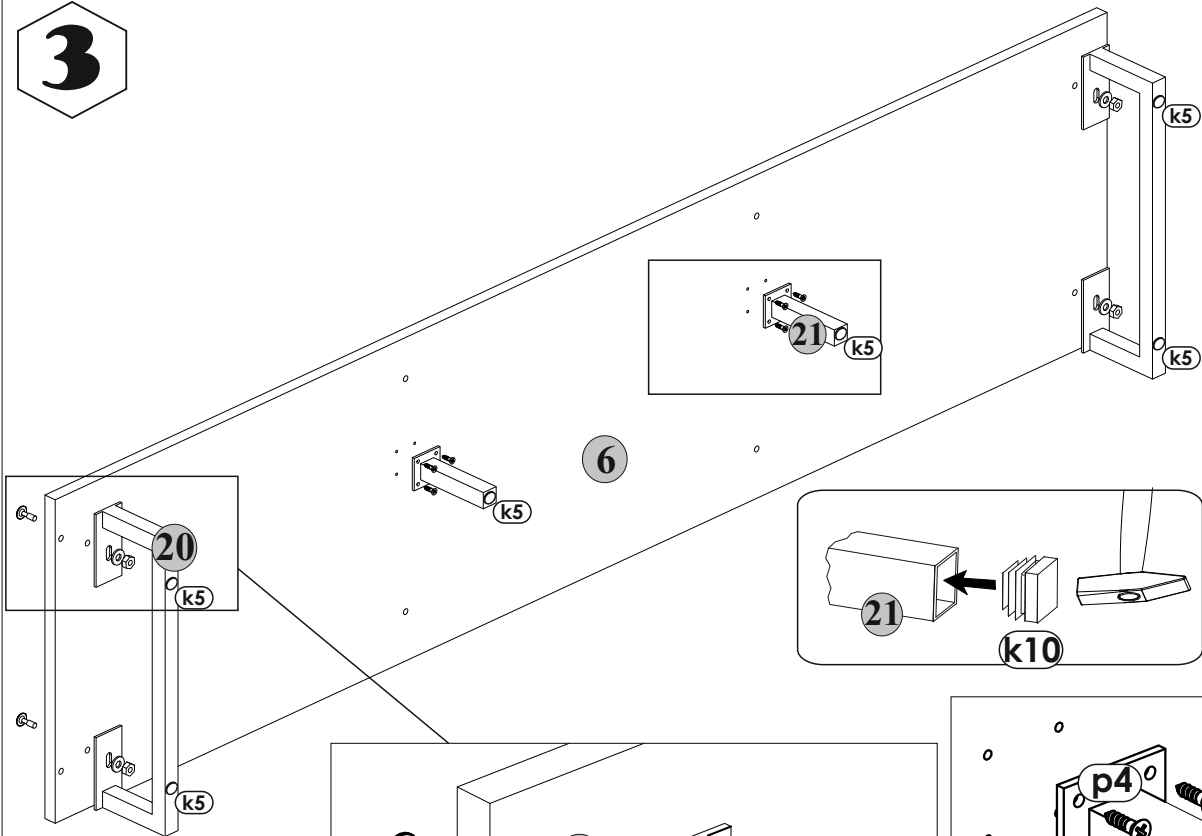

4x  
j30



4x  
j38

4x  
j48

8x  
p4  
φ3.5x16 mm

4x  
k5

2x  
k12

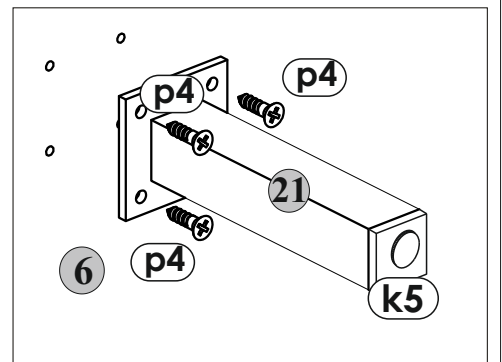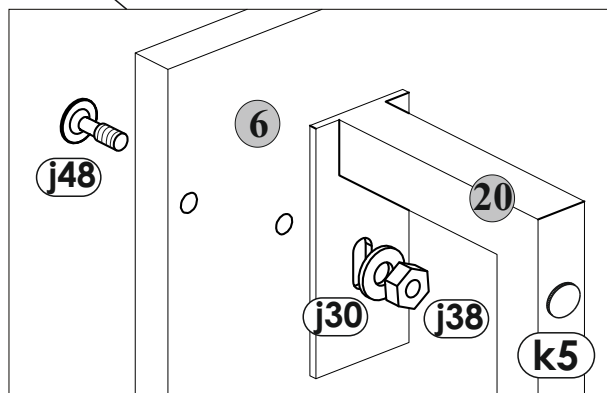


3

4

2x  b3



4x  e2  
φ6.3x13 mm

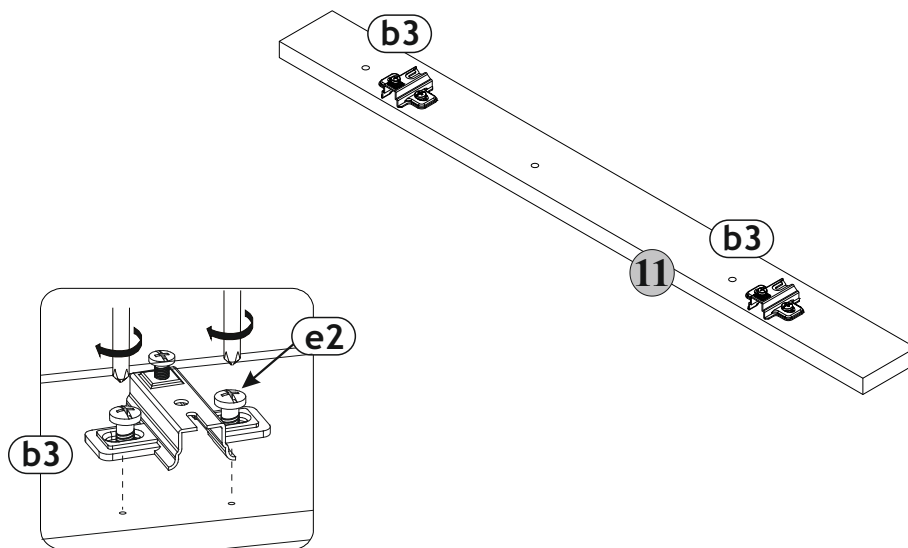


5

4x  a2

8x  p1  
φ3.5x16 mm

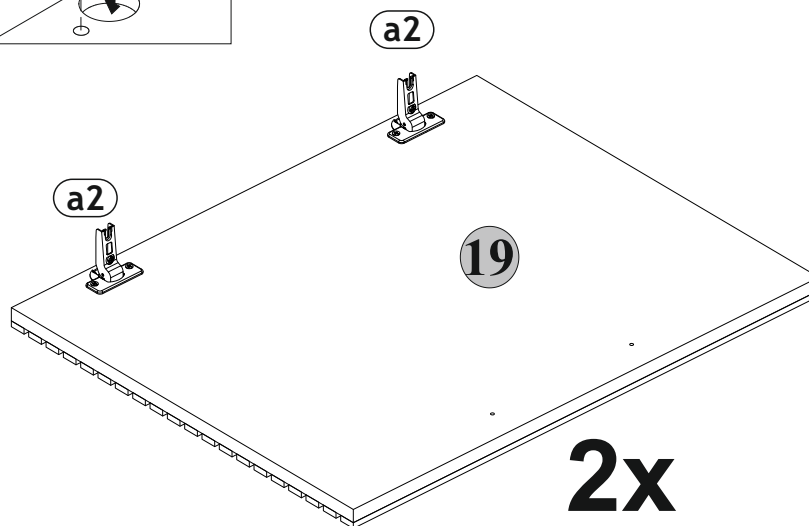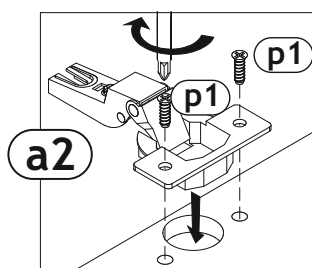

2x

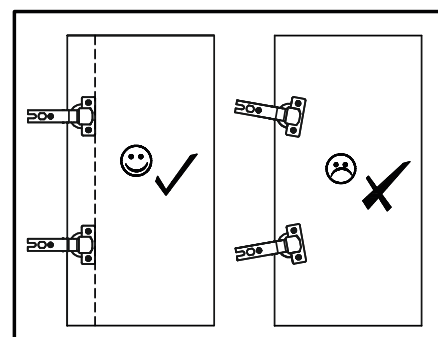

4



8x





e

8x  s1







1x  z1

5

8

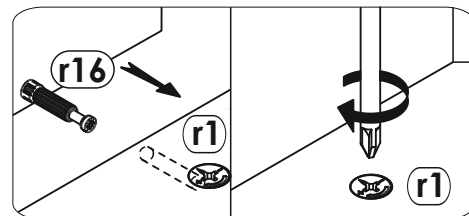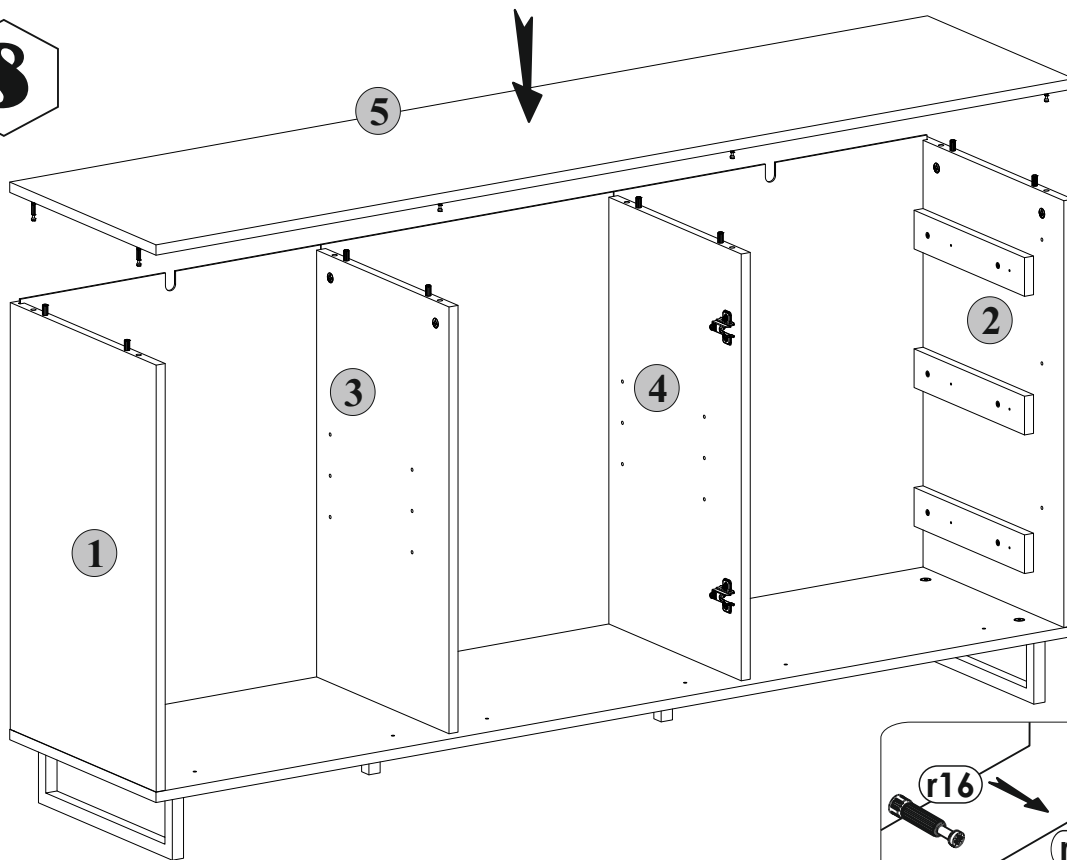



9

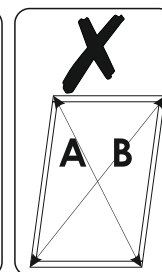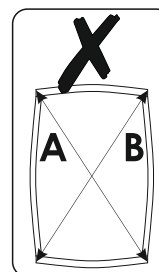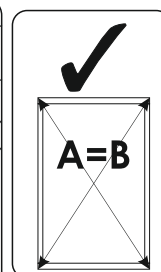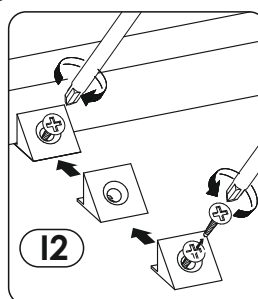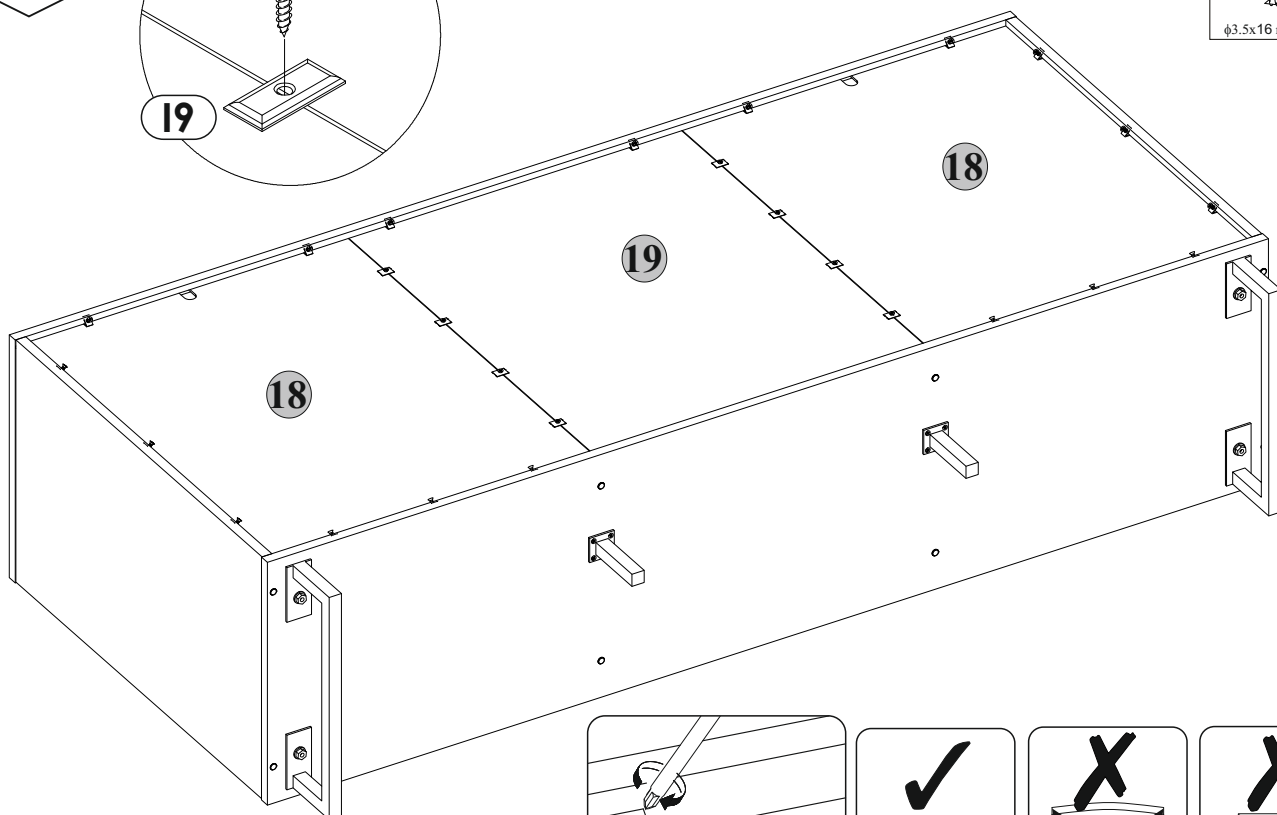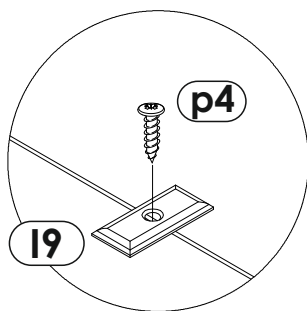

6



# 10

6x  
φ6x20 mm  
e23

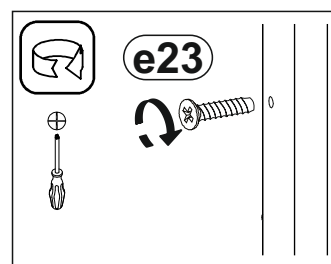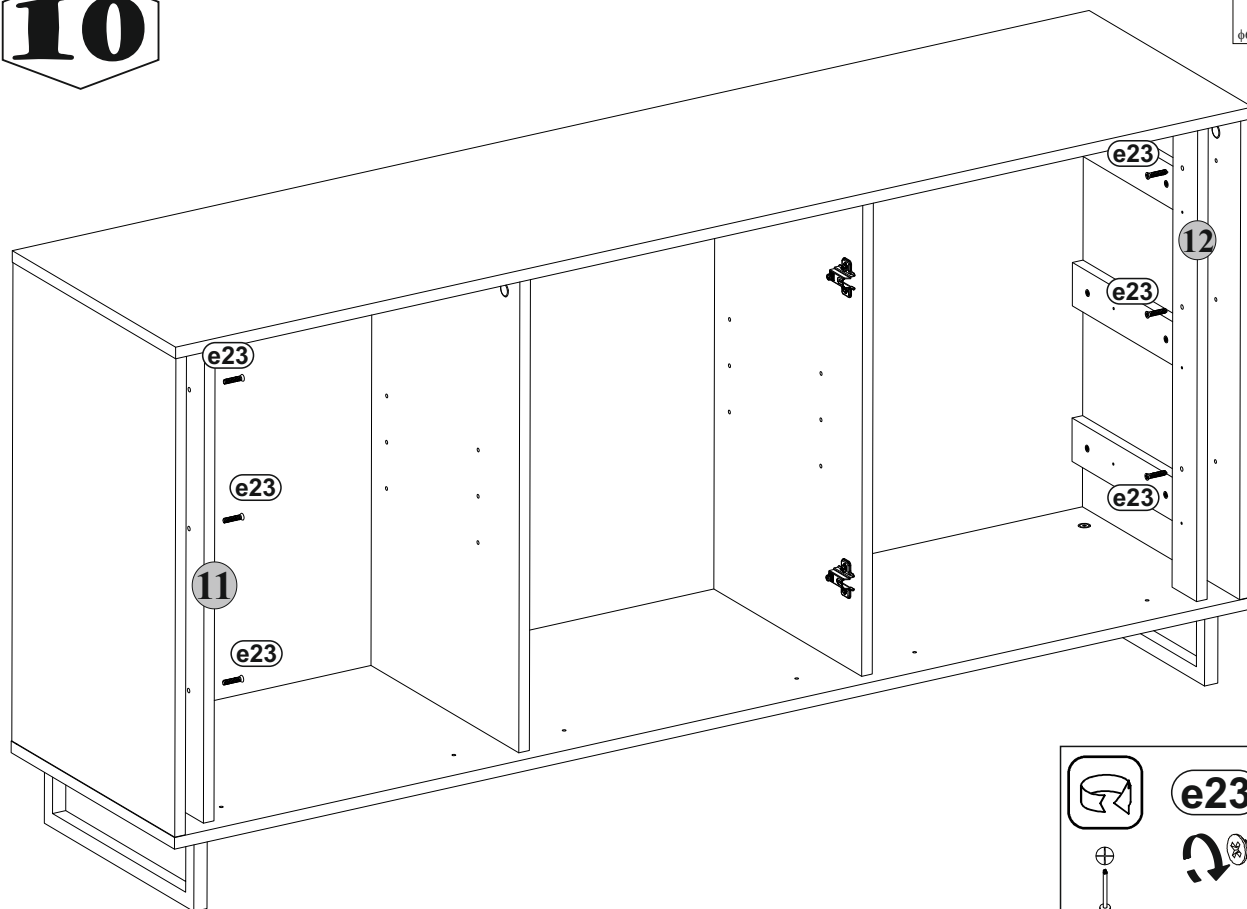


















# 11

12x  
φ6x20 mm  
e23

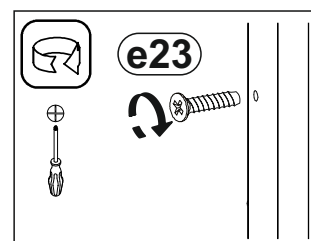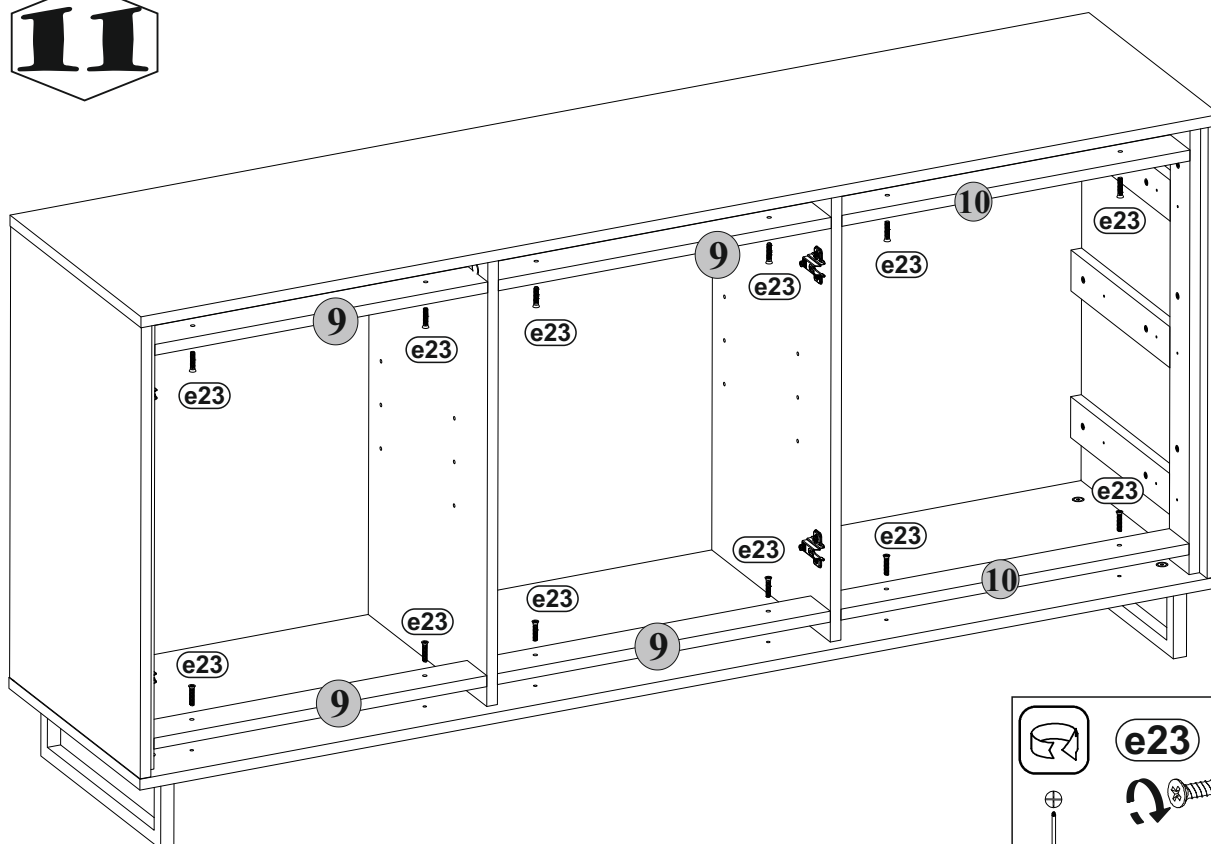


# 7

# 12

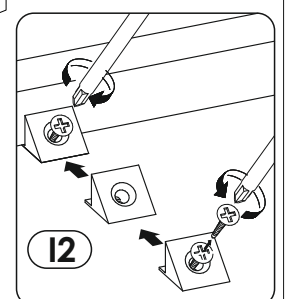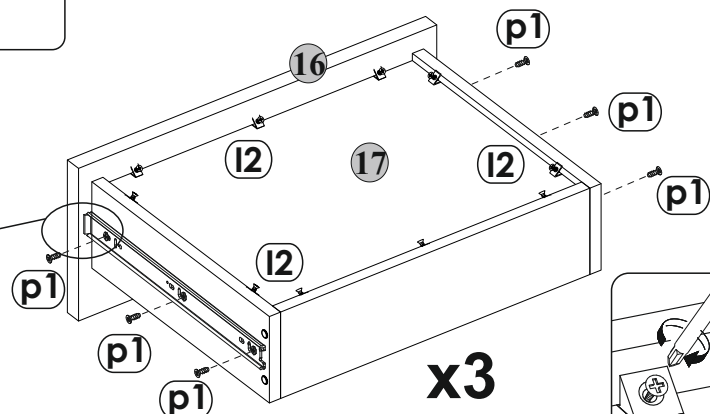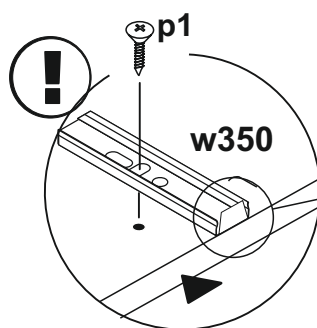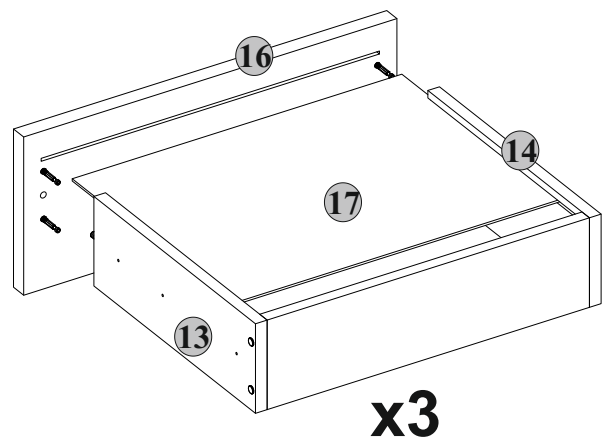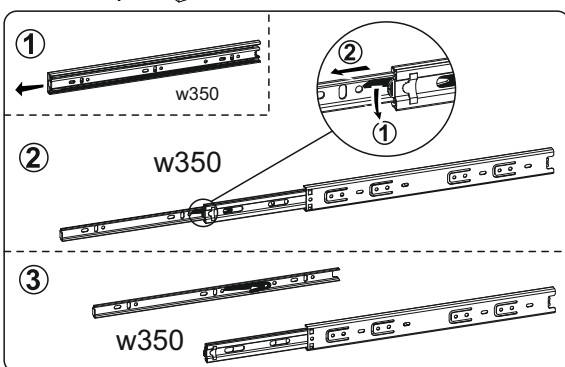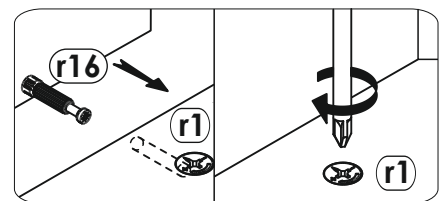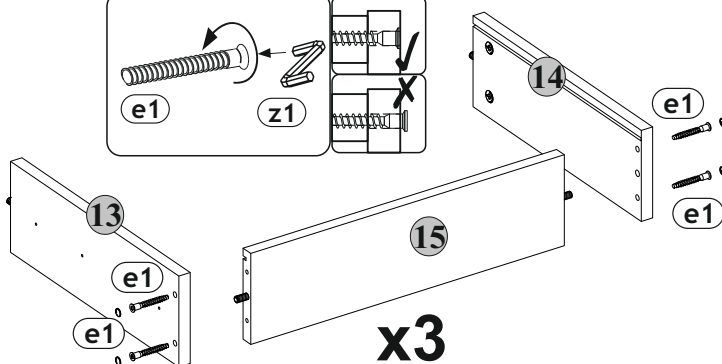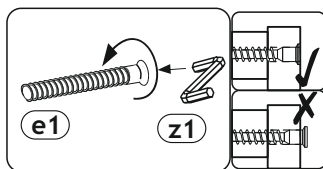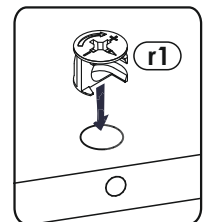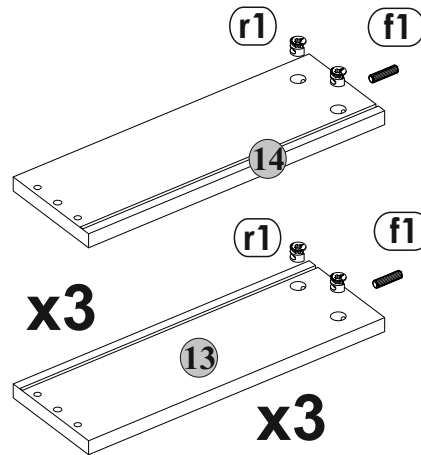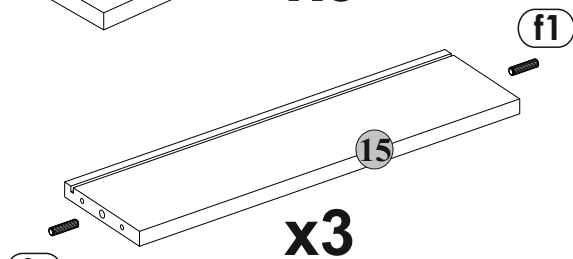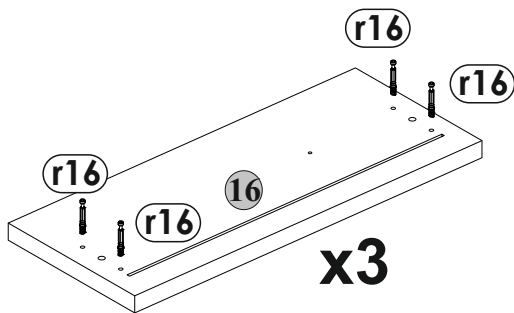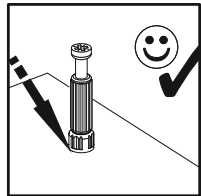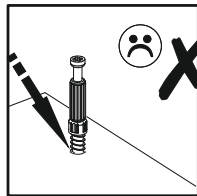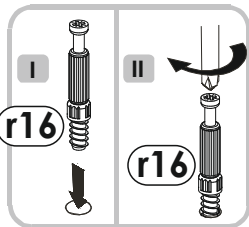

# 8

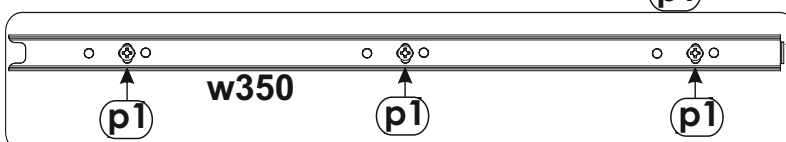

# 13










2x  
t17

2x  
n14

4x  
φ3.5x16 mm  
p1



3x  
w350

18x  
φ3.5x13 mm  
p1

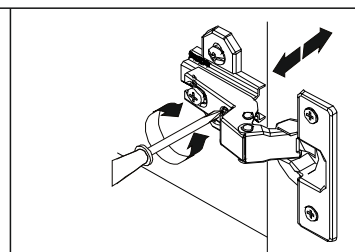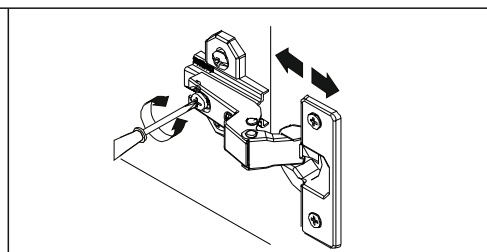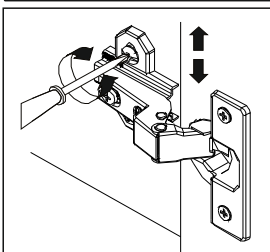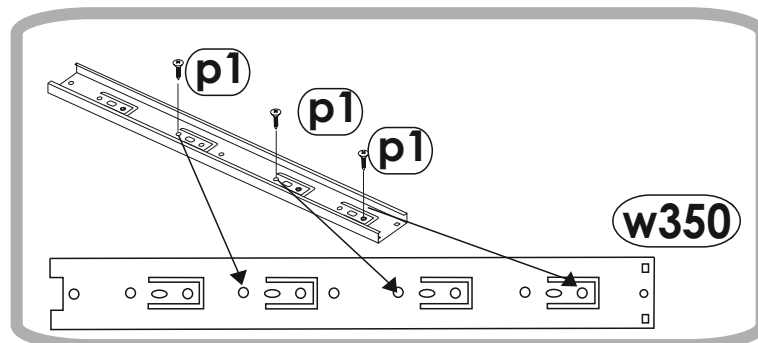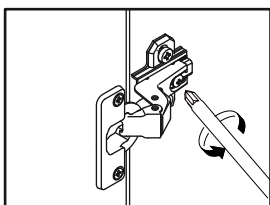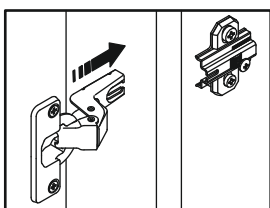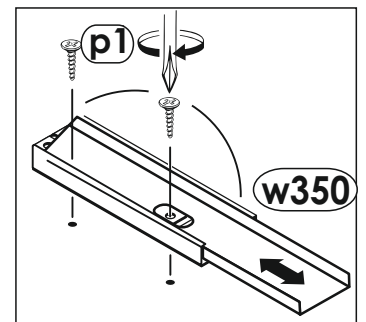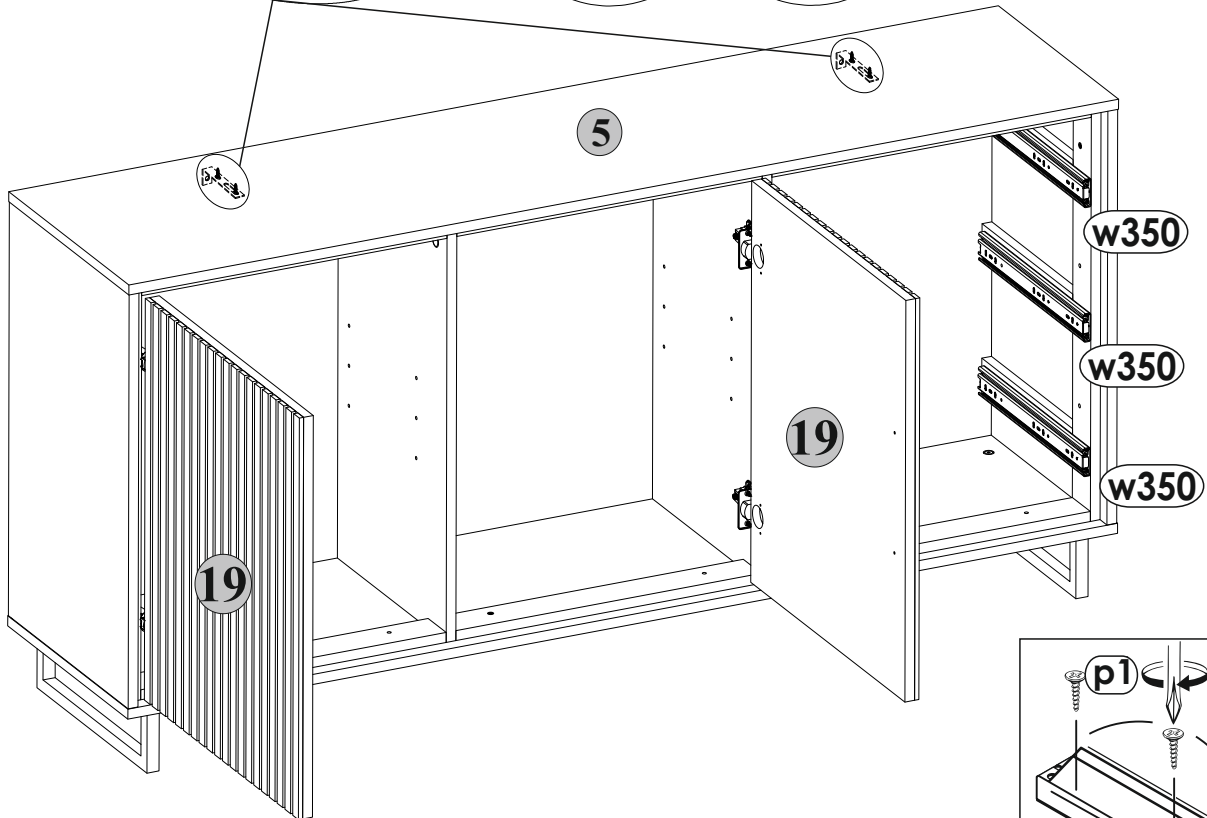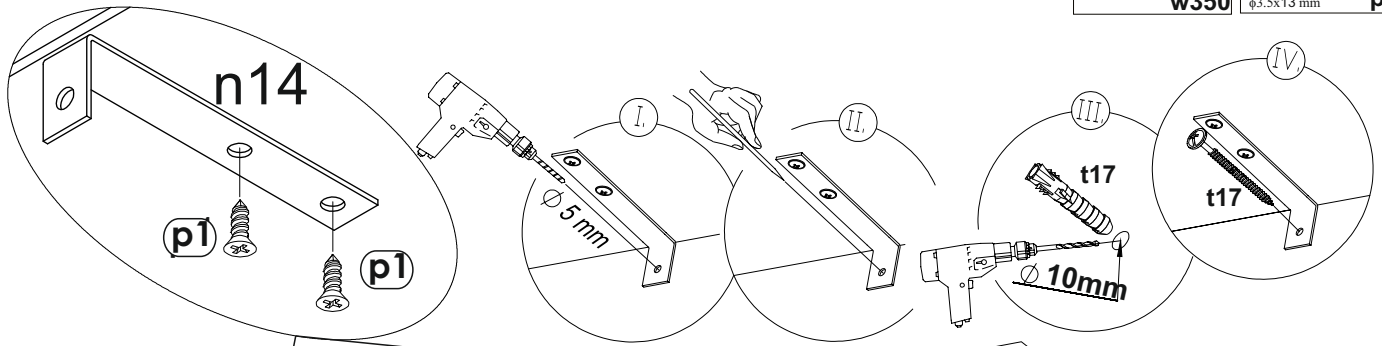

9

# 14



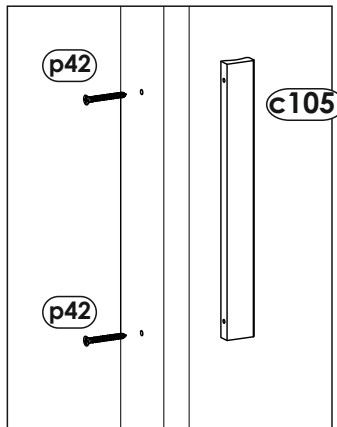
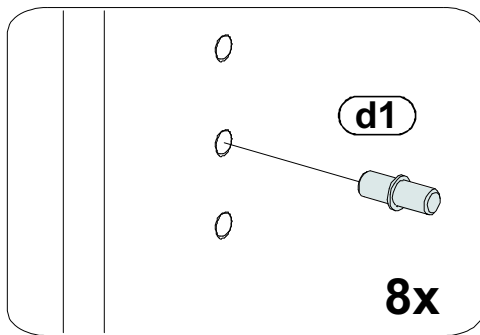


5x  
c105

8x  
d1  
ø5x17 mm

10x  
p42

20x  
s2

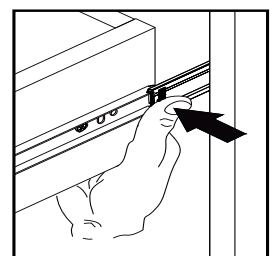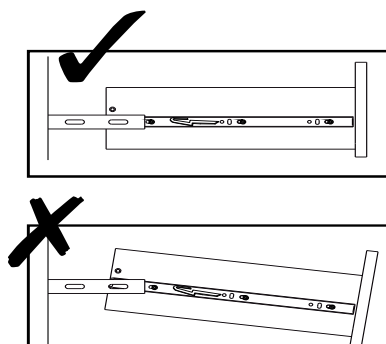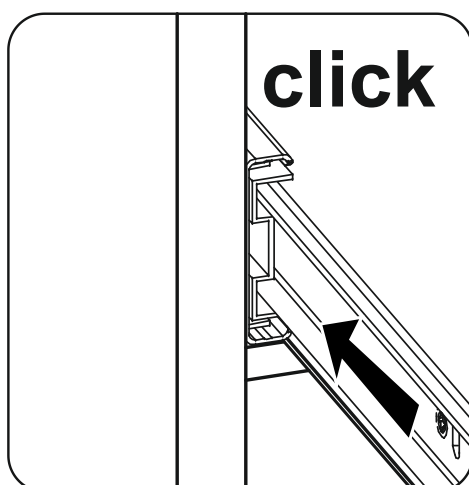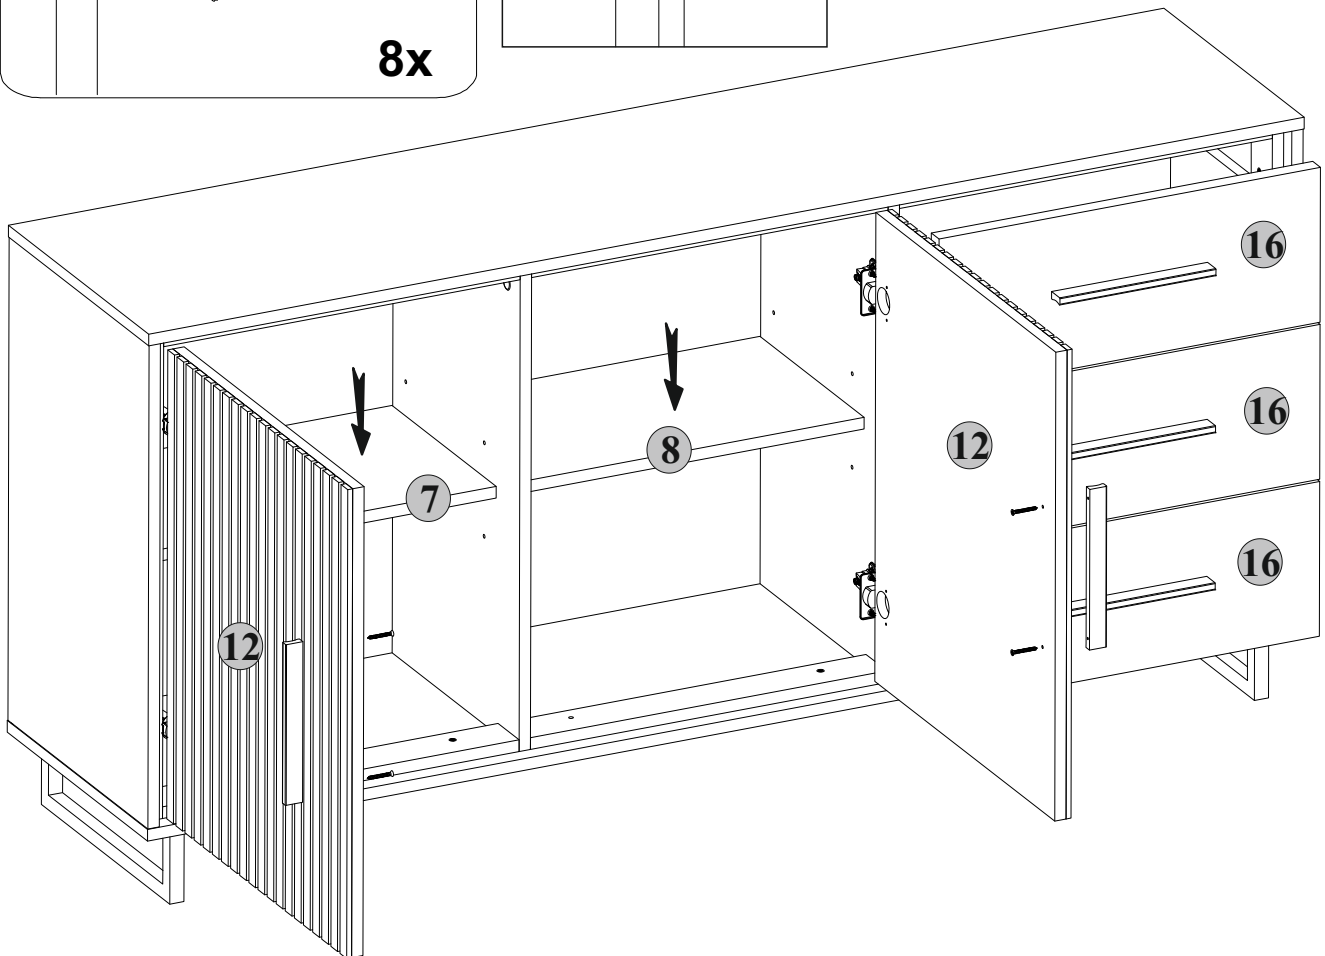

# 10