
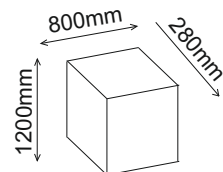



“2574”

versionsnummer: 18.10.2021


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

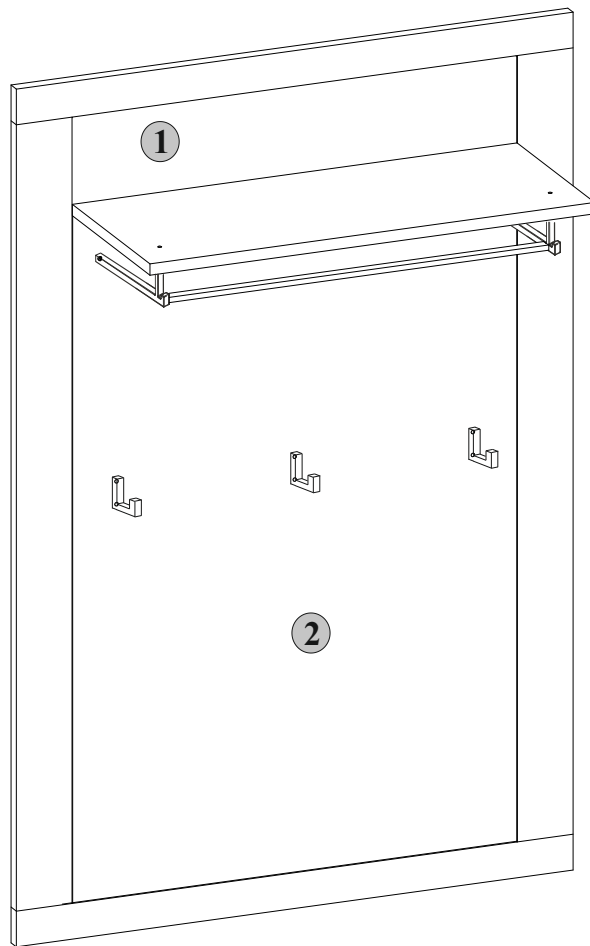


B1




$\phi 8 \times 40$ mm t14




5x10.5 e3



n3




$\phi 7 \times 70$ mm e3



s1

B2




g31



g33L



g33R














550 mm g34




$\phi 4 \times 25$ mm j30

1

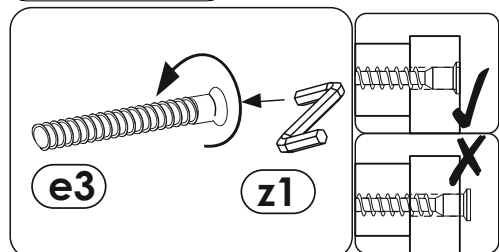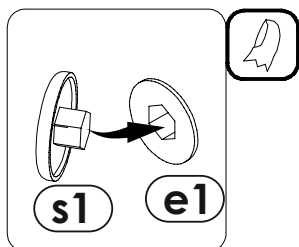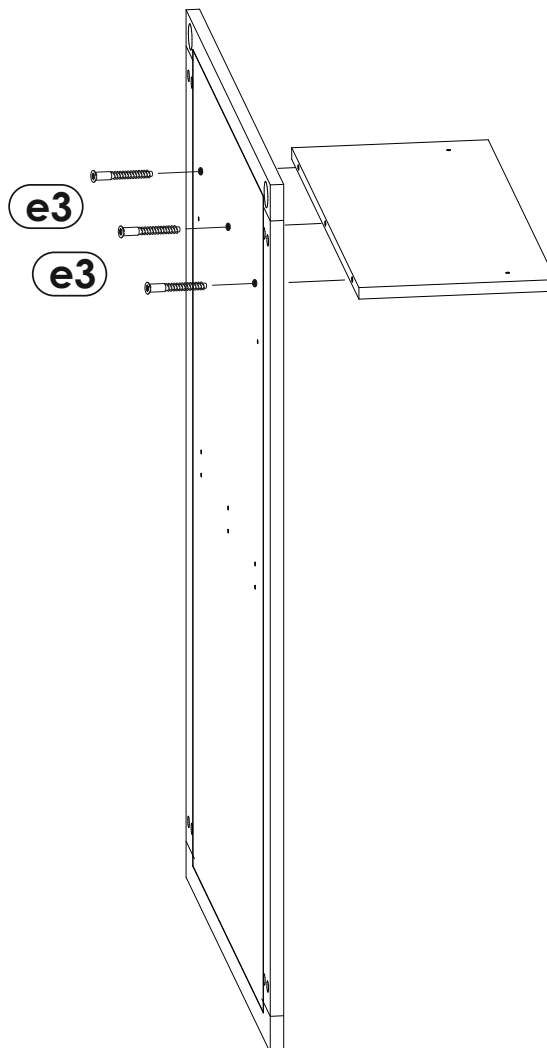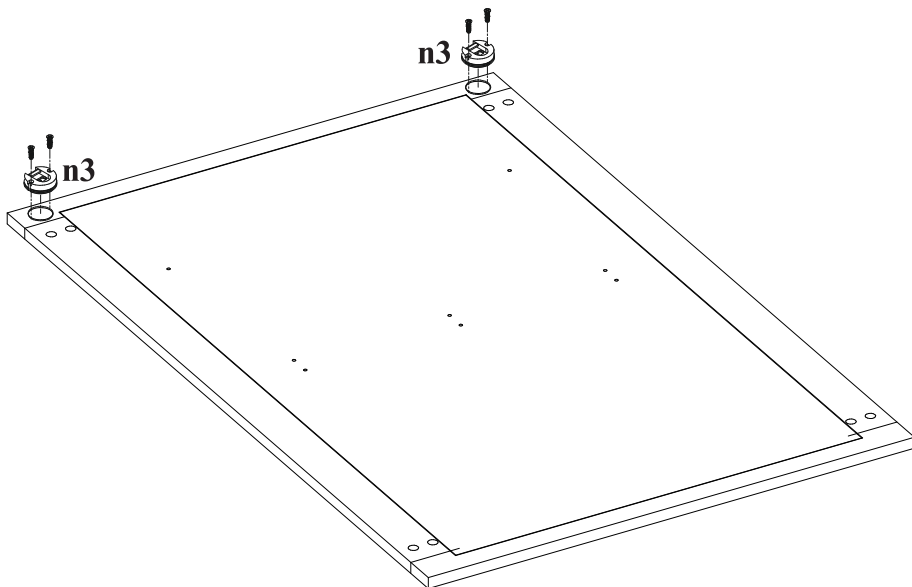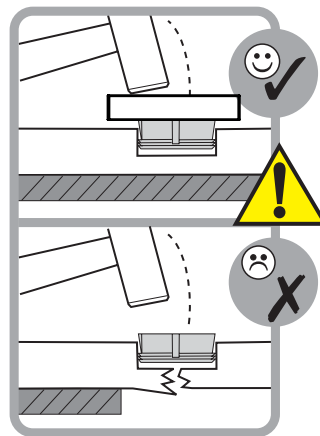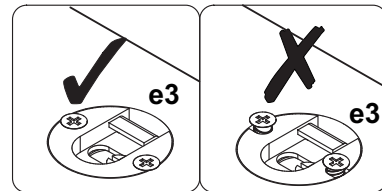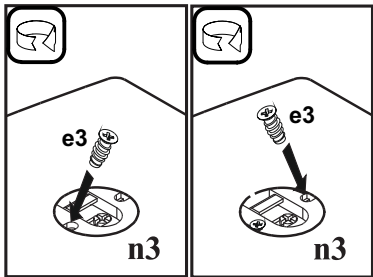

2


2

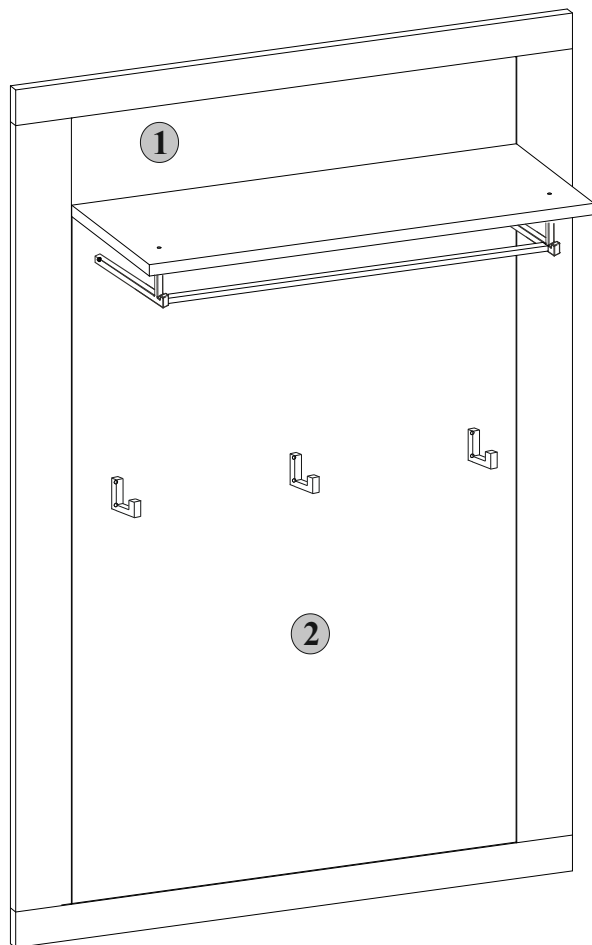




3x  g31

1x  g33L

1x  g33R

1x  550 mm g34


4x  $\phi 4 \times 25$ mm j30

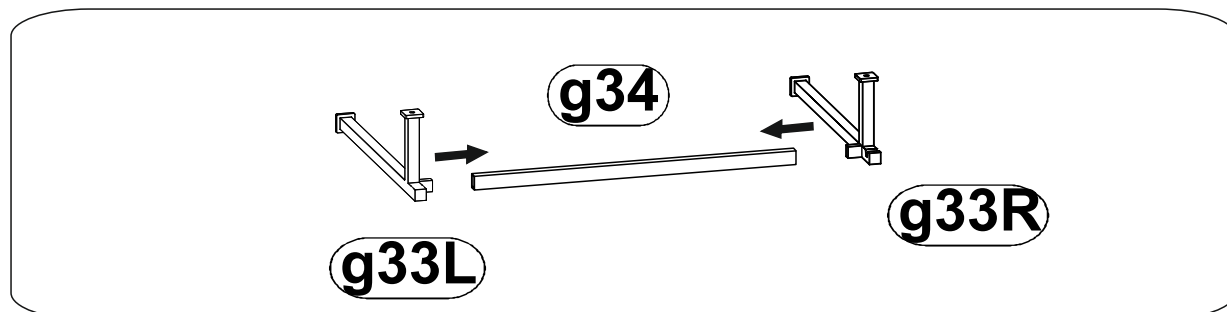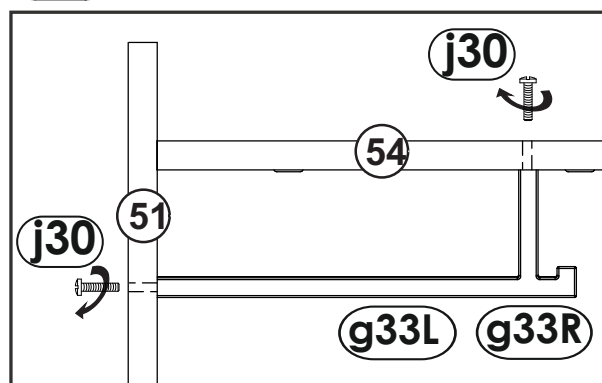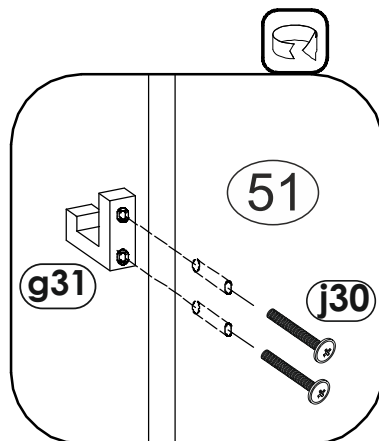

3











3

x2



φ8x40 mm

t14

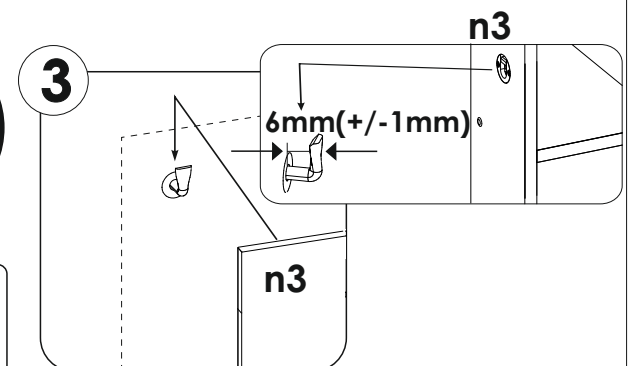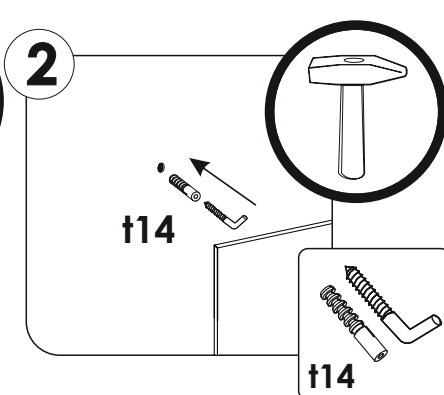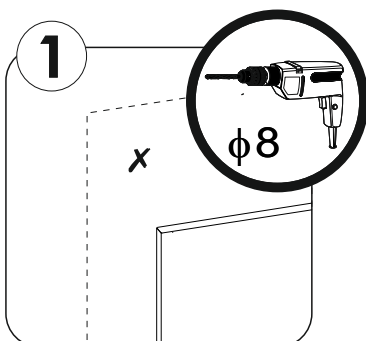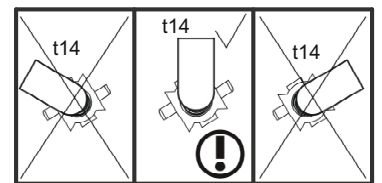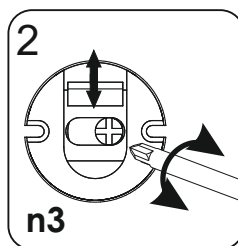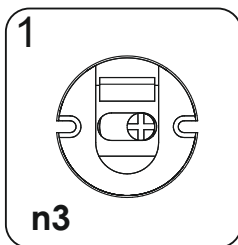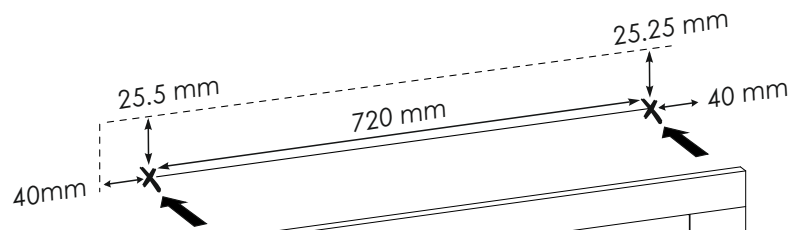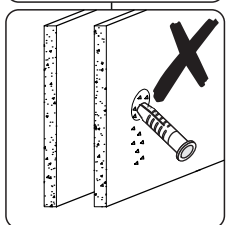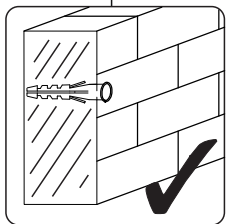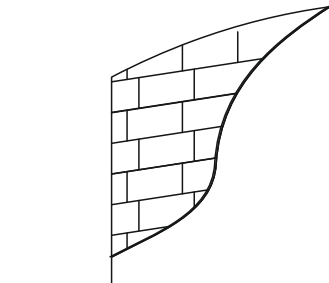

4