
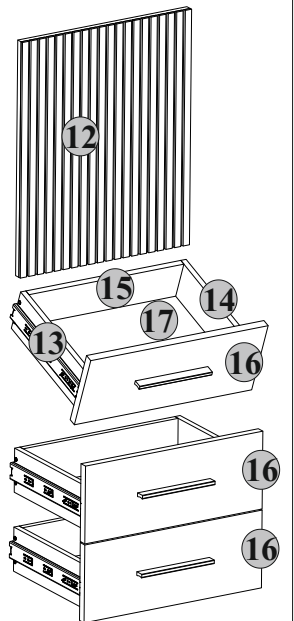
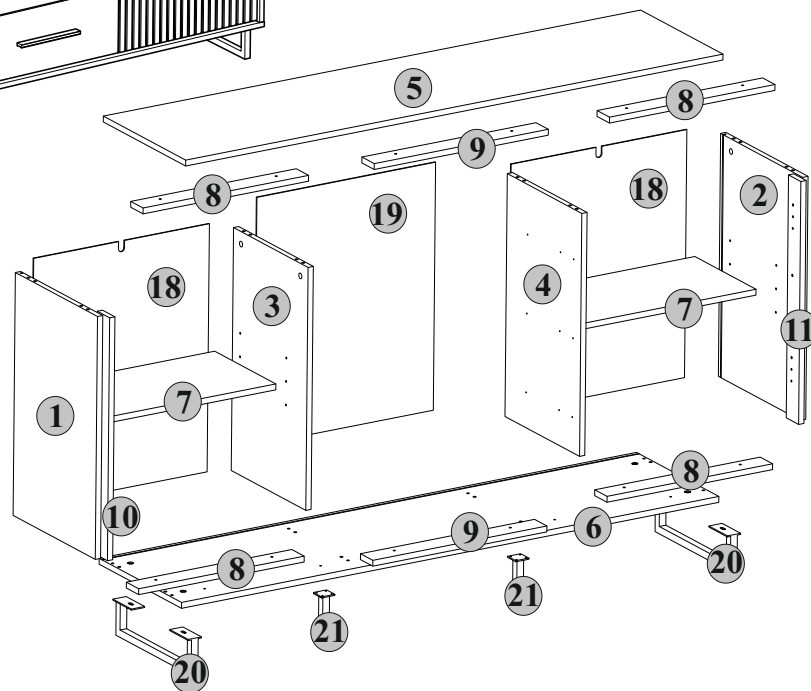
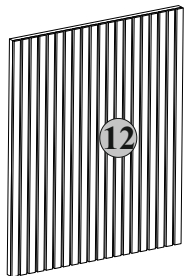
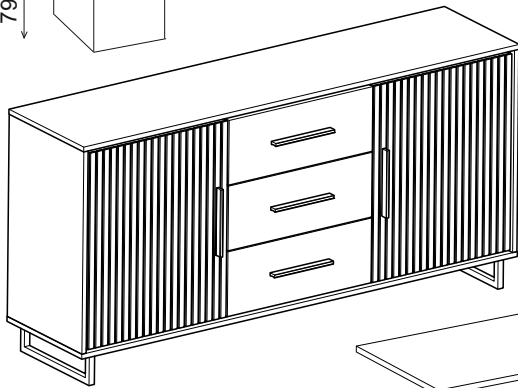





3505

versionsnummer: 16.12.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

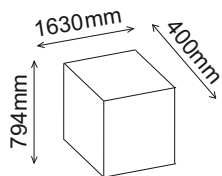


B5

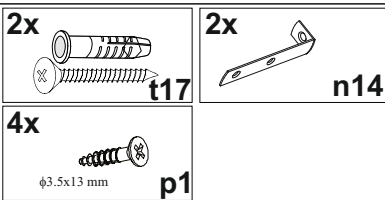


B1

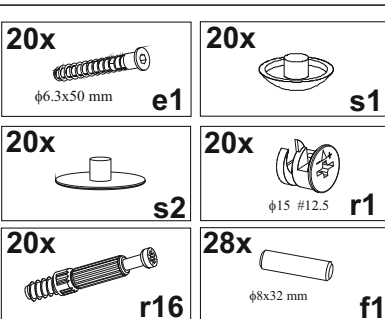


B2

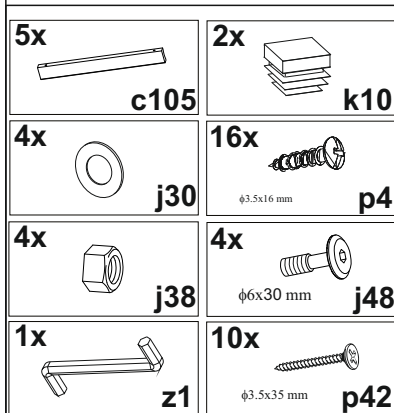


B3

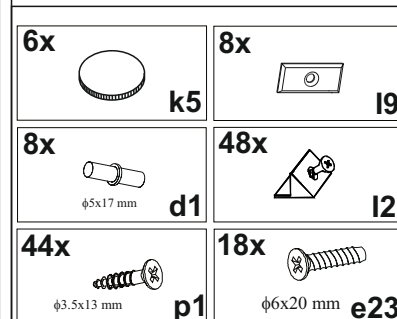






B4

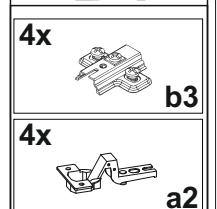










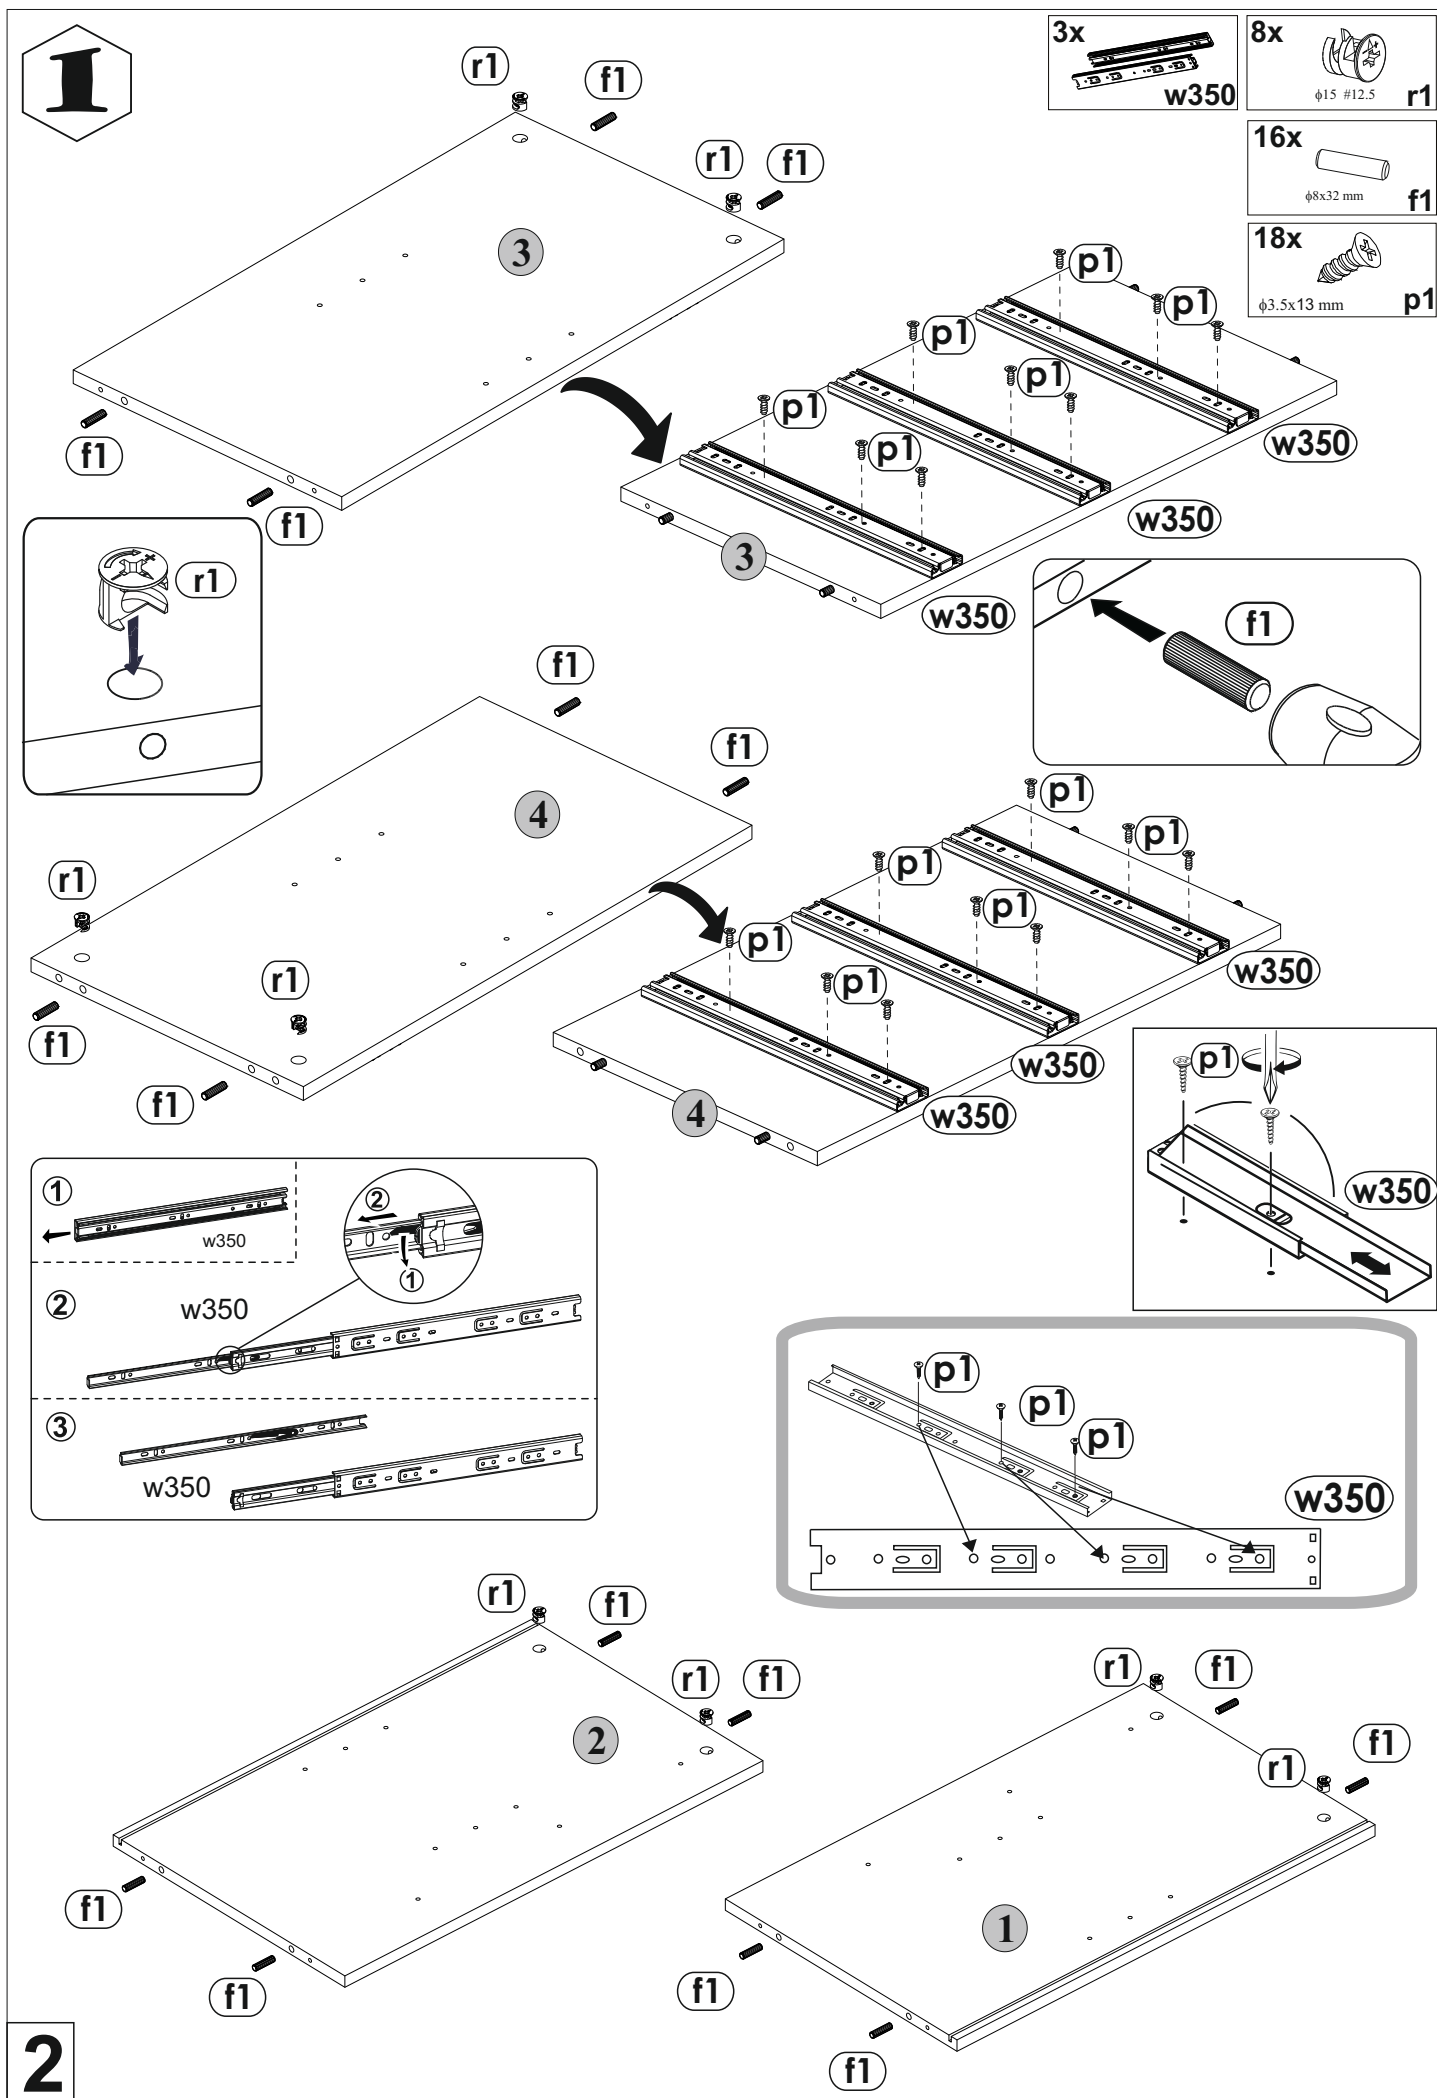


2

2

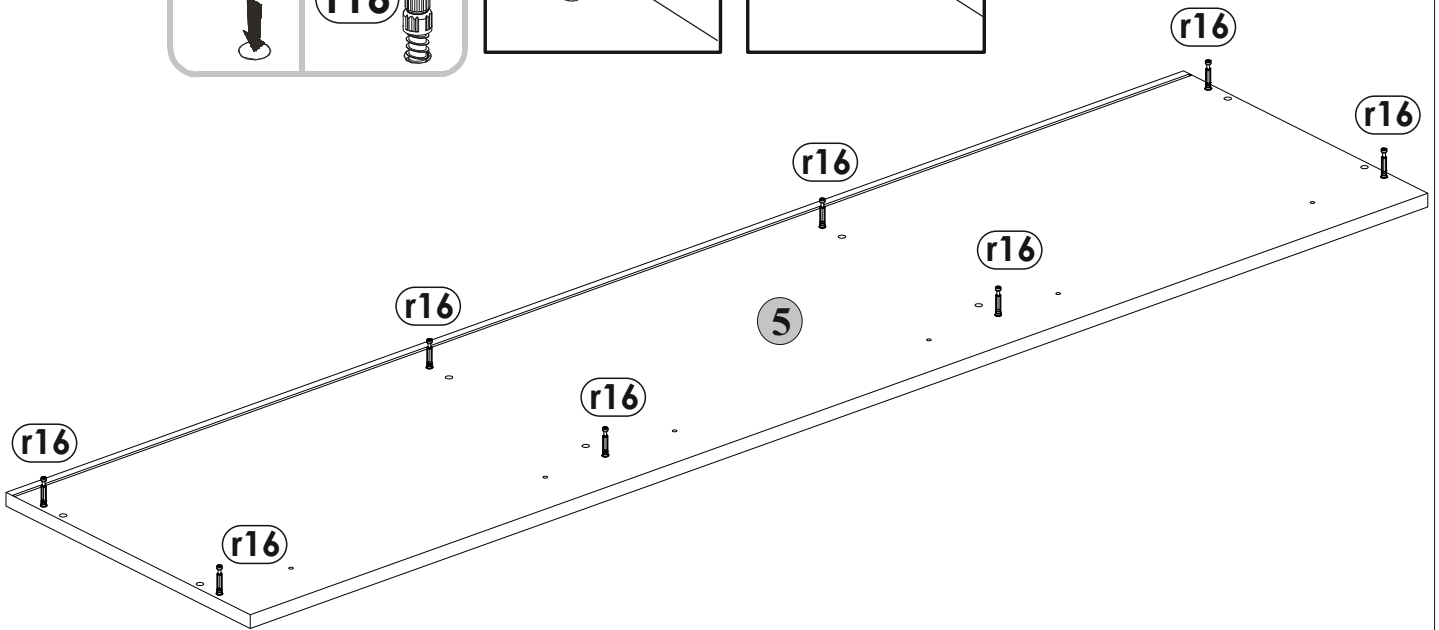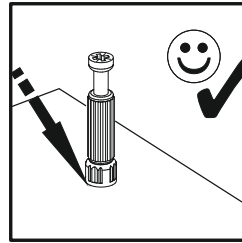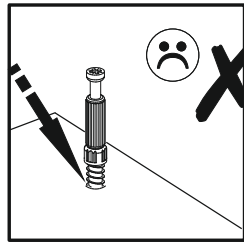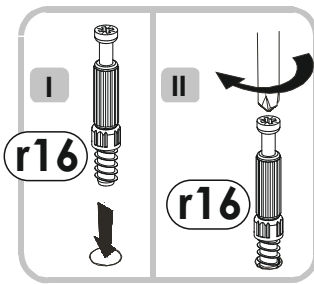

3

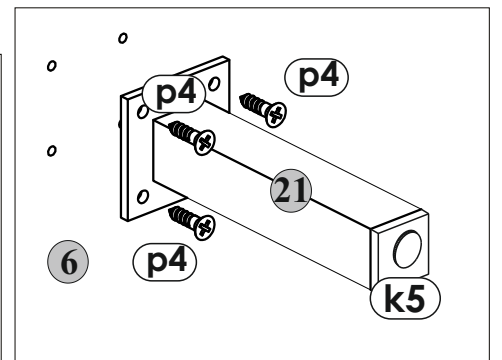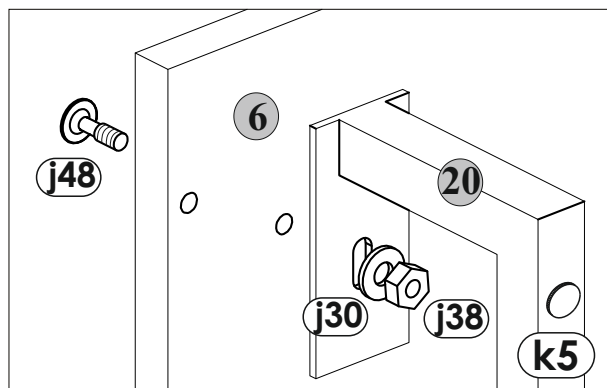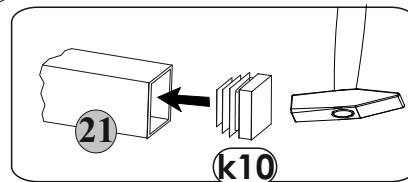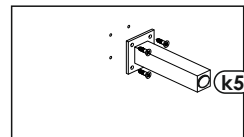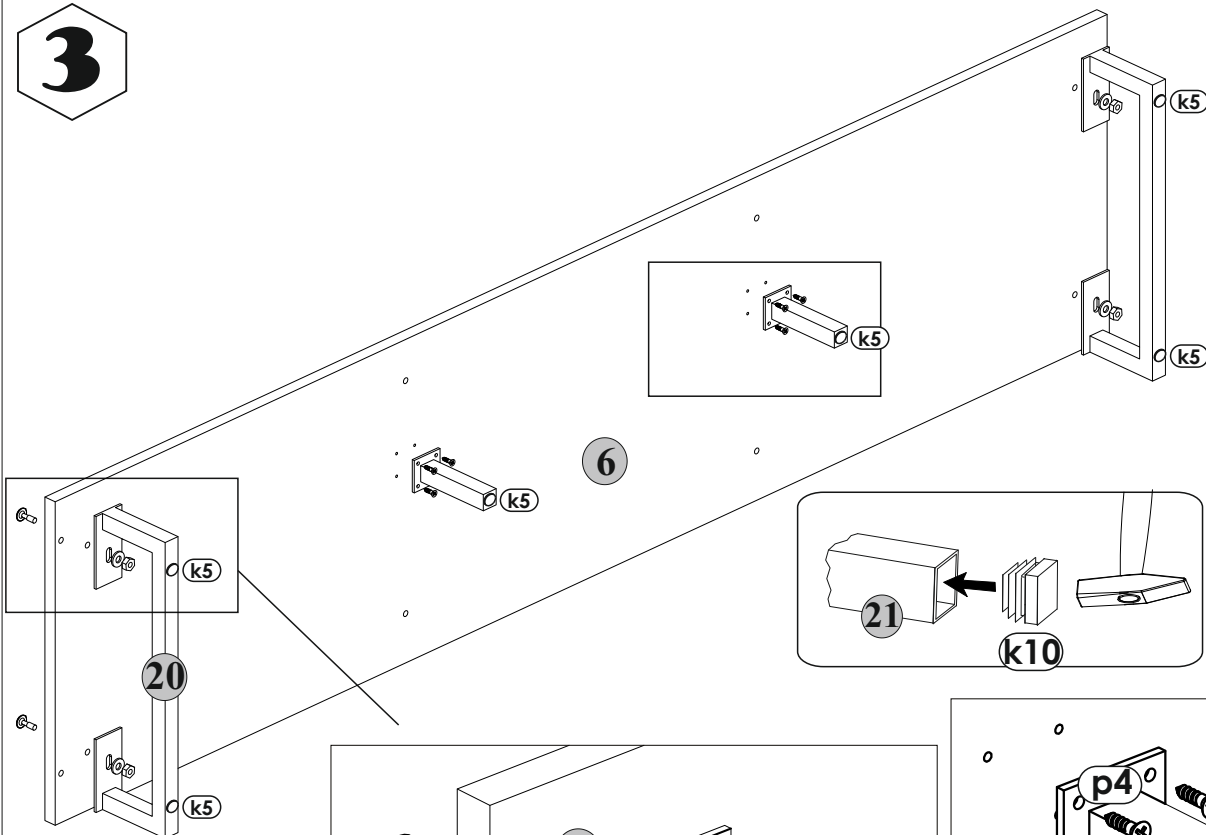


3

4

4x
b3



8x
e2
φ6.3x13 mm

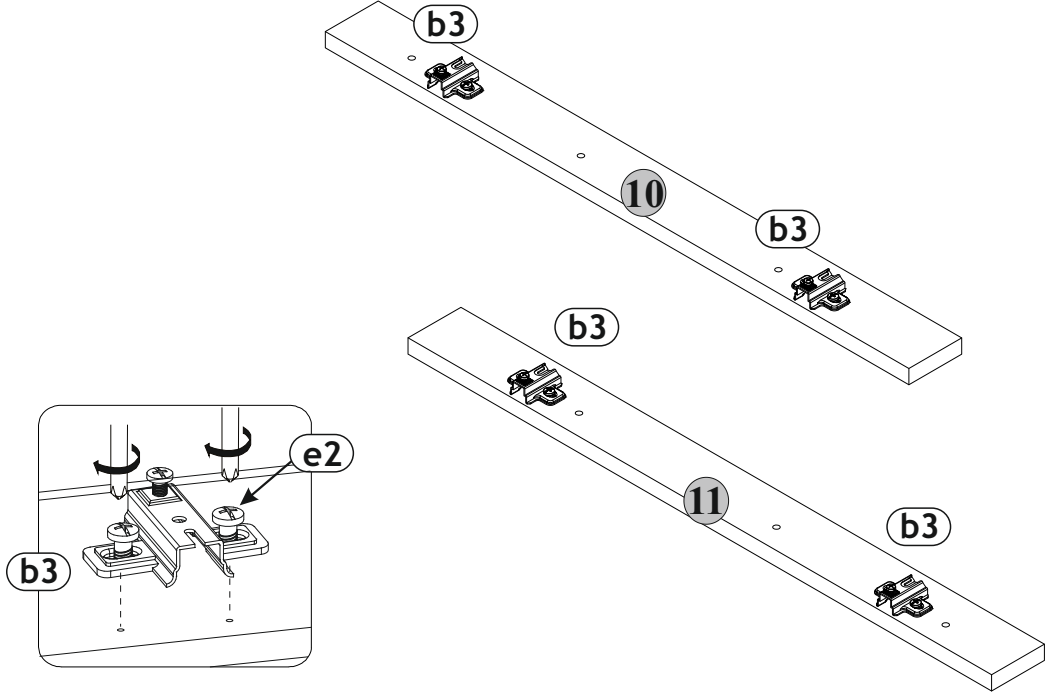


5

4x
a2

8x
p1
φ3.5x16 mm

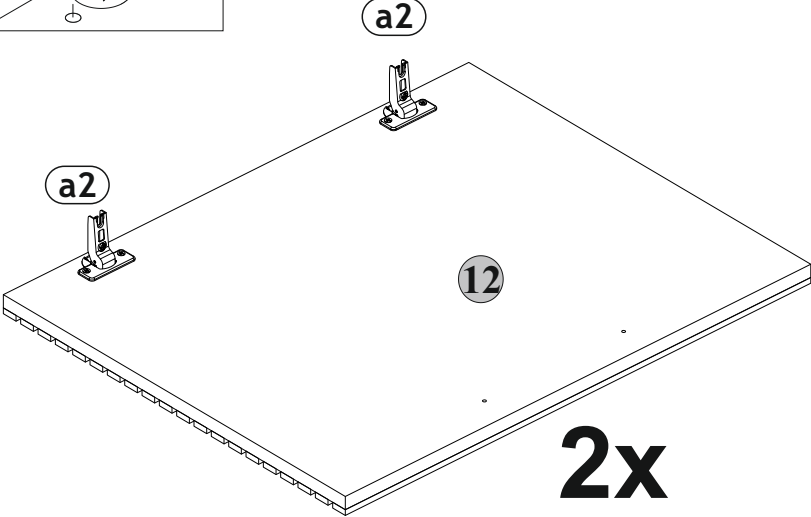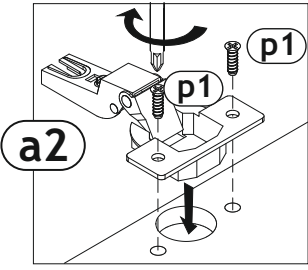


2x

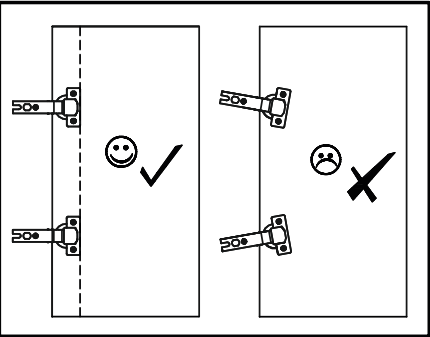


4

6


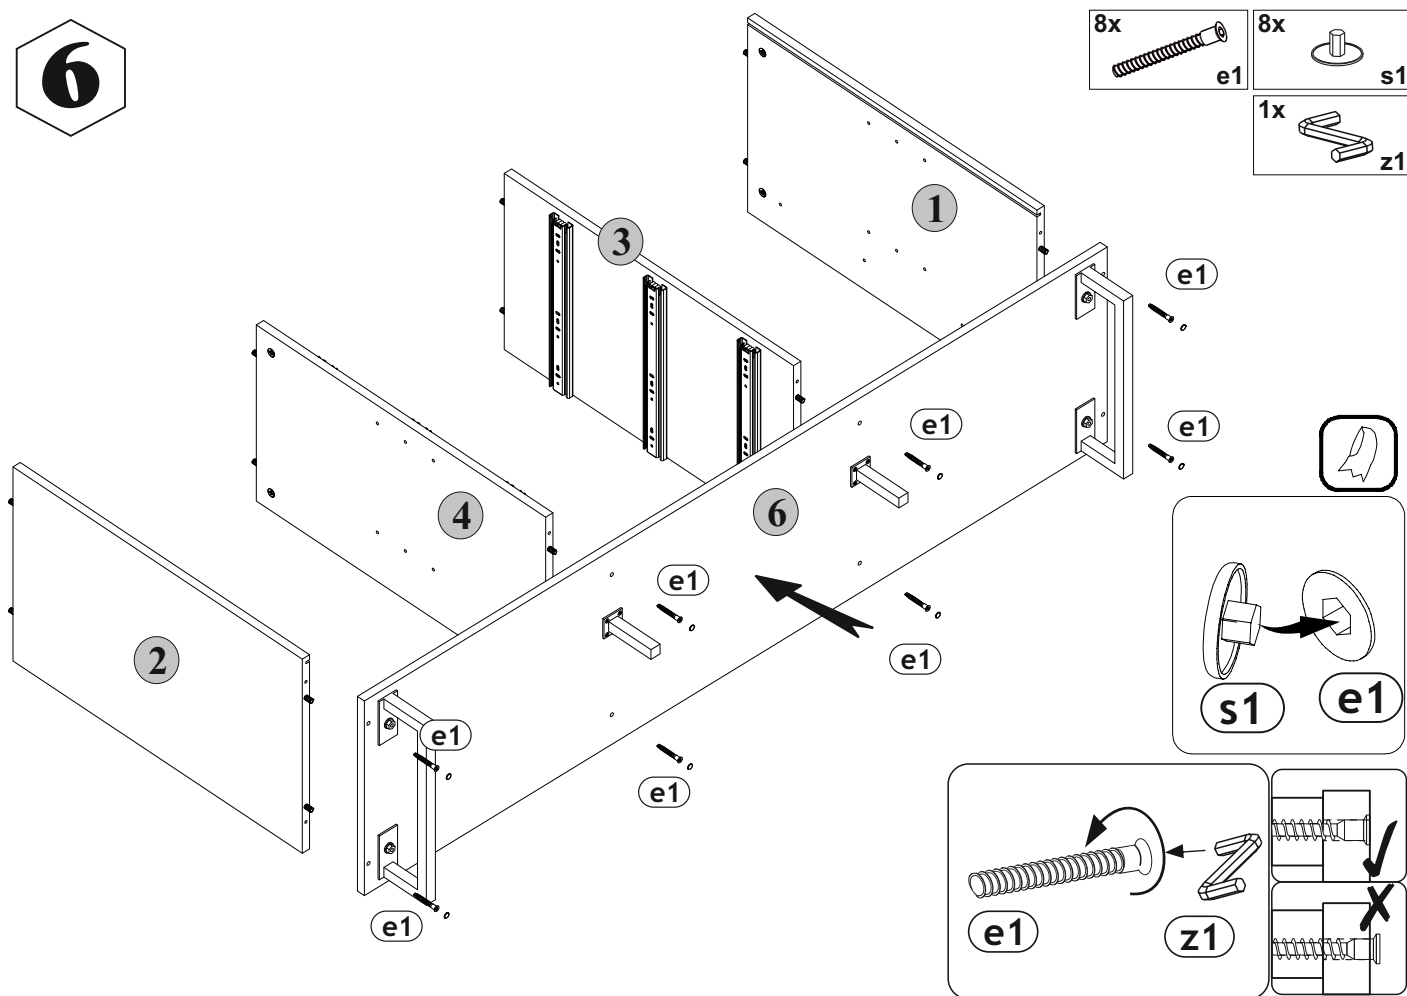


7


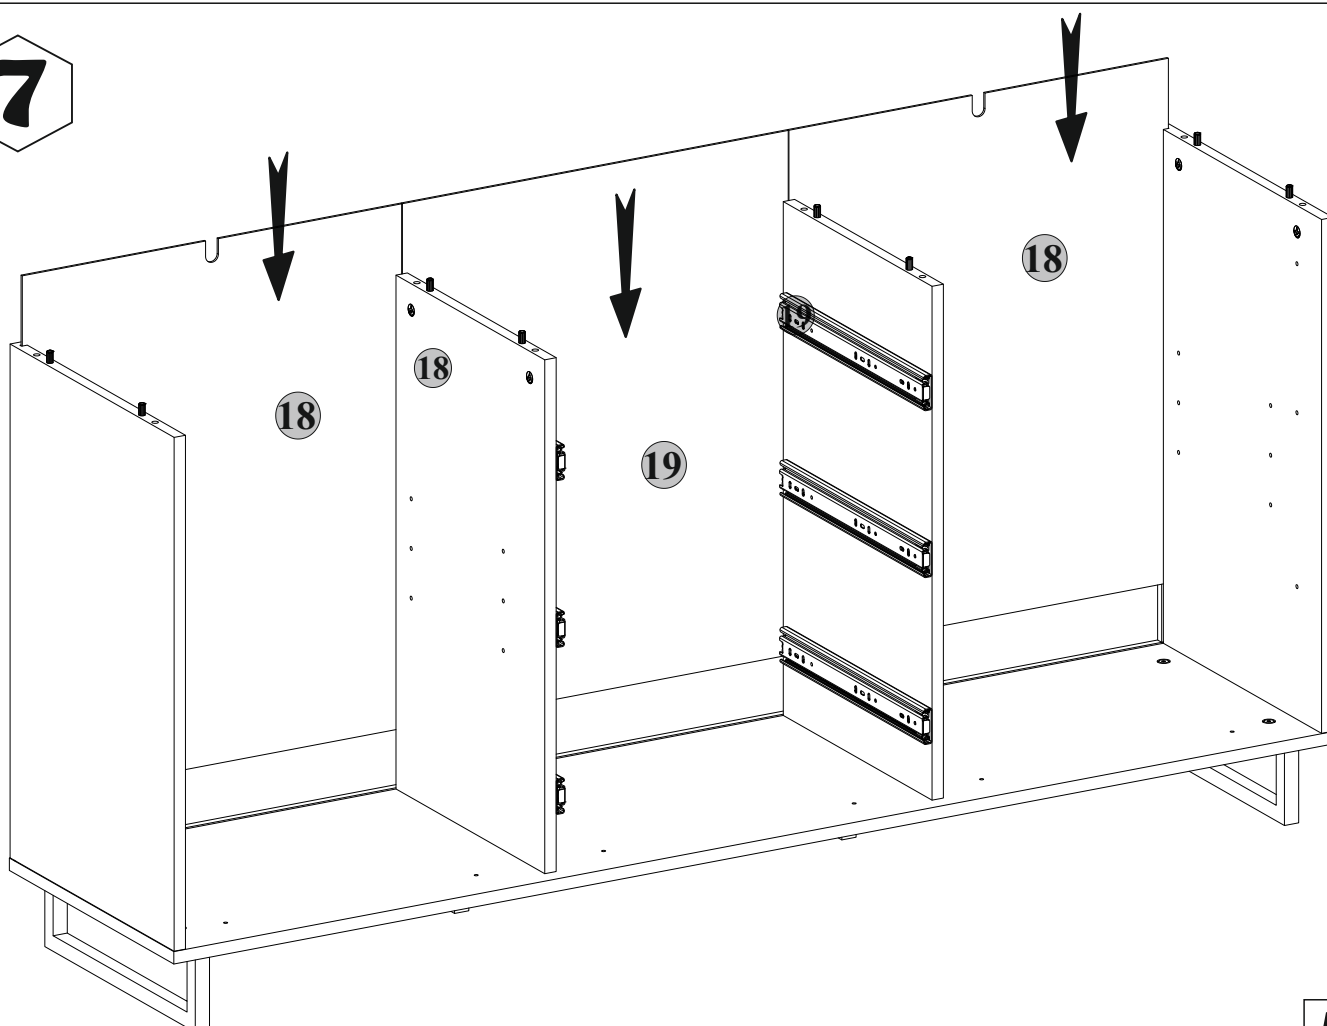


5





8

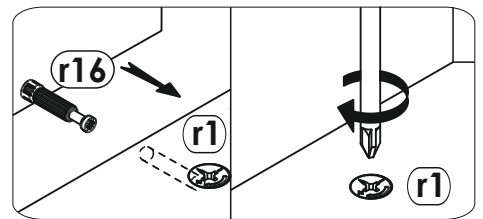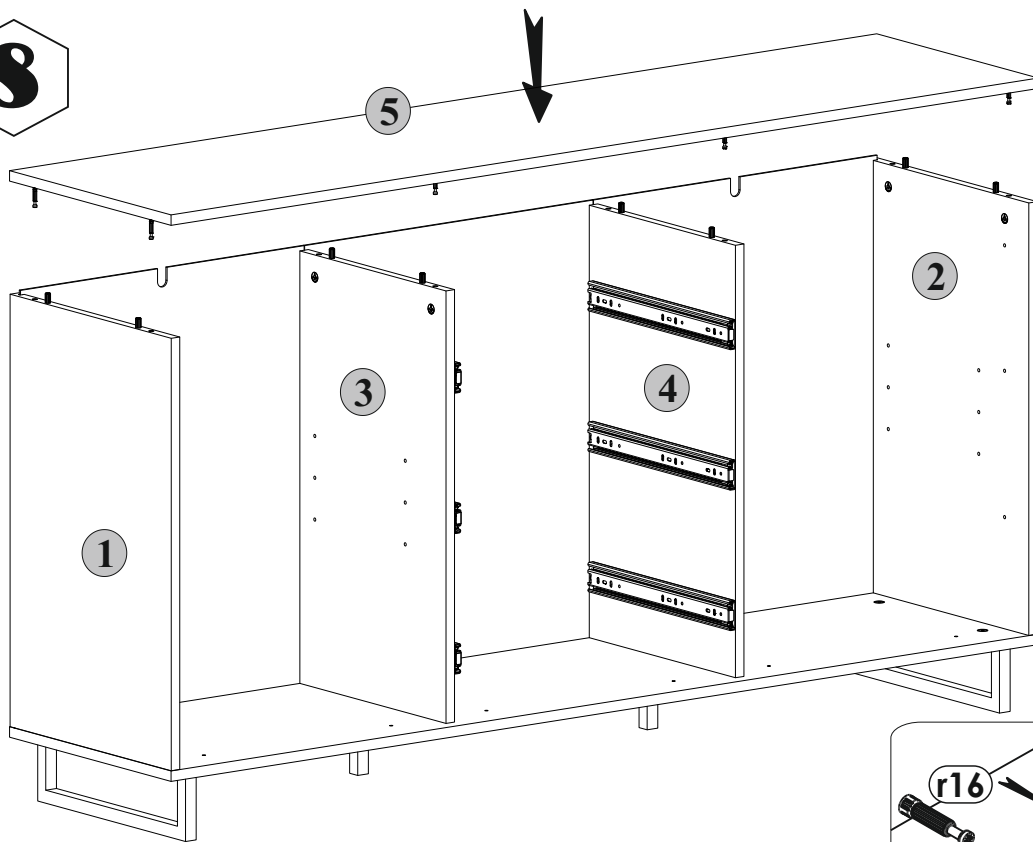

9

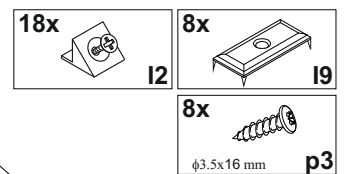
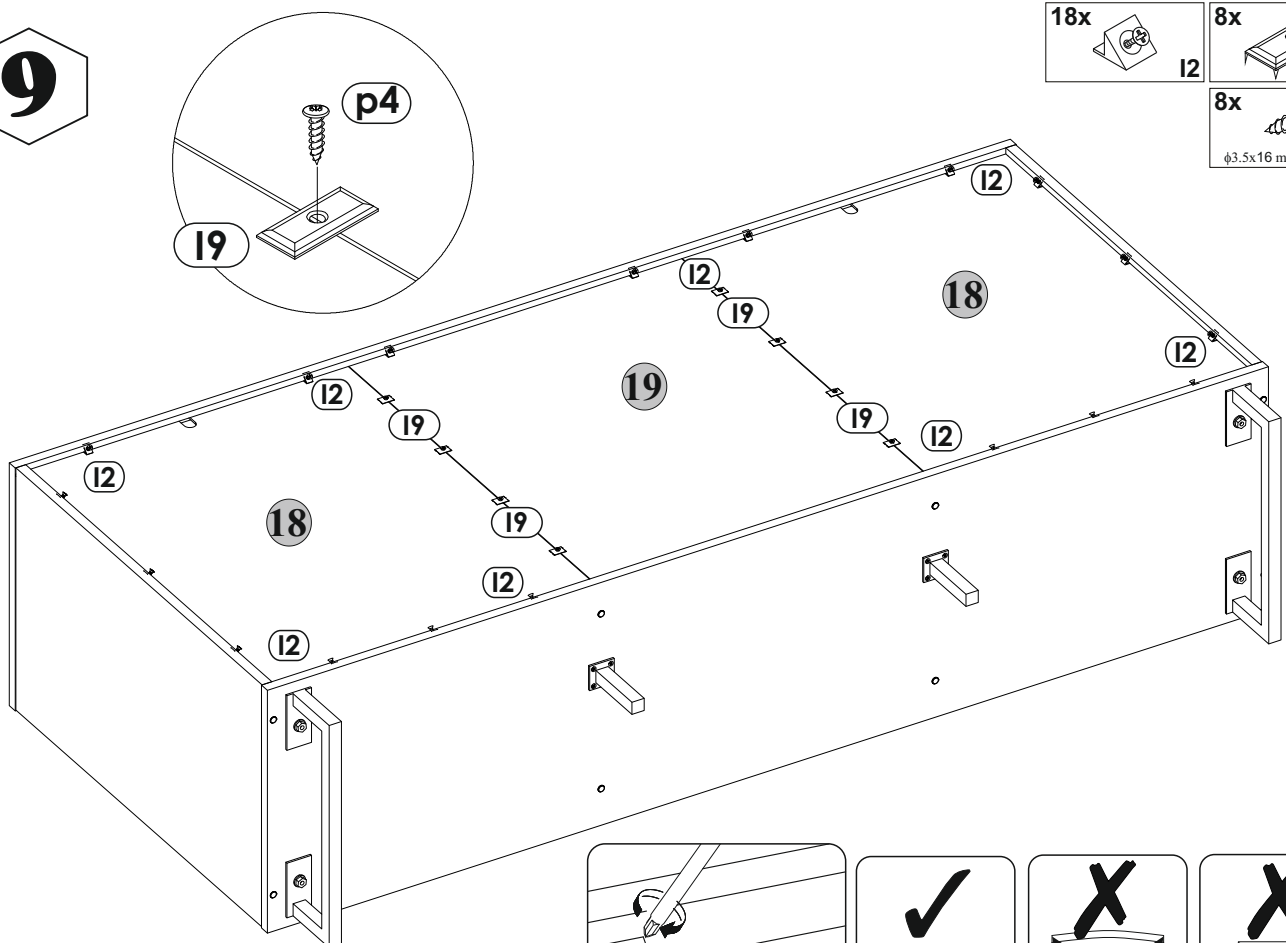


6

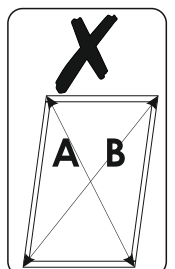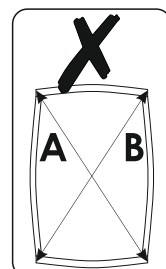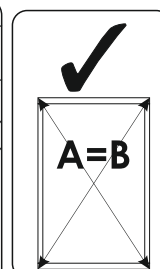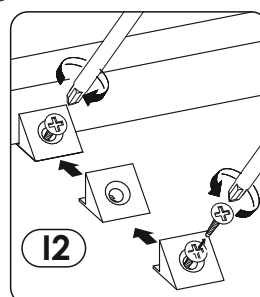



10

6x
e23
φ6x20 mm

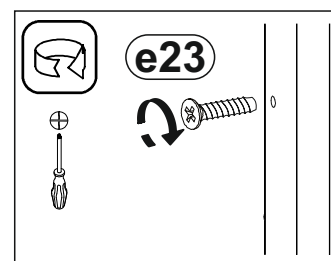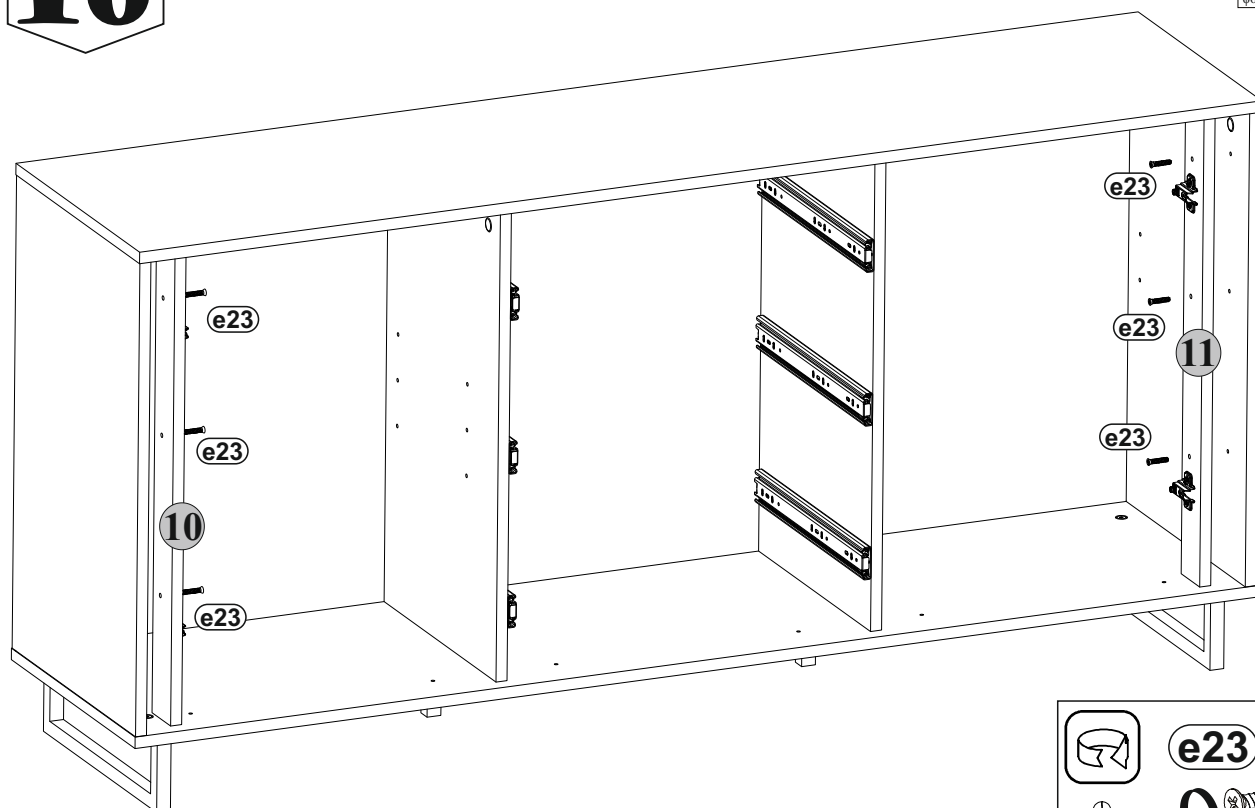



















11

12x
e23
φ6x20 mm

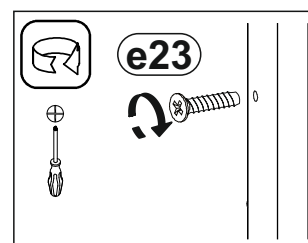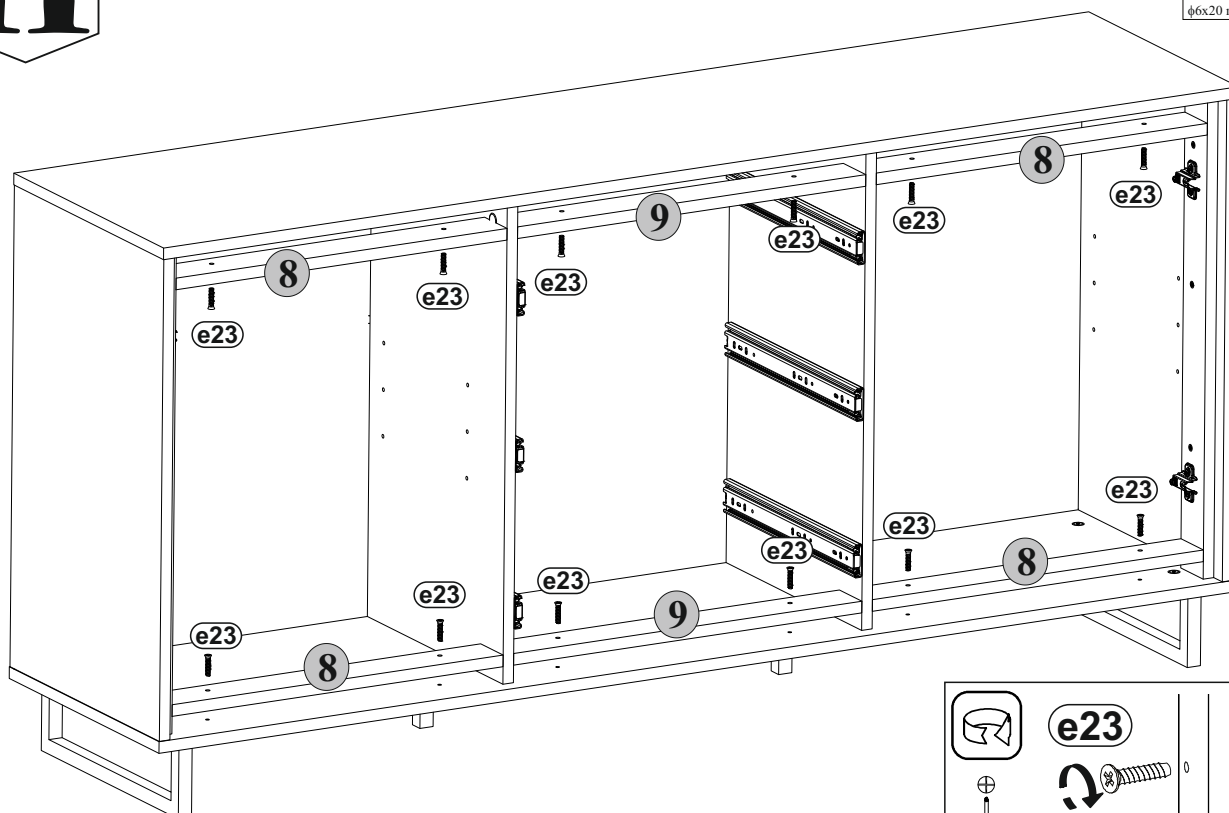


7













12

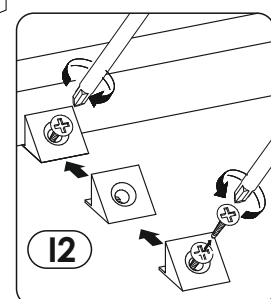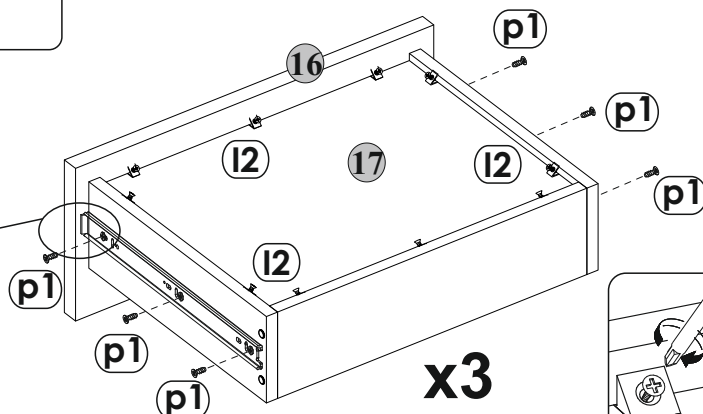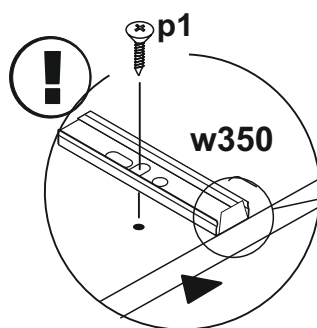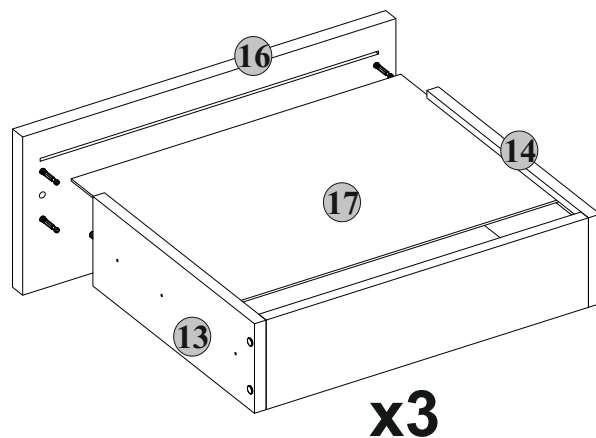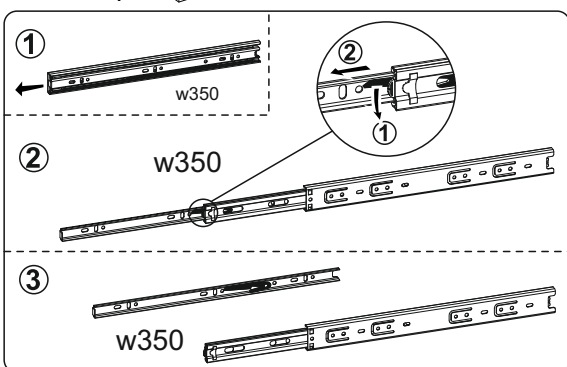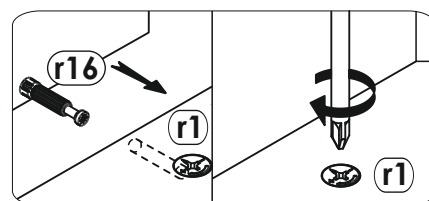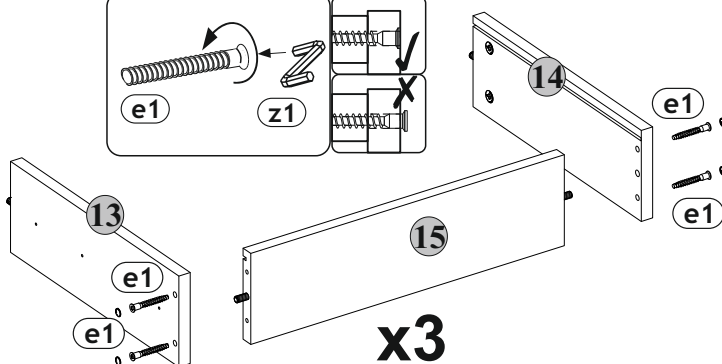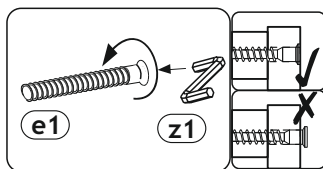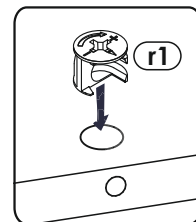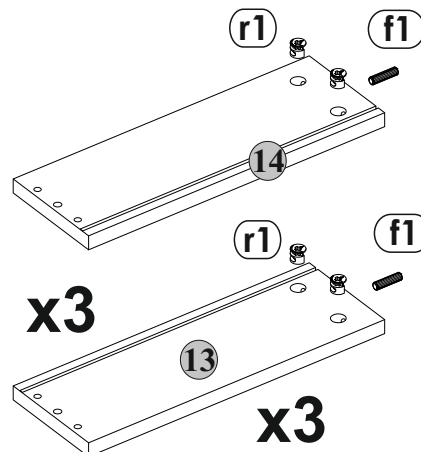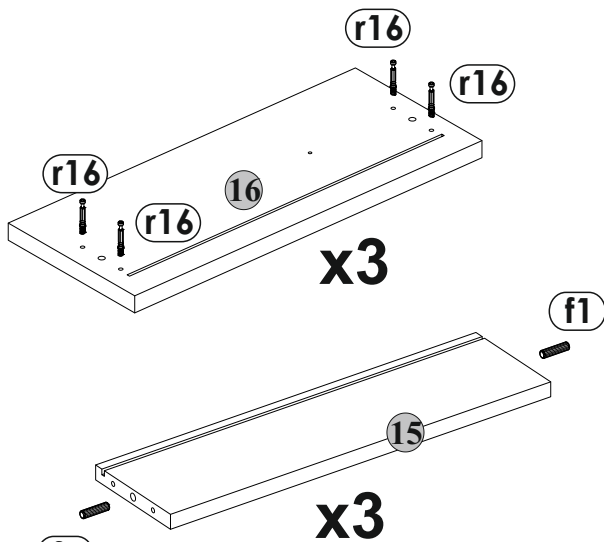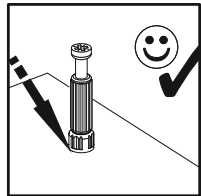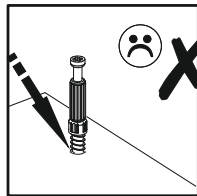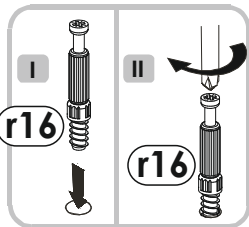

8

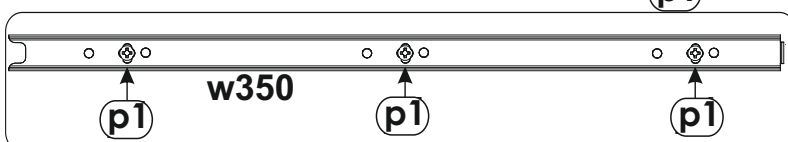

13

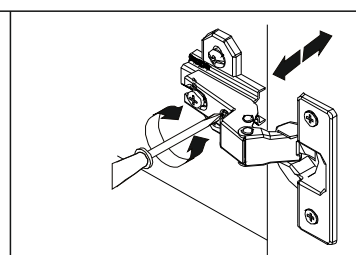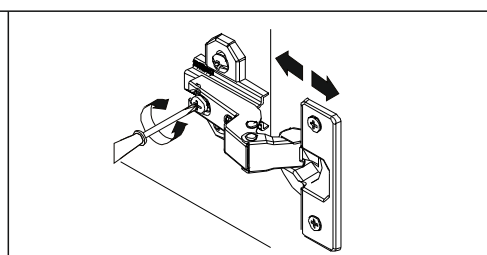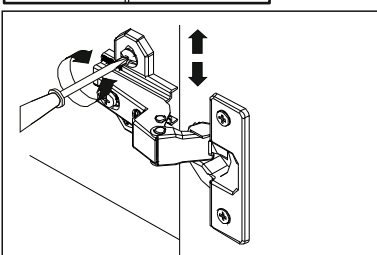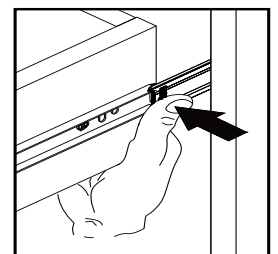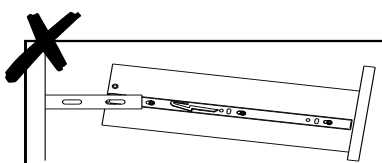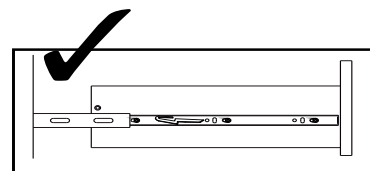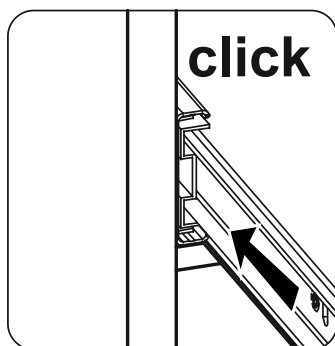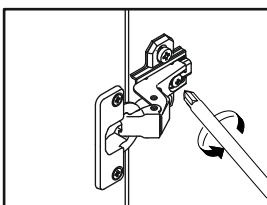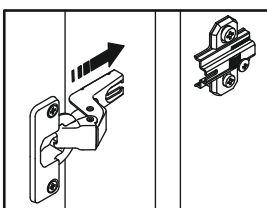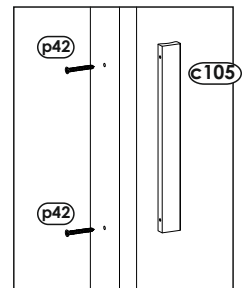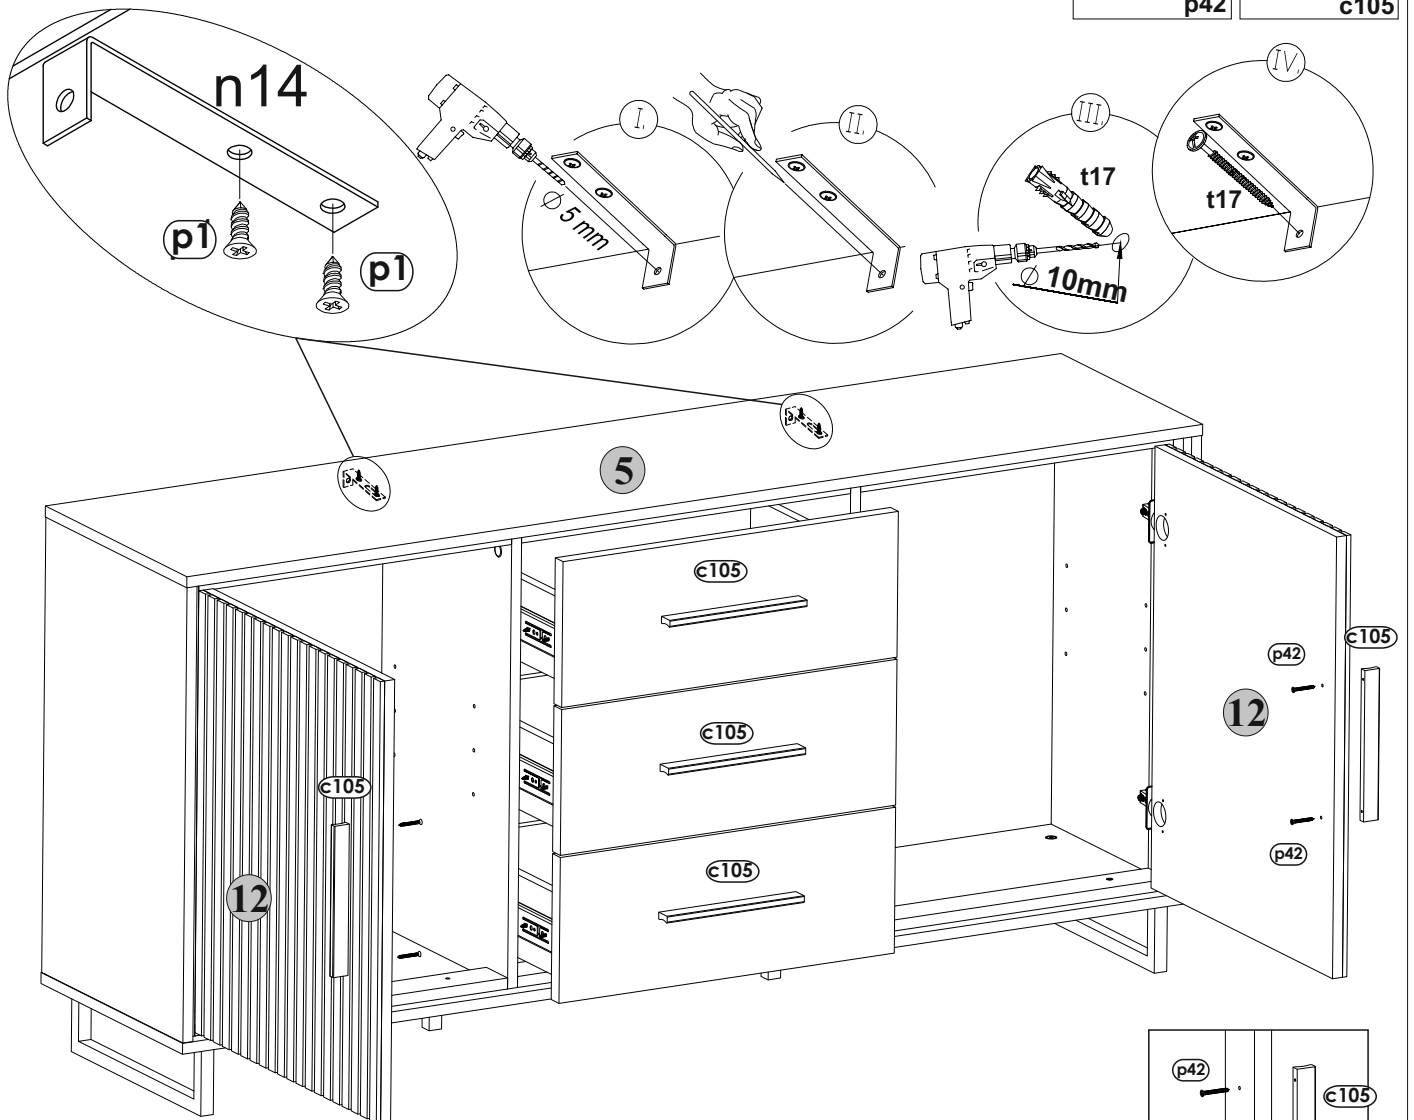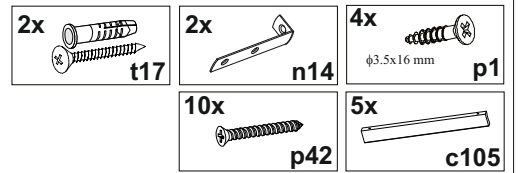

9

I4

