
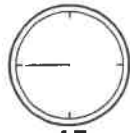


1317044




Assembly Instruction

zurbrüggen

1317044

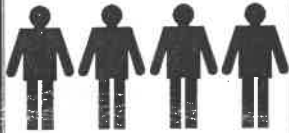


45
MNT

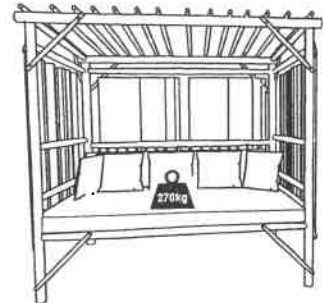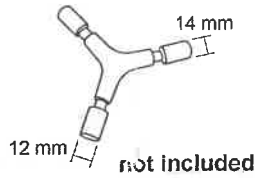


12 mm

not included





14 mm


not included

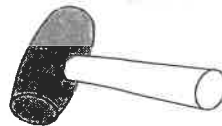

not included

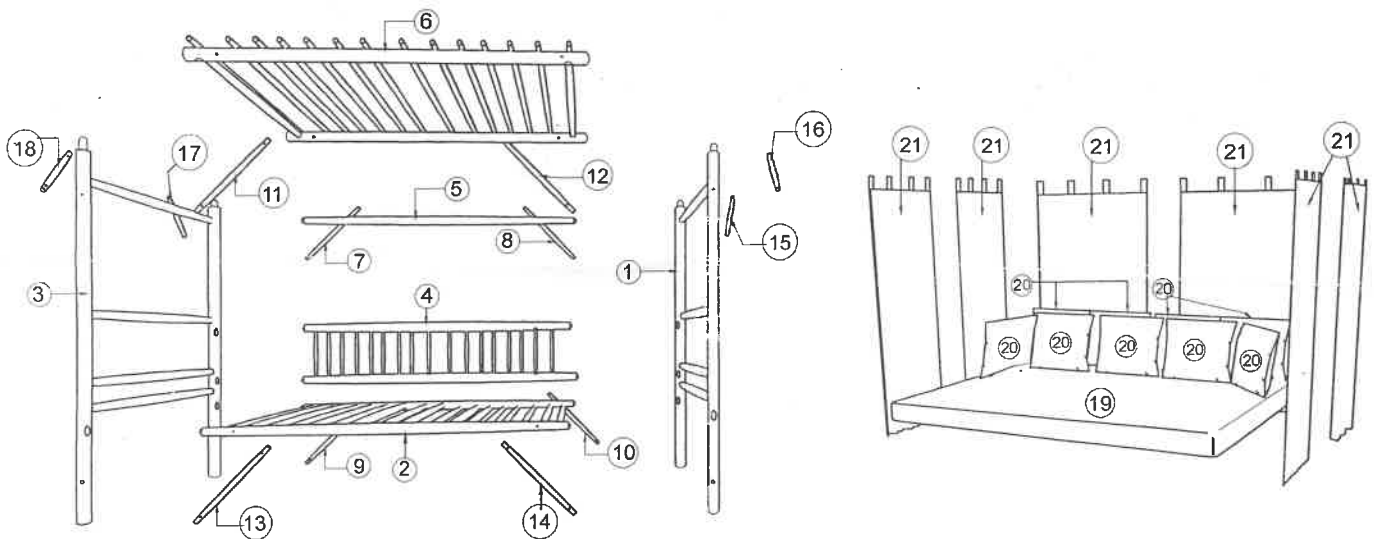

A x 10



B x 24



Nut M8


C x 24




washer M8

D x 48


1

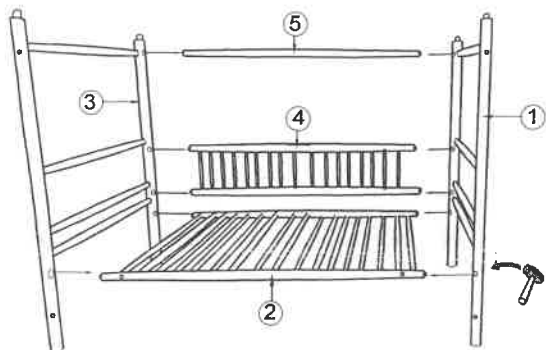


2

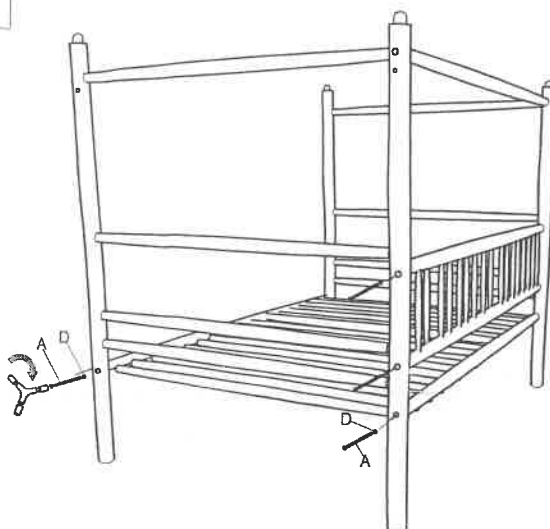


3

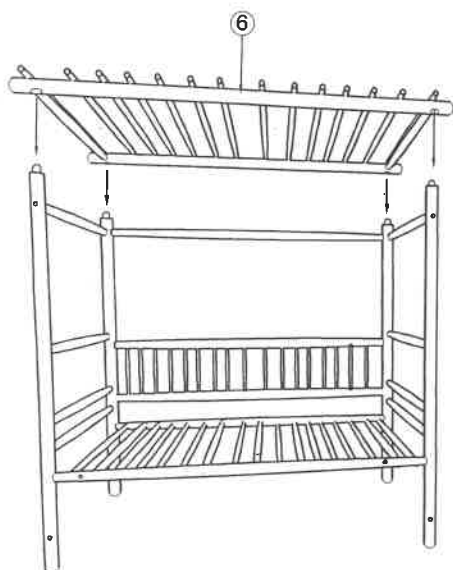


4

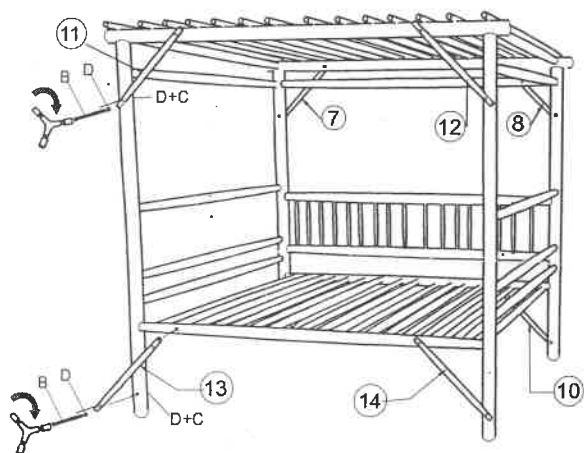


5

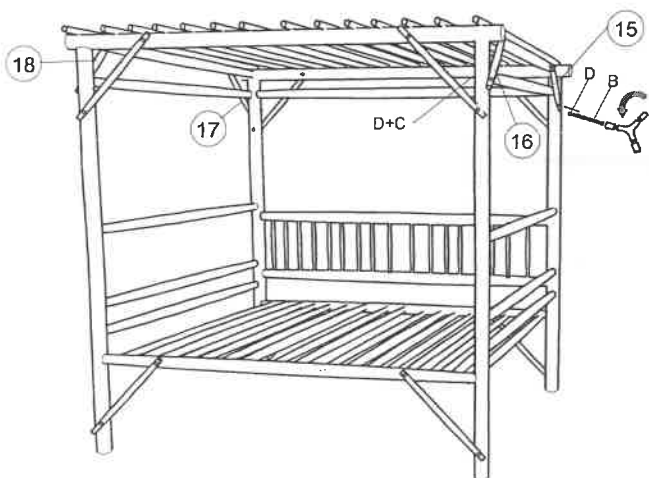


6

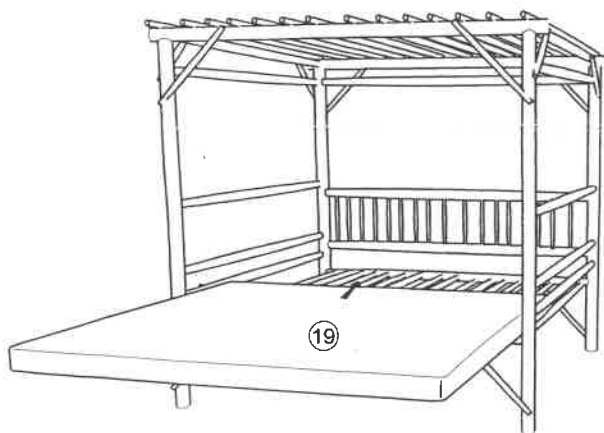

7

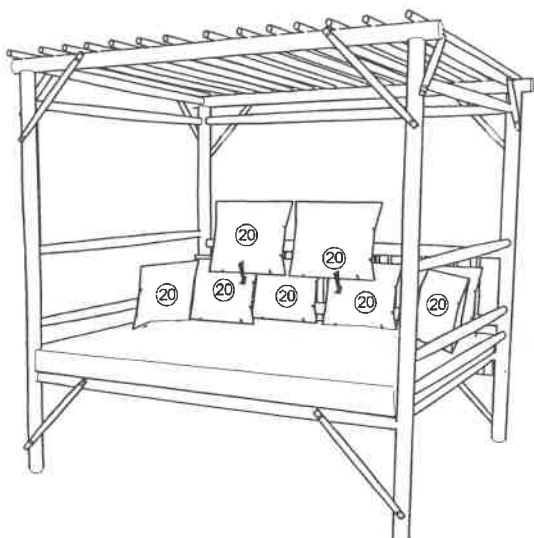

8

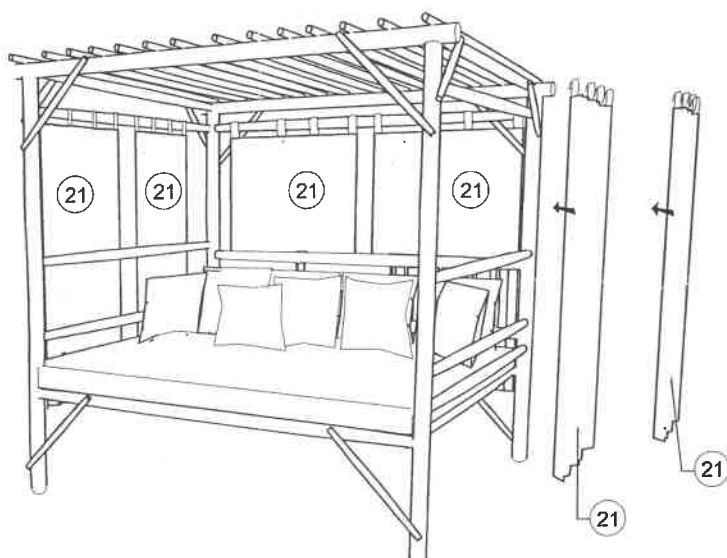

9

