

Giano/Gemini






Istruzioni montaggio piedi

 PM2251

 PM2254

 SPILLO H8


 PM2090

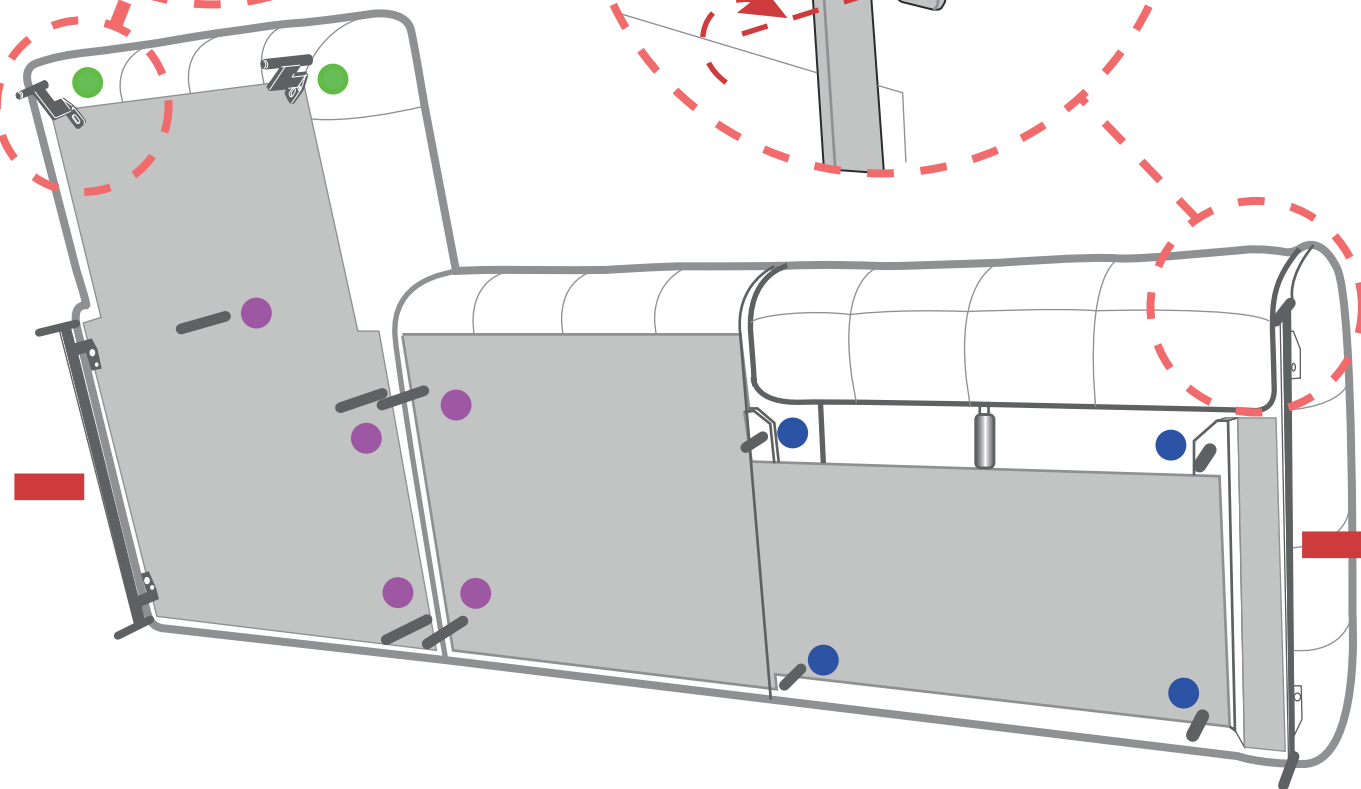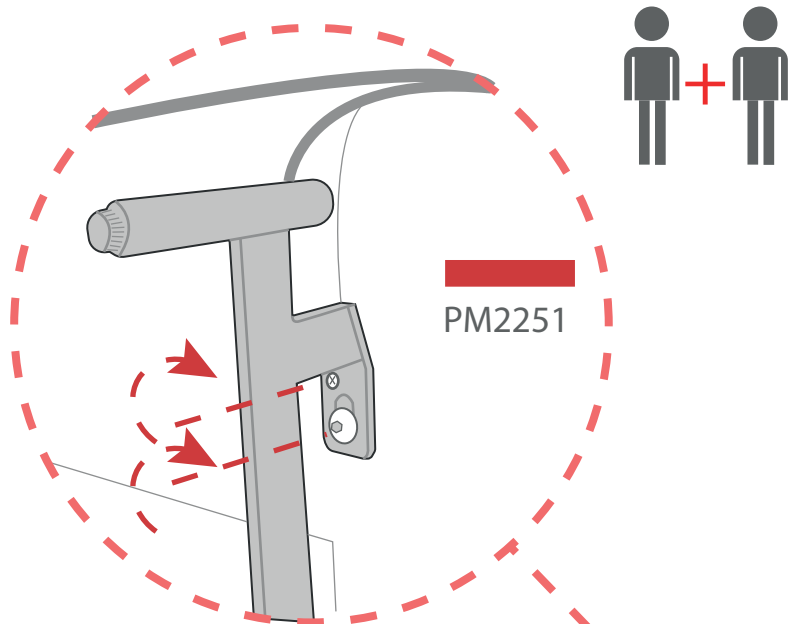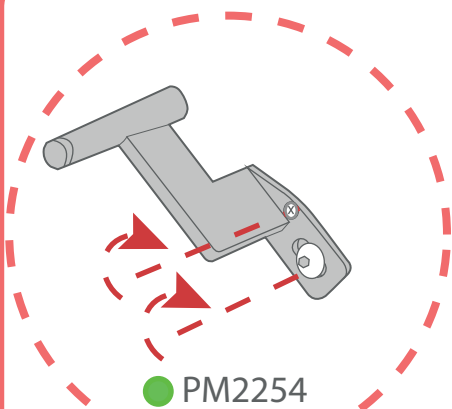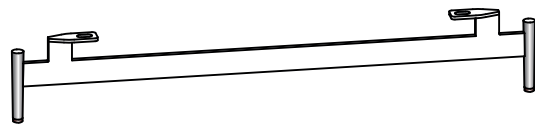


Giano/Gemini

Istruzioni montaggio piedi


200



240




300




B68/B69




D84/D85




C36/C36




110/120




D86/D87




173/174




114/124




D88/D89




612/613




251/252




AS0/AS1

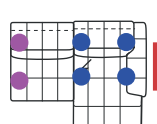


G06/G07




310/320




AS2/AS3




403/404




410/420




601/602



243



330



040



043/044

